



Citrus Juicer Exprimidor de cítricos



Register your product online at www.prodprotect.com/appllica, for a chance to WIN \$100,000! For US residents only

?
USA/Canada 1-800-231-9786
Mexico 01-800-714-2503

www.prodprotect.com/appllica

Accessories/Parts
(USA/Canada)
1-800-738-0245

Model
Modelo
○ CJ630

This product is for household use only.

SAVE THESE INSTRUCTIONS.

- Do not let cord hang over edge of the table or counter.
- Do not use outdoors.
- Injury.
- The use of accessories or attachments not recommended by the manufacturer may cause fire, electric shock or electrical or mechanical adjustment.
- An authorized service center for examination, repair or plug, or after the appliance malfunctions or is dropped or Do not operate appliance if it has a damaged cord or Avoid contact with moving parts.
- The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- If a long detachable power-supply cord or extension cord is used, or taking off parts and before cleaning.
- Unplug from the outlet when not in use, before putting on by or near children.
- Close supervision is necessary when any appliance is used cord, plug or base unit in water or other liquid.
- To protect against risk of electrical shock, do not immerse Read all instructions.

When using any electrical appliance, basic safety precautions should always be followed, including the following:

IMPORTANT SAFEGUARDS

Please Read and Save this Use and Care Book

 
POLARIZED PLUG (120V Models Only)
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRICAL CORD


- a) A short power-supply cord (or detachable power-supply cord) is to be tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,

- 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
- 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

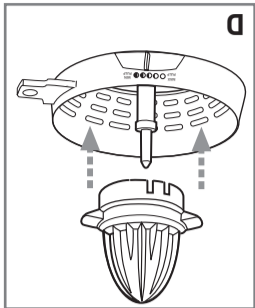


 4. Place the base stem through the cone until the cone rests on top of the strainer (D).

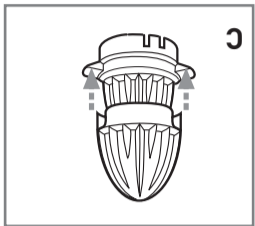


Important: If choosing the large self-reversing cone, place it on top of the small self-reversing cone. Place the notches of the large cone over the stirrers of the small cone and press to snap into place (C).

 Note: Small cone is recommended for small fruits such as lemons and large cone for larger fruits such as grapefruits.

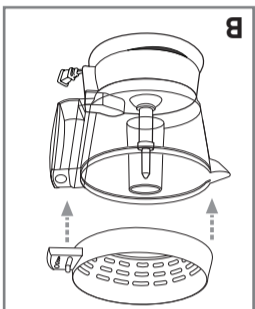

 2. Place the strainer on top of the container (B).

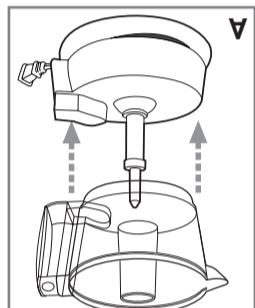

1. Place the base stem through the container until the container rests on the base (A).

ASSEMBLING YOUR JUICER

BLACK & DECKER is a trademark of The Black & Decker Corporation, Towson, Maryland, USA

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to the manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of the product.

For how long?

- Two years after the date of original purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Check our on-line service site at www.prodprotect.com/appllica, or call our toll-free number, 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

 
Made in People's Republic of China
Printed in People's Republic of China



Applica Consumer Products, Inc.

Copyright © 2009 Applica Consumer Products, Inc.

2009/3-10-31E/S



Printed on recycled paper.
Impreso en papel reciclado.

1. Unplug the unit.
2. Wrap the cord around the base of the unit.
3. Before reassembling your juicer, make sure all parts are dry (see ASSEMBLING YOUR JUICER section).
4. Place storage cover over the juicer to keep it dust free.

TO STORE

 
1. Always unplug the unit before cleaning or when not in use.
2. Remove the cover (first time use), cone and strainer from the container by lifting them straight up.
3. Rinse the cone and strainer with water immediately after each use.
4. Lift the container straight up.
5. Use hot, sudsy water to wash all removable parts (cover, cones, strainer and container) or place them in the dishwasher — top rack ONLY.
6. Use a bristle brush to remove fine pulp that may remain on the strainer.
7. Wipe the base with a damp cloth or sponge; do not immerse in water or place in the dishwasher.
8. Dry all parts before reassembling your juicer (see ASSEMBLING YOUR JUICER section).

TO CLEAN

This product contains no user serviceable parts. Refer service to qualified service personnel.


Care and Cleaning

11. To continue juicing, remove used fruit and repeat steps 6-10.
12. When done juicing, remove the fruit from the cone.
13. Important: The motor stops automatically when you remove the fruit from the cone.
14. To serve or pour the juice, remove the cone and strainer by lifting them straight up.
15. Lift the container straight up and pour the juice.

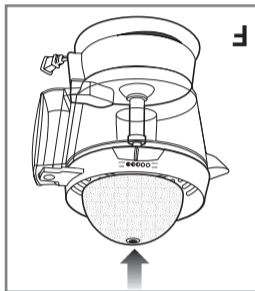


Important: The motor stops automatically when the pressure is completely released.

 8. Using firm-to-moderate pressure, press down on the fruit to start the juicing action (F).
9. Release pressure to stop the self-reversing cone from rotating.

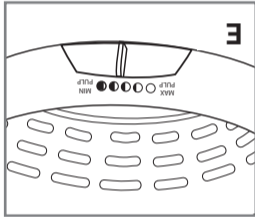

5. Adjust the pulp control to the desired amount of pulp in your juice (E).
6. Cut fruit in half (examples: orange, lime, lemon or grapefruit).
7. Place the cut-side of the fruit on top of the self-reversing cone.

 Product may vary slightly from what is illustrated.

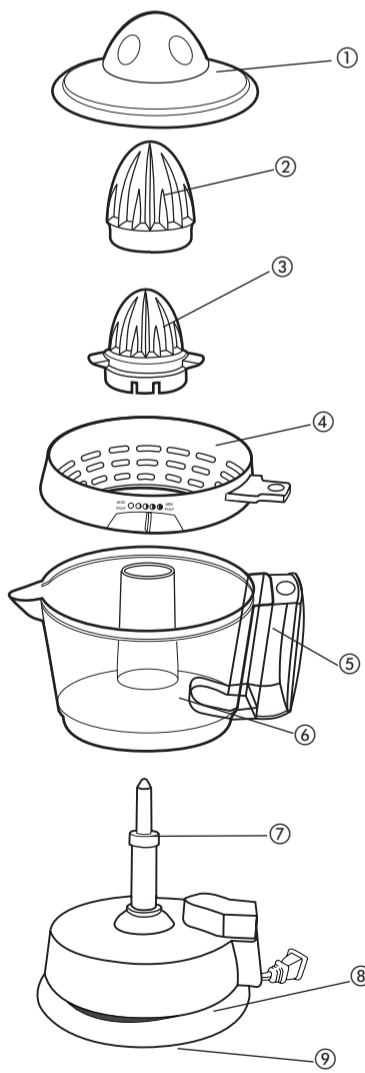

- † 1. Storage cover (Part # CJ630-01)
- † 2. Large self-reversing cone (Part # CJ630-02)
- † 3. Small self-reversing cone with stirrers (Part # CJ630-03)
- † 4. Strainer with adjustable pulp control (Part # CJ630-04)
5. Handle
- † 6. Clear-view juice container (1 liter / 34 oz) (Part # CJ630-05)
7. Base stem
8. Base
9. Built-in cord wrap

Note: † indicates consumer replaceable/removable parts

