



**Russell Hobbs™**  
*Culinary innovations since 1952*

USA/Canada 1-800-231-9786

Accessories/Parts 1-800-738-0245

Register your product at [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

## 8 CUP COFFEEMAKER

1. Cover
- † 2. Removable filter basket (Part # CM7000-01)
3. Sneak-A-Cup® feature
- † 4. Carafe with brew-thru lid (Part # CM7000-02)
5. “Keep Hot” carafe base
6. Detachable water tank (Part # CM7000-03)
7. Illuminated Power Button

**Note:** † indicates consumer replaceable/removable parts

**MODEL** ○ CM7000S

Please Read and Save this Use and Care Book.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, shock, and/or injury to persons including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

Product may vary slightly from what is illustrated.



- To disconnect, press the illuminated power button until the power light is OFF, then remove plug from wall outlet
- Do not use this appliance for other than intended use.
- Keep lid on the carafe when in use.
- Scalding may occur if the lid is removed during the brewing cycles.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads or other abrasive material.

## SAVE THESE INSTRUCTIONS

**This product is for household use only.**

### POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,

- 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
- 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
- 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power-supply cord is damaged, it should be replaced by qualified personnel.

## How to use

This product is for household use only.

### FIRST TIME USE

**Note:** This process ensures the product to be clean for use.

- Wash removable parts as instructed in CARE AND CLEANING.
- This product uses cone shaped filters only - size #4.
- Open cover and insert a clean paper filter into removable filter basket.
- Pour fresh cold water up to 8-cup mark into water reservoir. For your convenience, the water tank is detachable for easy fill. Plug cord into standard electrical outlet.
- Brew water through appliance following BREWING COFFEE instructions without coffee grounds.

- Discard water from carafe and the used paper filter.
- Coffeemaker is ready for use.

### BREWING COFFEE

1. Fill water reservoir with cold tap water using water markings on reservoir as a guide. Do not exceed maximum level.
  2. Place paper filter into filter basket. Add ground coffee (as per instructions on the coffee or we suggest 1 heaping tablespoon per cup). Place filter basket in place.
  3. Close cover.
  4. Place empty carafe on “Keep Hot” carafe base.
- Important:** Coffee may overflow if brew-thru lid is not properly aligned.
5. Press power button; indicator light illuminates and brewing begins.
  6. When coffee grounds are cool, carefully remove and discard used grounds and paper filter. Coffeemaker will keep brewed coffee hot for 2 hours and then automatically turn off.
  7. To turn off coffeemaker at any time press power button.

### SNEAK-A-CUP® FEATURE

Remove the carafe and brewing is paused. The carafe must be placed back on the “Keep Hot” carafe within 30 seconds to prevent overflow. Brewing begins again.

## Care and Cleaning

This product contains no user serviceable. Refer service to qualified service personnel.

### CLEANING

1. Make sure your coffeemaker is unplugged and cool.
2. Remove filter basket. Discard used paper filter and coffee grounds.
3. Wash filter basket and carafe in dishwasher (top-rack) or by hand in hot, soapy water.
4. Wipe outside of coffeemaker, control panel and “Keep Hot” carafe base with a soft, damp cloth.

**Note:** Do not use abrasive cleansers or scouring pads. Never immerse the coffeemaker in water.

5. To clean the inside of the cover, open the cover and leave in the open position; wipe with a damp cloth.

### CLEANING WITH VINEGAR

Mineral deposits left by hard water can clog your coffeemaker. Cleaning is recommended once a month.

1. Pour white vinegar into water reservoir up to 6-cup line on the water level window. Add water up to 8-cup line.

**Caution:** Be careful not to exceed the MAX level, to avoid water running out the overflow hole in the back of the coffeemaker.

2. Put a paper filter in the filter basket and close the cover. Set empty carafe on the “Keep Hot” carafe base.
3. Turn on coffeemaker and let half the water and vinegar mix brew into carafe (until water level goes down to approximately the 5-cup line on the water level window). Turn coffeemaker off and let it stand for at least 15 minutes to soften the deposits.
4. Turn on coffeemaker and brew remaining water and vinegar mix into carafe.
5. Turn off coffeemaker, empty carafe and discard filter.
6. Fill reservoir with fresh water to 8-cup line, replace empty carafe on the “Keep Hot” carafe base and then turn on coffeemaker for a complete brew cycle to flush out remaining water and vinegar mix. Repeat this step again to eliminate any remaining vinegar smell/taste.
7. Wash the filter basket and carafe as instructed for normal cleaning.

**WARNING**  
**RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN.**

The lightning symbol refers to “dangerous voltage”; the exclamation symbol refers to maintenance instructions. See below.

**Warning:** To reduce the risk of fire or electric shock, do not remove the cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to the manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

### Three-Year Limited Warranty (Applies only in the United States and Canada)

#### What does it cover?

- Any defect in material or workmanship provided; however, Applica’s liability will not exceed the purchase price of the product.

#### For how long?

- Three year(s) from the date of original purchase with proof of such purchase.

#### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

#### How do you get service?

- Save your receipt as proof of date of sale.
- Check our on-line service site at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call our toll-free number, 1-800-231-9786, for general warranty service.

- If you need parts or accessories, please call 1-800-738-0245.

#### What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

#### How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

Made and Printed in  
People’s Republic of China.

Fabricado e Impresso en la  
República Popular de China.



© 2012 Applica Consumer Products, Inc.

2011/11-17-51E/S