

# **FARBERWARE®**

## **CITRUS JUICER**



### **USE AND CARE INSTRUCTIONS**

#### **MODEL FCJ300P**



# IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.
2. To protect against risk of electrical shock, do not immerse cord, plug or base unit in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from the outlet when not in use, before putting on or taking off parts and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate appliance if it has a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return this appliance to an authorized service center for examination, repair or electrical/mechanical adjustments.
7. The use of accessories or attachments not recommended by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors. This product is for household use only.
9. Do not let cord hang over edge of the table or counter or touch hot surfaces.
10. Do not operate this appliance for more than 10 minutes at a time.


## SAVE THESE INSTRUCTIONS

**FOR HOUSEHOLD USE ONLY**

# YOUR FARBERWARE CITRUS JUICER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

1. Cover
2. Top Cone
3. Bottom Cone
4. Strainer
5. Container
6. Handle
7. Shaft
8. Stand

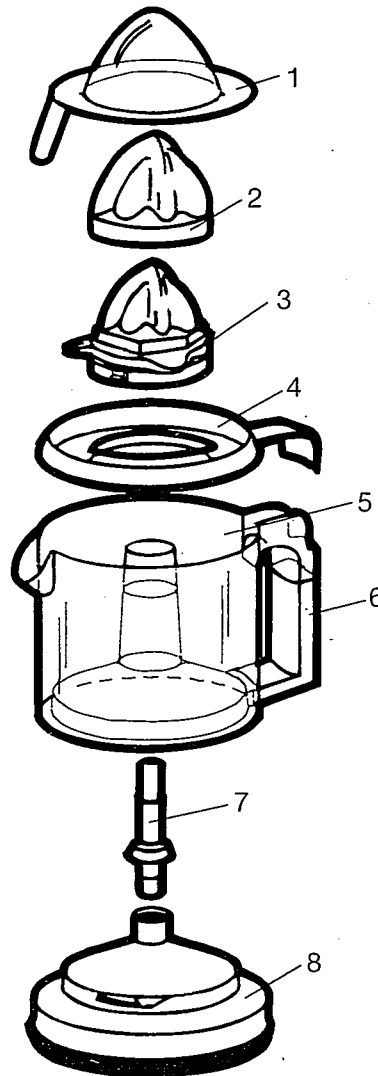

This appliance has a **polarized plug** (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table where it can be pulled on by children or tripped over unintentionally.

# OPERATING INSTRUCTIONS

## BEFORE USING

1. Carefully unpack juicer.
2. Wash container, strainer, cones and cover in warm, soapy water, rinse well and dry thoroughly. **Container must be dry before mounting on the stand.**
3. Wipe stand with a soft, clean cloth or sponge to remove small particles collected during packing and handling.

## TO USE

1. Assemble the juicer as illustrated in this manual:
  - Fit container on the stand; hold it by the handle and insert the shaft on the stand into the opening in the middle of the container. Gently turn the container to the left and guide it around the stand until it falls into place. Turn the container to the left just a bit more until it makes a slight rattling sound and locks into place (**never force it leftward beyond this point**).
  - Fit the strainer over the top of the container.
  - Fit the bottom cone into the strainer; place the bottom of the cone over the center of the strainer and gently push down until it snaps into place.  
**NOTE:** There are two different-size cones which are designed for extracting juice from different-size citrus fruits.
  - If you are squeezing juice from grapefruits or very large oranges, you can fit the top cone over the bottom cone, and use this large cone instead.
2. Plug unit into electrical outlet.
3. To squeeze juice from the citrus fruit, cut fruit in half.
4. Cup half of the fruit in the palm of your hand and place it over the cone.
5. Apply slight, downward pressure and gently squeeze the fruit as you guide it over and around the cone.
6. Adjust fruit pulp contents; the amount of fruit pulp in the juice can be continuously adjusted by turning the container to the appropriate position. *By turning the container to the left, the fruit pulp content is lower; by turning the container to the right, the fruit pulp content is higher.*
7. When you finish squeezing juice from fruit, remove strainer and cones from inside the container.
8. To serve juice, hold container by the handle, turn it to the right to release and remove it from the stand. The container can now be used as a pitcher.

# CARE AND MAINTENANCE

## USER MAINTENANCE INFORMATION

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed, or return it to the manufacturer. See warranty for details.

***Always unplug the juicer from the electrical outlet before cleaning.***

## CLEANING INSTRUCTIONS

This appliance should be cleaned regularly. Unplug the unit from the wall outlet. ***NEVER immerse the unit or cord in water.***

Clean the juicer after each use. Wash container, strainer, cones and cover with a soft cloth or sponge in warm, soapy water. Rinse well and dry thoroughly.

***Do not use scrub pads.***

Stand can be wiped clean with a soft, slightly damp cloth or sponge. ***Do not allow water or any other liquid to get into the stand.***

**CAUTION: DO NOT use harsh or toxic cleansers or chemicals to clean any part, and NEVER use any type of flammable fluid such as alcohol, thinner, acetone, etc.**

## OTHER SUGGESTIONS FOR USE & CARE

- Be careful not to place any part near a stove or open fire.
- Use the container only for its intended purpose. Do not pour hot liquids into the container.
- Do not allow food to remain in the container or on other parts. Keep the juicer clean.
- Never leave the juicer plugged in if not used periodically; unplug it immediately after using.

## STORING INSTRUCTIONS

Unplug the unit from the wall outlet and clean all parts. Be sure all parts are dry before storing. Store appliance in its box or in a clean, dry place. Never store the unit if any part is still wet or if it is plugged in. Never wrap cord around the appliance; keep it loosely coiled.

# FARBERWARE®

## ONE-YEAR LIMITED WARRANTY

This FARBERWARE® product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at Salton, Inc.'s option) when the product is returned. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

### Important Notice

If any parts are missing or defective, return this product to the place of purchase or contact our Consumer Service Department for assistance.

### Consumer Service

This FARBERWARE® product is distributed by:

Salton, Inc.

708 SOUTH MISSOURI ST.

MACON, MO 63552

E-mail: farberware-electric@saltonusa.com

Any questions or comments can be directed to Salton, Inc.'s address or call the Consumer Service Department:

**1-800-233-9054, Monday - Friday, 9 a.m. - 5 p.m. CST**

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

Printed in China