

FARBERWARE®

5 CUP COFFEEMAKER



USE AND CARE INSTRUCTIONS

MODEL FCM050

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or machine in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Turn Control Switch to "OFF" and unplug from outlet when Coffeemaker is not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by FARBERWARE® may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to "OFF," then remove plug from wall outlet.
12. Do not use appliance for other than intended household use.

13. Carafe Use and Care:

Breakage may occur if the following instructions are not followed:

- a. This Carafe is designed for use with your Coffeemaker and therefore must ***never*** be used on a rangetop or in any oven, ***including a microwave.***
- b. Do not set a hot Carafe on a wet or cold surface.
- c. Do not use a cracked Carafe or a Carafe having a loose or weakened handle.
- d. Do not clean the Carafe with cleansers, steel wool pads, or other abrasive materials.
- e. Discard Carafe immediately if it is ever boiled dry.
- f. Avoid sharp blows, scratches or rough handling.

14. **WARNING: To reduce the risk of fire or electric shock, do not remove any service covers.** No user serviceable parts inside. Repair should be performed by authorized personnel only.

**THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**


SHORT CORD INSTRUCTIONS

1. A short detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
3. If a longer detachable power-supply or extension cord is used, (1) the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounding type, the extension cord should be a grounding type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other): To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do **not** attempt to modify the plug in any way.

YOUR FARBERWARE® COFFEEMAKER

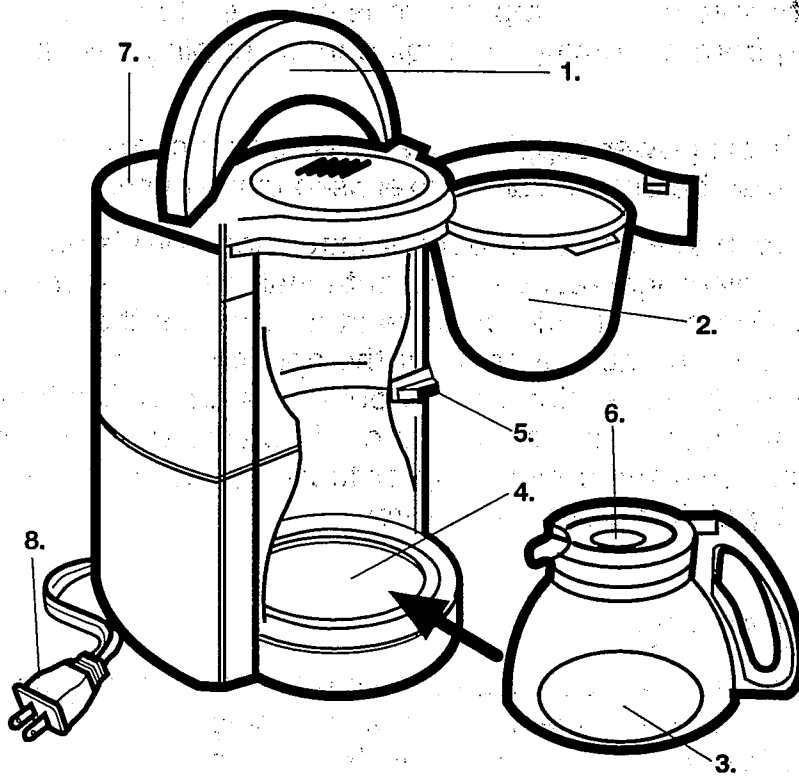

- | | |
|----------------------------|--------------------------|
| 1. Water Reservoir Lid | 5. Lighted ON/OFF Switch |
| 2. Swing-out Filter Basket | 6. Carafe Lid |
| 3. Carafe | 7. Water Reservoir |
| 4. Hot Plate | 8. Power Cord |

HOW TO USE YOUR FARBERWARE® 5 CUP COFFEEMAKER

BEFORE BREWING COFFEE FOR THE FIRST TIME

1. After unpacking from carton, the inside of your Coffeemaker and carafe must be cleaned.
2. Brew 5 cups of fresh water only. Follow the instructions under BREWING COFFEE Section but do not add coffee grounds to the paper filter.
3. When all the water has brewed into the carafe, turn the Coffeemaker off.
4. Wait 10 minutes, discard the water from the carafe, then repeat steps 2 and 3.
5. Wash and dry the filter basket, carafe and carafe lid.

BREWING COFFEE

1. Remove the carafe lid. Fill the carafe with cold water to the level for the desired number of cups. Open the water reservoir lid, and pour the water from the carafe into the water reservoir. Close the water reservoir lid.
2. Swing out the coffee filter basket and place a #2 paper coffee filter in it.
3. Put coffee grounds in the filter, using one level tablespoon of drip grind coffee for each cup of brewed coffee. (See Figure A)
4. Be sure the filter basket is pushed all the way into the unit.
5. Place the carafe on the hot plate, making sure the carafe lid is on the carafe.
6. Flip the ON/OFF switch to the right to turn the Coffeemaker on.
7. Coffee will begin flowing into the carafe.

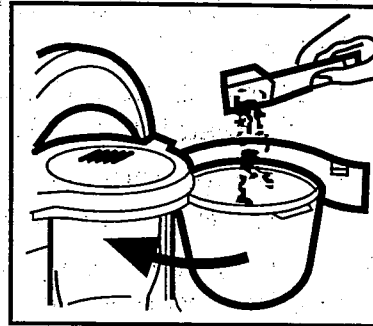


FIGURE A

Note: The amount of coffee in the carafe may be slightly less than the amount of water placed in the water reservoir, since some of the water is absorbed by the coffee grounds.

8. To serve coffee, remove the carafe from the hot plate. Always keep the carafe lid on the carafe when pouring.
9. To keep the coffee hot, place the carafe back on the hot plate when not serving.

DRIP STOP FEATURE

This FARBERWARE® Coffeemaker has an automatic drip stop feature. During the brewing cycle, the carafe can be removed to pour a cup of coffee from the carafe.

IMPORTANT: The carafe must be replaced under the brew basket in less than a minute to prevent the brew basket from overflowing.

CARE OF YOUR FARBERWARE® COFFEEMAKER

CARING FOR YOUR CARAFE

A damaged carafe may result in possible burns from hot liquid. To avoid breaking a carafe:

1. Do not allow all liquid to evaporate from carafe while on the hot plate. Do not heat carafe when empty. If this happens, discard carafe.
2. Discard carafe if damaged in any manner. A chip or crack could result in breakage.
3. Never use abrasive scouring pads or cleansers as they will scratch and weaken the glass.
4. Do not place the carafe on or near a hot gas or electric burner, in a heated oven, or in a microwave.
5. Avoid rough handling and sharp blows.

CLEANING AFTER BREWING COFFEE

Note: Do not place anything other than water or the cleaning solution specified in this book into the water reservoir.

1. To clean your Coffeemaker after brewing coffee, be sure the Coffeemaker is turned "OFF" and is cool. Discard the paper filter.
2. Wipe Coffeemaker with soft, damp cloth and dry. Do not use abrasive soaps or scouring pads.
3. Hand wash carafe and lid in hot, sudsy water.
DO NOT PLACE IN DISHWASHER.

MINERAL DEPOSITS AND DESCALING

Mineral deposits left by water can clog your coffeemaker. It is necessary to regularly descale your coffeemaker to flush out these deposits.

Clean your coffeemaker about every 1 - 3 months. Frequency of descaling will be affected by water hardness. If you live in a hard water area, you may have to descale the coffeemaker more frequently. Excessive steaming or a prolonged brewing cycle are signs that descaling is needed.

During descaling, more steaming occurs than when brewing coffee.

TO DESCALE YOUR COFFEEMAKER

1. Pour white vinegar up to the half carafe level mark on the carafe. Add cold water up to the top level.
2. Pour this cleaning solution into the water reservoir.
Place the carafe on the hot plate, making sure the carafe lid is on securely.
3. Swing out the filter basket and place a paper filter into it.
Put the filter basket back in the coffeemaker.
4. Turn the coffeemaker ON.
5. Let half of the cleaning solution brew into the carafe, then turn the coffeemaker OFF.
6. Let the coffeemaker cool for 15 minutes to soften the mineral deposits.
7. Pour the liquid that brewed into the carafe back into the water reservoir.
8. Turn the coffeemaker "ON" and let all the cleaning solution brew into the carafe.
9. Turn the coffeemaker "OFF" and discard the cleaning solution and soiled paper filter.
10. Fill the coffeemaker with fresh water, follow the steps in the BEFORE BREWING COFFEE Section to flush out the remaining cleaning solution.
11. Handwash carafe and lid with hot, sudsy water.
DO NOT PLACE IN DISHWASHER.

FARBERWARE®

ONE-YEAR LIMITED WARRANTY

This FARBERWARE® product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at Salton, Inc.'s option) when the product is returned. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase or contact our Consumer Service Department for assistance.

Consumer Service

This FARBERWARE® product is distributed by:

Salton, Inc.

708 SOUTH MISSOURI ST.

MACON, MO 63552

E-mail: farberware-electric@saltonusa.com

Any questions or comments can be directed to Salton, Inc.'s address or call the Consumer Service Department:

1-800-233-9054, Monday - Friday, 9 a.m. - 5 p.m. CST

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

Printed in China