

**Size: 19.685" x 17.5"**

**Modelo: 3600**

**Por favor lea este instructivo antes de usar el producto.**

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Siempre que utilice su plancha, debe seguir algunas precauciones básicas de seguridad, incluyendo las siguientes

- **LEA TODAS LAS INSTRUCCIONES ANTES DE USAR.**
- Solo utilice la plancha para el fin previsto.
- A fin de protegerse contra el riesgo de un choque eléctrico, no sumerja la plancha en agua ni en ningún otro líquido. Siempre apague la plancha antes de enchufar o desconectarla del tomacorriente. Nunca tire del cable para desconectar la plancha del tomacorriente; sujete el enchufe y hálelo con cuidado. Siempre desconecte la plancha del tomacorriente cuando no esté en uso y antes de llenar o vaciar el tanque de agua.
- No utilice la plancha si tiene averiado el cable, si la ha dejado caer o presenta cualquier otro daño. Para evitar el riesgo de un choque eléctrico, no desarme ni trate de reparar la plancha personalmente. Acuda a un representante de servicio autorizado para que la examinen o reparen. El reensamblaje o reparación incorrecta podría ocasionar el riesgo de incendio, choque eléctrico, o lesiones a las personas al usar el aparato nuevamente.
- No permita que el cable entre en contacto con superficies calientes. Espere que la plancha se enfríe por completo antea de guardarla. Para guardar, enrolle el cable holgadamente en torno a la plancha.
- Todo aparato eléctrico usado en la presencia de los niños o por ellos mismos requiere la supervisión de un adulto. No desatienda la plancha cuando esté conectada o sobre la tabla de planchar.
- Las partes metálicas calientes de este aparato, al igual que el agua caliente o el vapor pueden ocasionar quemaduras. En caso de que puede haber agua caliente en el tanque, tenga cuidado al invertir una plancha de vapor o al bombear el botón de vapor.
- Este aparato no está diseñado para ser usado por personas (incluido niños) con capacidad limitada física, mental o sensoriales disminuidas y falta de experiencia o conocimiento que les impida utilizar el aparato con toda seguridad sin supervisión o instrucción.
- Se debe asegurar la supervisión de los niños para evitar que usen el aparato como juguete.

**Figura 1**

**Figura 2**

**Figura 3**

**Figura 4**

**Figura 5**

**Figura 6**

**Figura 7**

**Figura 8**

**Figura 9**

**Figura 10**

**Figura 11**

**Figura 12**

**Figura 13**

**Figura 14**

**Figura 15**

**Figura 16**

**Figura 17**

**Figura 18**

**Figura 19**

**Figura 20**

**Figura 21**

**Figura 22**

**Figura 23**

**Figura 24**

**Figura 25**

**Figura 26**

**Figura 27**

**Figura 28**

**Figura 29**

**Figura 30**

**Figura 31**

**Figura 32**

**Figura 33**

**Figura 34**

**Figura 35**

**Figura 36**

**Figura 37**

**Figura 38**

**Figura 39**

**Figura 40**

**Figura 41**

**Figura 42**

**Figura 43**

**Figura 44**

**Figura 45**

**Figura 46**

**Figura 47**

**Figura 48**

**Figura 49**

**Figura 50**

**Figura 51**

**Figura 52**

**Figura 53**

**Figura 54**

**Figura 55**

**Figura 56**

**Figura 57**

**Figura 58**

**Figura 59**

**Figura 60**

**Figura 61**

**Figura 62**

**Figura 63**

**Figura 64**

**Figura 65**

**Figura 66**

**Figura 67**

**Figura 68**

**Figura 69**

**Figura 70**

**Figura 71**

**Figura 72**

**Figura 73**

**Figura 74**

**Figura 75**

**Figura 76**

**Figura 77**

**Figura 78**

**Figura 79**

**Figura 80**

**Figura 81**

**Figura 82**

**Figura 83**

**Figura 84**

**Figura 85**

**Figura 86**

**Figura 87**

**Figura 88**

**Figura 89**

**Figura 90**

**Figura 91**

**Figura 92**

**Figura 93**

**Figura 94**

**Figura 95**

**Figura 96**

**Figura 97**

**Figura 98**

**Figura 99**

**Figura 100**

**Figura 101**

**Figura 102**

**Figura 103**

**Figura 104**

**Figura 105**

**Figura 106**

**Figura 107**

**Figura 108**

**Figura 109**

**Figura 110**

**Figura 111**

**Figura 112**

**Figura 113**

**Figura 114**

**Figura 115**

**Figura 116**

**Figura 117**

**Figura 118**

**Figura 119**

**Figura 120**

**Figura 121**

**Figura 122**

**Figura 123**

**Figura 124**

**Figura 125**

**Figura 126**

**Figura 127**

**Figura 128**

**Figura 129**

**Figura 130**

**Figura 131**

**Figura 132**

**Figura 133**

**Figura 134**

**Figura 135**

**Figura 136**

**Figura 137**

**Figura 138**

**Figura 139**

**Figura 140**

**Figura 141**

**Figura 142**

**Figura 143**

**Figura 144**

**Figura 145**

**Figura 146**

**Figura 147**

**Figura 148**

**Figura 149**

**Figura 150**

**Figura 151**

**Figura 152**

**Figura 153**

**Figura 154**

**Figura 155**

**Figura 156**

**Figura 157**

**Figura 158**

**Figura 159**

**Figura 160**

**Figura 161**

**Figura 162**

**Figura 163**

**Figura 164**

**Figura 165**

**Figura 166**

**Figura 167**

**Figura 168**

**Figura 169**

**Figura 170**

**Figura 171**

**Figura 172**

**Figura 173**

**Figura 174**

**Figura 175**

**Figura 176**

**Figura 177**

**Figura 178**

**Figura 179**

**Figura 180**

**Figura 181**

**Figura 182**

**Figura 183**

**Figura 184**

**Figura 185**

**Figura 186**

**Figura 187**

**Figura 188**

**Figura 189**

**Figura 190**

**Figura 191**

**Figura 192**

**Figura 193**

**Figura 194**

**Figura 195**

**Figura 196**

**Figura 197**

**Figura 198**

**Figura 199**

**Figura 200**

**Figura 201**

**Figura 202**

**Figura 203**

**Figura 204**

**Figura 205**

**Figura 206**

**Figura 207**

**Figura 208**

**Figura 209**

**Figura 210**

**Figura 211**

**Figura 212**

**Figura 213**

**Figura 214**

**Figura 215**

**Figura 216**

**Figura 217**

**Figura 218**

**Figura 219**

**Figura 220**

**Figura 221**

**Figura 222**

**Figura 223**

**Figura 224**

**Figura 225**

**Figura 226**

**Figura 227**

**Figura 228**

**Figura 229**

**Figura 230**

**Figura 231**

**Figura 232**

**Figura 233**

**Figura 234**

**Figura 235**

**Figura 236**

**Figura 237**

**Figura 238**

**Figura 239**

**Figura 240**

**Figura 241**

**Figura 242**

**Figura 243**

**Figura 244**

**Figura 245**

**Figura 246**

**Figura 247**

**Figura 248**

**Figura 249**

**Figura 250**

**Figura 251**

**Figura 252**

**Figura 253**

**Figura 254**

Size: 19.685" x 17.5"

The anti-drip system prevents water spotting at low temperatures.

#### ANTI-D RIP SYSTEM

1. Turn the fabric select dial to setting between settings 1, 2 or 3 (DRY) to iron without steam. The Smart Steam® system will automatically turn steam off.
2. To dry iron at higher settings, empty the water from the tank to prevent steaming.

#### IRONING WITHOUT STEAM

1. Be sure the iron is filled with water.
2. On first use, pump the spray button several times.

#### USING SPRAY

not in use.

**Important: Always stand the iron on its heel rest when powered on but**

iron.

2. When finished ironing, turn the fabric select dial to 0 and unplug the settings 0 and 3.

is water in the reservoir. Steam is automatically turned off between garment's label to help you determine fabric guide. Be sure there

1. Turn fabric-select dial to appropriate setting (between 4 and 6) for your fabric. See fabric guide on top of the water tank and read

power accordingly.

The Smart Steam® system automatically generates the right amount of steam for the fabric type selected. Once you select the temperature, the Smart Steam® technology detects the temperature and adjusts the steam

#### Smart Steam® Technology

#### IRONING WITH STEAM

2. Plug iron into electrical outlet.

overflow.

1. Tilt the iron and using a clean measuring cup, pour water into opening until the water reaches the MAX level mark on the water tank. Do not

#### FILLING WATER TANK

hem) before ironing.

**Tip:** If unsure of a garment's fiber, test a small area (on an inside seam or

**90 seconds before beginning to iron.**

**Important: For optimum performance, let the iron stand for**

**Note:** Use ordinary tap water for ironing. Do not use water processed through a home softening system.

- Please go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) to register your warranty.
- Remove any labels, stickers or tags attached to the body or soleplate of the iron.

#### GETTING STARTED

This product is for household use only.

### How to Use

#### AUTOMATIC SHUTOFF IN 2 POSITIONS

- Once the iron reaches appropriate temperature, it will turn off after 30 seconds of inactivity if left on its soleplate. If left vertically on its heel rest, it will shut off after 8 minutes.
- As soon as you pick up the iron, it will start heating again. Wait for iron to reheat completely before resuming operation.

### Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

#### CLEANING

1. Make sure iron is unplugged and has cooled completely. Wipe the soleplate and outer surfaces with a soft cloth dampened with water and mild household detergent. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
2. After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

#### STORING YOUR IRON

1. Unplug the iron and let it cool completely.
2. Check that the fabric select dial is set to 0.
3. Store iron on its heel rest.

#### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

#### TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

#### What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

#### For how long?

- Two years from the date of original purchase with proof of such purchase.

#### What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

#### How do you get service?


- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

#### What does your warranty not cover?


- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages [Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.]

#### How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

 **BLACK&DECKER** is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

Made and Printed in People's Republic of China

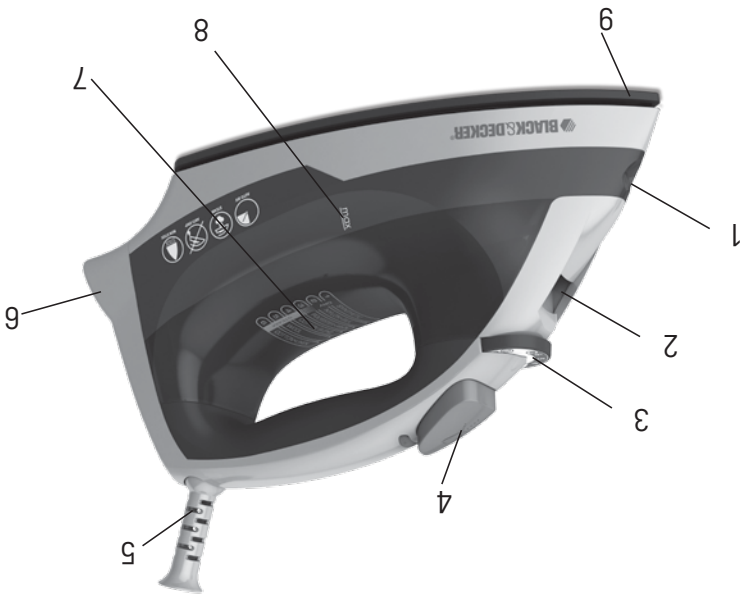

Product may vary slightly from what is illustrated.

1. Spray nozzle
2. Water-fill opening
3. Fabric-select dial
4. Spray button
5. 360° pivoting cord
6. Heel rest
7. Fabric guide
8. Water tank
9. Soleplate

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

#### TAMPER-RESISTANT SCREW

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Do not operate the iron with a damaged cord or in the event the iron is not in use.

Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.

Close supervision is necessary for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.

Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down—there might be hot water in the reservoir.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord loosely around the iron when storing.

Always turn iron off before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.

To avoid risk of electric shock, do not immerse the iron in water or other liquids.

Only use iron for its intended use.

**READ ALL INSTRUCTIONS BEFORE USING.**

When using your iron, basic safety precautions should always be followed, including the following:

○ To avoid a circuit overload, do not operate an iron on the same circuit with another high wattage appliance.

○ If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron should be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

○ Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.

Close supervision is necessary for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.

Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down—there might be hot water in the reservoir.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord loosely around the iron when storing.

Always turn iron off before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.

To avoid risk of electric shock, do not immerse the iron in water or other liquids.

Only use iron for its intended use.

**READ ALL INSTRUCTIONS BEFORE USING.**

When using your iron, basic safety precautions should always be followed, including the following:

○ To avoid a circuit overload, do not operate an iron on the same circuit with another high wattage appliance.

○ If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron should be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

○ Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.

Close supervision is necessary for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.

Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down—there might be hot water in the reservoir.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



## EASYSTEAM IRON PLANCHA EASYSTEAM

#### Customer Care Line:

USA 1-800-231-9786  
**Accessories/Parts (USA)**  
1-800-738-0245

For **online customer service** and to **register** your product, go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica)

#### Servicio para el cliente:

México 01-800 714-2503  
**Accesorios/Partes (EE.UU.)**  
1-800-738-0245



When using your iron for the first time, you may notice water residue inside the unit. This is normal.

Quando use su plancha por primera vez, notará que hay agua adentro de la plancha. Esto es normal.

MODEL/MODELO

○ IR04V

R1 2011/3-17-62E/S