 




**SAVE THIS USE AND CARE BOOK**

# **PowerPro® Mixer**

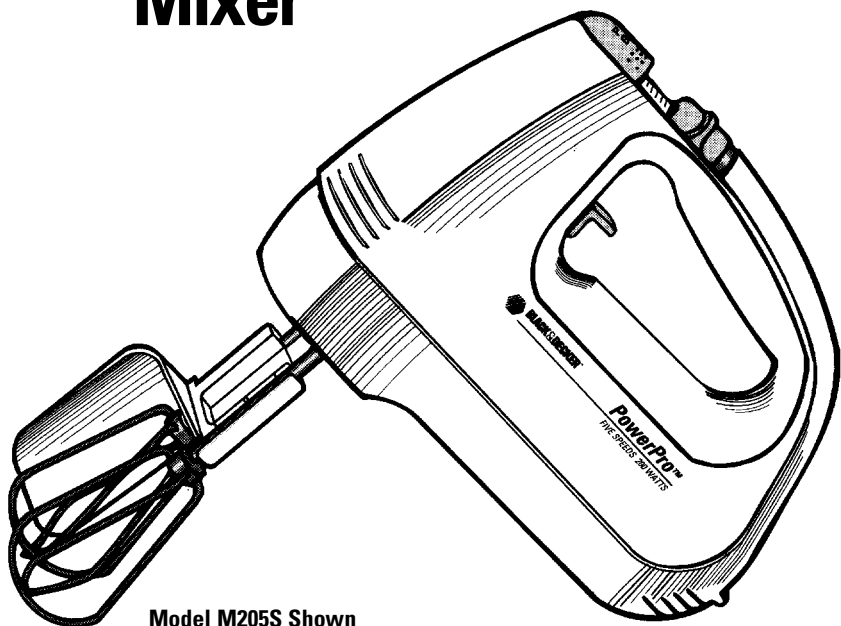

**Model M205S Shown**



**1-800-231-9786**  
QUESTIONS? Please call us TOLL FREE

**MODELS M200P, M205S**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS.

- To protect against risk of electric shock do not immerse mixer, cord, or plug in water or other liquid. To clean, wipe exterior with a damp cloth.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contacting moving parts. Keep hands, hair, clothing, as well as handheld spatulas and other utensils away from Beaters during operation to reduce the risk of injury or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Remove Beaters from mixer before washing them.
- Mixing flammable non-food substances may be hazardous.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not abuse the cord. Never carry the mixer by the cord or yank it to disconnect from an outlet; instead, grasp the plug and pull to disconnect.
- This product is intended for household use only and not for commercial or industrial use.
- Do not attempt to repair the mixer yourself; instead take it to a Black & Decker (U.S.) Household Appliance Company-Owned or Authorized Service Center for repair.

## SAVE THESE INSTRUCTIONS

---

## POLARIZED PLUG

 
This appliance has a polarized plug—one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

---

## TAMPER-RESISTANT SCREWS

This appliance is equipped with tamper-resistant screws to prevent removal of the outer cover. To reduce the risk of fire or electric shock, **do not attempt to remove the outer cover**. There are no user serviceable parts inside. Repair should be done **only** by authorized service personnel (see pages 10 & 11 for a list of Black & Decker Company-Owned Service Centers).

---

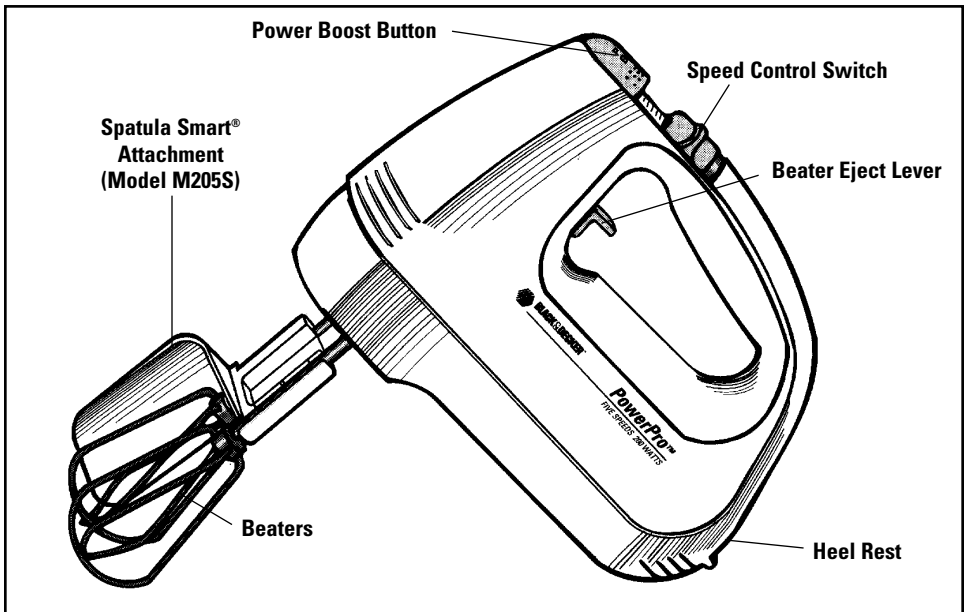

# How To Use

## INSERTING THE BEATERS

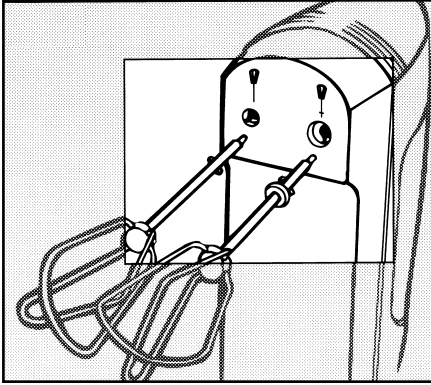 


Figure A

## USING THE SPATULA SMART® ATTACHMENT (MODEL M205S ONLY)

- 
1. Be sure the Mixer is unplugged and the Control is OFF.
  2. Insert the Beaters into the appropriate holes in the Mixer as shown. You may have to rotate them slightly until they lock into place. (Figure A)

---

**NOTE:** The left and right Beaters are not interchangeable. You must match the Beaters up to the illustration on the mixer.

---

3. With the Control in the OFF position, plug the cord into a standard electrical outlet. Place the Beaters into the Bowl, slide the switch to Speed 1 and gradually increase to the desired speed. See "Mixing Guide" on page 7.

---

**NOTE:** The Spatula Smart® Attachment is designed for use when mixing thin (puddings, brownie mix) to medium batters (cake mixes, muffins, frostings) and for mashed potatoes. The use of the Attachment is not recommended when beating egg whites, whipping cream, or when mixing thick cookie doughs.

---

1. With the Mixer unplugged, insert the Beaters into the Mixer. Place the mixer on a flat surface with the Beaters facing away from you and position the Spatula Attachment to the right of the Beaters.

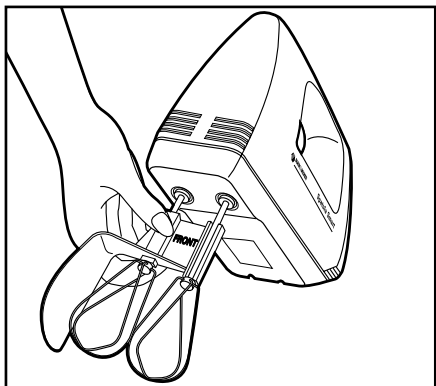 


Figure B

2. Weave the top of the Spatula Attachment under the left Beater shaft and over the right Beater shaft. (Figure B) The word "Front" on the Attachment should face outward from the front of the Mixer. Snap the Attachment firmly onto the Beater shafts. (Figure B)

3. As you mix, place the front of the Spatula Attachment against the side of the bowl and move it forward slowly along the side to scrape buildup and blend ingredients or batter back into the Beaters.

---

**NOTE:** Should the Spatula Attachment become detached during use, be sure to turn the Mixer off and unplug before attempting to reattach the Spatula to the Beaters.

---

## POWER BOOST

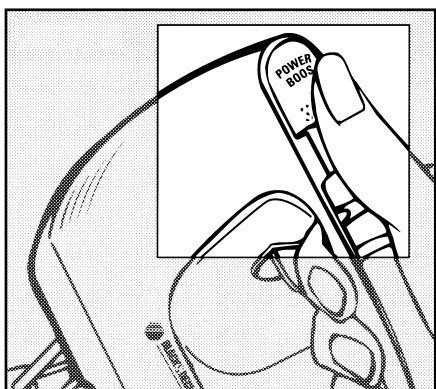 


Figure C

1. Depressing the Power Boost Button lets you increase the mixing speed to the maximum power level from any speed setting. (Figure C)

2. When you feel the Mixer slowing down or straining in tough mixing tasks (such as mixing cookie dough), press the Power Boost Button to get maximum performance. When you release the Button, the Mixer will return to the speed setting you were using.

---

## SPEED CONTROL

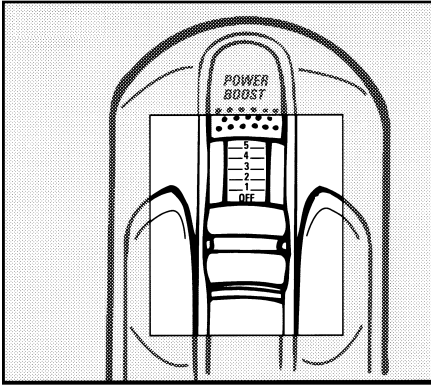 


Figure D

1. The PowerPro® Mixer has five mixing speeds.
2. To begin mixing, the Speed Control should be set on the lowest speed (#1) and then moved to a higher speed as needed. (Figure D)
3. Refer to the Mixing Guide on page 7 for further explanation of speed control.

**NOTE:** This Mixer and its Beaters were not designed to prepare bread dough.

## REMOVING THE BEATERS

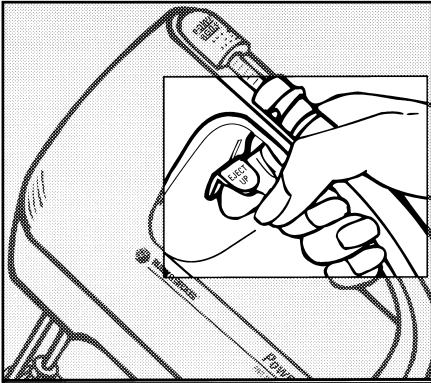 


Figure E

1. Unplug the Mixer from the outlet.
2. Using the index finger, pull the Beater Eject Lever up to release the Beaters. (Figure E) Detach the Spatula attachment, if used.

# MIXING GUIDE

<b>LOW</b>	Speed 1	To blend in flour/dry ingredients and liquids for batters and cookie doughs; to stir nuts, chips, raisins into heavy cookie doughs like oatmeal and chocolate chip.
	Speed 2	To mix thin batters such as muffins, waffles, pancakes and quick breads; to prepare sauces, puddings.
<b>MEDIUM</b>	Speed 3	To cream butter and sugar; to beat eggs into batters and cookie doughs; to prepare cake mixes specifying medium speed; to mix cake batters and frostings.
	Speed 4	To beat whole eggs, frozen desserts; to mix light batters like popovers.
<b>HIGH</b>	Speed 5	To whip cream, beat egg whites, mash potatoes and other vegetables like turnips and squash.

## Care Guide

---

Other than the care mentioned here, no other maintenance or servicing of this appliance is required. Repairs, if necessary, must be performed by a Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center. For your convenience, a complete list of Company-Owned Service Centers is included on pages 10 & 11.

## **CLEANING**

- 
1. Before cleaning, move the Speed Control to the OFF position and unplug the cord from the outlet. Eject the Beaters and remove the Spatula Attachment, if used.
  2. Wash the easy-clean Beaters and Spatula attachment in hot, sudsy water or in a dishwasher.
  3. The Mixer and the power cord can be cleaned with a damp cloth. Do not immerse the Mixer. For stubborn stains, wipe with a cloth slightly dampened in sudsy water or a mild, non-abrasive cleaner. Follow with a clean, damp cloth. Do not use any abrasive cleanser or material to clean any part of the Mixer.
- 

## **STORING THE MIXER**

- 
1. For longer life, avoid jerking the Power Cord. To store, coil the Cord in loops and secure it with a twist tie. Do not wrap the cord around the mixer.
  2. Store the Beaters and Spatula Attachment in the original packaging or in a drawer.
- 

## **Need Help?**

### **SERVICE OR REPAIR**

---

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can usually be found in the yellow pages of your phone book under "Appliances - Small - Repairing". For your convenience, a complete listing of the Company-Owned Service Centers can be found on pages 10 and 11.



If mailing or shipping your PowerPro® Mixer, pack it carefully in any sturdy carton with enough packing material to prevent damage. The original carton is not suitable for mailing. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

Consumer-replaceable parts and accessories are also available at Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Centers.

---

## Recipes

### OATMEAL CHIP COOKIES

- 1/2 cup butter or shortening, softened
  - 1 cup packed brown sugar
  - 1 egg
  - 1 teaspoon vanilla
  - 1 cup all-purpose flour
  - 1/2 teaspoon baking soda
  - 1/2 teaspoon salt
  - 1 cup quick oats, uncooked
  - 1/2 cup wheat germ
  - 1/2 cup semi-sweet chocolate morsels
1. In a large bowl, combine butter, brown sugar, egg, and vanilla.
  2. Beat at Speed 1 to blend ingredients.
  3. Increase to Speed 3 and beat until mixture is well blended (approximately 2 minutes).
  4. Add flour, baking soda, oats, wheat germ, and chocolate morsels to creamed mixture.
  5. Beat at Speed 1 to combine ingredients and increase speed as needed until mixture is blended.
  6. Preheat oven to 350°F.

7. Drop by level tablespoonfuls 2" apart onto lightly greased cookie sheet.
8. Bake 13 - 15 minutes or until golden brown. Remove to wire rack to cool.

***MAKES: 3 Dozen 2 1/2" Cookies***

### WHIPPED POTATOES

- 2 pounds white potatoes (6 medium), pared and quartered
  - 1 teaspoon salt
  - 1/2 cup hot milk
  - 1/4 cup butter or margarine
1. Cook potatoes in boiling salted water until done. Drain. Place over low heat for 1 to 2 minutes to dry out - shake pan frequently.
  2. Combine milk, butter, and salt.
  3. Mix potatoes at Speed 1 over low heat lifting mixer up and down until potatoes are well broken up. Beat at Speed 5 until no lumps remain. Gradually beat in milk mixture until potatoes are fluffy - approximately 2 minutes.

***YIELD: 4 to 6 servings***

# BLACK AND DECKER COMPANY-OWNED SERVICE CENTERS

## ALABAMA

**BIRMINGHAM** — 2412 Green Springs, Hwy., 35209  
205-942-0538  
**MOBILE** — 3831 Airport Blvd., 36608 205-343-6624

## ALASKA

**ANCHORAGE** — 910 West International Airport Rd., 99518  
907-563-4664

## ARIZONA

**MESA** — 535 South Dobson Rd., Suite 7, 85202  
602-461-1074  
**PHOENIX** — 4501 N. 7th Ave., 85013 602-279-6414  
**TUCSON** — 4845 E. Speedway Blvd., 85712 602-323-3388

## ARKANSAS

**LITTLE ROCK** — 519 W. Seventh St., 72201 501-372-3040

## CALIFORNIA

**ANAHEIM** — 540 South State College Blvd., 92806  
714-772-4050  
**CHULA VISTA** — 309 Broadway, 91911 619-420-6350  
**CONCORD** — 1500 Monument Blvd., #C2, 94520  
510-682-4880  
**FRESNO** — 5412 North Blackstone Ave., 93710 209-435-0810  
**LONG BEACH** — 2011 South St., 90805 310-422-5825  
**LOS ANGELES** — 4820 South Eastern Ave., Suite "L" 90040  
213-720-1834  
**RIVERSIDE** — 6215 Magnolia Ave., Suite B, 92506  
714-787-9700  
**SACRAMENTO** — 2033 Fulton Ave., 95825 916-972-9090  
**SAN DIEGO** — 9270 Clairmont Mesa Blvd., 92123  
619-279-2011  
**SAN JOSE** — 1185 South Bascom Ave., 95128 408-293-7350  
**SAN LEANDRO** — 15206 East 14th St., 94578 510-276-1610  
**VAN NUYS** — 14920 Victory Blvd., 91411 818-787-5531

## COLORADO

**DENVER** — 1171 South Federal Blvd., Box 19220, 80219  
303-922-8325

## CONNECTICUT

**HARTFORD** — 662 Silas Deane Hwy., 06109 203-563-5800  
**ORANGE** — 481 Boston Post Rd., 06477 203-795-3583

## DISTRICT OF COLUMBIA

**COLMAR MANOR, MD** — 4153 Bladensburg Rd., 20710  
301-779-3808  
**FALLS CHURCH, VA** — 344 W. Broad St., 22046  
703-533-7313

## FLORIDA

**FT. LAUDERDALE** — 799 East Oakland Pk. Blvd., 33334  
305-566-5102  
**FT. MYERS** — 5224 Bank St., 33907 813-278-1188  
**JACKSONVILLE** — 920 Cassat Ave., 32205 904-781-2253  
**MIAMI** — 13345 North West Seventh Ave., 33168  
305-681-6658  
**MIAMI** — 12233 South Dixie Hwy., 33156 305-232-9497  
**ORLANDO** — 3807 East Colonial Dr., 32803 407-894-7011  
**ST. PETERSBURG** — 5635 49th St. North, 33709  
813-525-0273  
**TAMPA** — 3432 West Kennedy Blvd., 33609 813-872-8317  
**WEST PALM BEACH** — 310 South Military Trail, 33415  
407-689-3247

## GEORGIA

**ATLANTA (South)** — 5330 Old National Hwy., 30349 404-762-8844  
**SMYRNA** — 2550 Cobb Parkway South, 30080 404-956-0869  
**STONE MOUNTAIN** — 5723 Memorial Dr., 30083 404-292-4714

## HAWAII

**HONOLULU** — Unit No. 106, Sand Island Access Rd., 96819  
808-847-7447

## ILLINOIS

**CHICAGO (Lincolnwood)** — 6710 North Crawford Ave., 60646  
708-673-0923  
**DES PLAINES** — 1277 South Elmhurst Rd., 60018 708-364-5220  
**LISLE** — 2950 Ogden Ave., Unit H, 60532 708-717-1075  
**MOLINE** — 4433 23rd Ave., 61265 309-762-3000  
**OK LAWN** — 6343 W. 95th St., 60453 708-423-7212  
**WAUKEGAN** — 31 S. Greenbay Rd., 60085 703-249-4390

## INDIANA

**EVANSVILLE** — 307 First Ave., Crescent Ctr., 47710 812-425-4269  
**HAMMOND** — 7103 Kennedy Ave., 46323 219-845-5100  
**INDIANAPOLIS (Speedway)** — 5999 Crawfordsville Rd., 46224  
317-243-8308

## IOWA

**DES MOINES** — 3427 Merle Hay Rd., 50310 515-270-1340

## KANSAS

**WICHITA** — 155 South West St., 67213 316-943-1271

## KENTUCKY

**LOUISVILLE** — 5211 Preston Hwy., 40213 502-968-7100

## LOUISIANA

**BATON ROUGE** — 11859 Florida Blvd., 70815 504-272-8111  
**HARVEY** — 2500 Lapalco Blvd., 70058 504-366-8676  
**METAIRIE (New Orleans)** — 3504 North Causeway Blvd., 70002  
504-837-2550  
**SHREVEPORT** — 7710-7714 Jewella Rd., 71108 318-688-1553

## MARYLAND

**BALTIMORE** — 4712 Erdman Ave., 21205 410-485-5550  
**BALTIMORE** — 29-31 Cranbrook Rd., Cockeysville, 21030  
410-666-5966  
**COLMAR MANOR (Wash. D.C.)** — 4153 Bladensburg Rd., 20722  
301-779-3808  
**PASADENA** — 8220 Ritchie Hwy., 21122 410-647-8456

## MASSACHUSETTS

**BRIGHTON (Boston)** — 12 Market St., 02135 617-782-6264  
**SEEKONK** — 120 Highland Ave., 02771 508-336-6510

## MICHIGAN

**GRAND RAPIDS** — 3040 28th St., SE, 49512 616-949-8331  
**LANSING** — 3205 W. Saginaw Hwy., 48917 517-323-4811  
**WARREN** — 27035 Van Dyke Blvd., 48093 313-756-6711  
**WESTLAND** — 8067 N. Wayne Rd., 48185 313-427-1520

## MINNESOTA

**BLOOMINGTON** — 9517 Lyndale Ave., South, 55420 612-884-9191

## MISSOURI

**KANSAS CITY** — 4324 Main St., 64111 **816-531-0629**  
**ST. ANN** — 3637 North Lindbergh Blvd., 63074  
**314-739-4661**  
**ST. LOUIS** — 12852 Manchester Rd., 63131 **314-821-8740**

## NEBRASKA

**OMAHA** — 4225 South 84th St., 68127 **402-592-5666**

## NEVADA

**LAS VEGAS** — 3411 East Charleston Blvd., 89104  
**702-641-6555**

## NEW JERSEY

**CHERRY HILL** — 1444 East Marlton Pike (Rt. 70), 08034  
**609-429-2822**  
**LITTLE FALLS** — 1189 U.S. Hwy. 46, 07424 **201-256-9373**  
**SCOTCH PLAINS** — 2520 Route #22 East, 07076 **908-233-5665**

## NEW MEXICO

**ALBUQUERQUE** — 5617 Menaul Blvd., N.E., 87110  
**505-884-1002**

## NEW YORK

**ALBANY (Latham)** — 836 Troy-Schenectady Rd., 12110  
**518-785-1867**  
**BUFFALO** — 881 West Delavan Ave., 14209 **716-884-6220**  
**CENTEREACH L.I.** — 2061-63 Middle Country Rd., 11720  
**516-737-4706**  
**NEW YORK (Hicksville)** — 259 South Broadway, Route 107, 11801  
**516-938-8180**  
**NEW YORK (Manhattan)** — 50 West 23rd St., 10010  
**212-929-6450**  
**NEW YORK (Woodside)** — 56-15 Queens Blvd., 11377  
**718-335-1042**  
**ROCHESTER** — 2969 W. Henrietta Rd., 14623 **716-424-1310**  
**SYRACUSE** — 3485 Erie Blvd., East, 13214 **315-446-3086**

## NORTH CAROLINA

**CHARLOTTE** — 3007 East Independence Blvd., 28205  
**704-374-1779**  
**GREENSBORO** — 3716 High Point Rd., 27407 **919-852-1300**  
**RALEIGH** — 2930 Capital Blvd., 27604 **919-878-0357**

## OHIO

**CINCINNATI** — 2310 East Sharon Rd., 45241 **513-772-3111**  
**COLUMBUS** — 3975 East Livingston Ave., 43227  
**614-237-0461**  
**DAYTON** — 2898 South Dixie Drive, 45409 **513-298-1951**  
**MAYFIELD HEIGHTS** — 5881 Mayfield Rd., 44124  
**216-449-2770**  
**PARMA HEIGHTS (Cleveland)** — 6483 Pearl Rd., 44130  
**216-842-9100**  
**TOLEDO** — 3231 Dorr St., 43607 **419-531-8921**

## OKLAHOMA

**OKLAHOMA CITY** — 1318 Linwood Blvd., 73106  
**405-232-7515**  
**TULSA** — 3120 S. Sheridan Rd, 74145 **918-622-5666**

## OREGON

**PORTLAND** — 1640 NW Johnson St., 97209  
**503-228-8631**

## PENNSYLVANIA

**ALLENTOWN (Whitehall)** — 2242 MacArthur Rd., 18052  
**215-435-9544**  
**EVANS CITY** — Cranberry Town Center Plaza, 20808 Rt. 19 N., 16033  
**412-779-9600**  
**HARRISBURG** — 6080 Allentown Blvd., 17112 **717-545-0651**  
**LANCASTER** — 118 Keller Ave., 17601 **717-393-5251**  
**PHILADELPHIA** — 9977-81 Bustleton Ave., 19115  
**215-464-7771**  
**PHILADELPHIA** — 333 North 20th St., 19103 **215-564-5520**  
**PITTSBURGH** — 5437 Baum Blvd., 15232 **412-362-2700**  
**WILKES-BARRE** — 759 Kidder St., 18702 **717-824-5704**

## PUERTO RICO

**GUAYNABO** — "C" Street # 14, Rexco Industrial Park, 00922-1924  
**809-783-3535**

## RHODE ISLAND

**SEEKONK, MA** — 120 Highland Ave., 02771 **508-336-6510**

## SOUTH CAROLINA

**GREENVILLE** — 1557 Laurens Rd., 29607 **803-232-3038**

## TENNESSEE

**CHATTANOOGA** — Perimeter Place Shopping Ctr., Sp. E,  
6231 Perimeter Dr., 37421 **615-894-5957**  
**KNOXVILLE** — 4118 North Broadway, 37917 **615-688-0921**  
**MEMPHIS** — 1085 East Brooks Rd., 38116 **901-332-3444**  
**NASHVILLE** — 4811 Nolensville Rd., 37211 **615-833-8277**

## TEXAS

**AMARILLO** — 3008 West 6th Ave., 79106 **806-373-1531**  
**AUSTIN** — 6549 Burnet Rd., 78757 **512-459-1133**  
**DALLAS** — 2257 Royal Lane, 75229 **214-620-8655**  
**EL PASO** — 6822 Gateway East, 79915 **915-778-9769**  
**FORT WORTH** — 721 North Beach St., 76111 **817-831-3828**  
**GARLAND** — 78 West Centerville Rd., 75043 **214-686-9302**  
**HOUSTON** — 536 East Tidwell Rd., 77022 **713-692-7111**  
**SAN ANTONIO** — 500 Culebra Ave., 78201 **210-732-1221**  
**WEBSTER** — 100 East Nasa Road One, Ste. 75, 77598 **713-338-4556**

## UTAH

**SALT LAKE CITY** — 1541 S. Third West St., 84115 **801-486-5828**

## VIRGINIA

**FALLS CHURCH** — 344 W. Broad St., 22046 **703-533-7313**  
**HAMPTON** — 3416 W. Mercury Blvd., 23666 **804-826-9382**  
**NORFOLK** — 7631 Sewells Point Rd., 23513 **804-480-3333**  
**RICHMOND** — 1424 Chamberlayne Ave., 23222 **804-649-9245**

## WASHINGTON

**SEATTLE** — 421 S. Michigan, 98108 **206-763-2010**  
**SPOKANE** — N. 7011 Division St., 99208 **509-467-8190**  
**TACOMA** — 2602 S. 38th St., 98409 **206-473-6040**

## WEST VIRGINIA

**CHARLESTON** — 1638 Sixth Ave., 25312 **304-343-0289**

## WISCONSIN

**MILWAUKEE (Wauwatosa)** — 10424 W. Bluemound Rd., 53226  
**414-453-4240**

REV: 3/95

**FULL  
TWO-YEAR  
WARRANTY**

---

Black & Decker (U.S.) Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid, provided it is delivered prepaid to any Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Answers to any questions regarding warranty or service locations may be obtained by calling toll-free 1-800-231-9786 or by writing:

Consumer Assistance and Information  
Black & Decker (U.S.) Inc.  
626 Hanover Pike  
Hampstead, MD 21074-0618



---

 **BLACK & DECKER®**

Listed by Underwriters Laboratories Inc.  
Copyright © 1991-1995 Black & Decker  
Pub. No. 168633-12-RV01  
Printed in People's Republic of China