

Size: 19.685" x 17.5"

SAVE THESE INSTRUCTIONS.

This product is for household use only.

- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use appliance for other than intended use.
- To reduce the risk of electric shock, cook only in removable container.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, remove plug from wall outlet.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not use outdoors.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not operate any appliance with a damaged cord or plug, or cool before putting on or taking off parts.
- Do not operate any appliance when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Read all instructions.
- When using electrical appliances, basic safety precautions should always be followed, including the following:

IMPORTANT SAFEGUARDS

Please Read and Save this Use and Care Book.



14-CUP RICE COOKER

ARROCERA DE 14 TAZAS

Customer Care Line:

USA 1-800-231-9786
Accessories/Parts (USA)
1-800-738-0245
For **online customer service** and to **register** your product, go to www.prodprotect.com/applica

Servicio para el cliente:

México 01-800 714-2503
Accesorios/Partes (EE.UU)
1-800-738-0245
Para **servicio al cliente** y para **registrar** su garantía, visite www.prodprotect.com/applica



MODEL/MODELO

○ RC3314W

- 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over a longer cord.
- 3) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- 4) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

WARNING: This appliance is equipped with a tamper-resistant screw no user-serviceable parts inside. Repair should be done only by authorized service personnel.

POLARIZED PLUG (120V Models Only)
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Sello del Distribuidor:	Comercializado por: Rayovac de México SA de C.V KM. 14.5 Carretera Puente de Vigas, Col. Lechería, Tultitlán, Estado de México. C.P. 54940 México Tel: (52) 5831-7070
Fecha de compra:	Servicio y Reparación Art. 123 No. 95 Col. Centro, C.P. 06050 Deleg. Cuauhtemoc
Modelo:	Servicio al Consumidor, Venta de Refacciones y Accesorios 01 800 714 2503

Código de fecha / Date Code

500 W 120 V~ 60 Hz



© 2013 Applica Consumer Products, Inc.

Importado por / Imported by:
RAYOVAC ARGENTINA S.R.L.
Humboldt 2495 Piso# 3
[C1425FUG] C.A.B.A. Argentina.
C.U.I.T No. 30-70706168-1

Importado por / Imported by:
Rayovac de México SA de C.V
KM. 14.5 Carretera Puente de Vigas,
Col. Lechería, Tultitlán,
Estado de México.
C.P. 54940
México
Tel: (52) 5831-7070

Del interior marque sin costo
01 (800) 714 2503



Product may vary slightly from what is illustrated.

1. Tempered glass lid with steam vent
2. Steaming basket
3. Nonstick cooking bowl with water level marks
4. Cool-touch handles
5. Rice measuring cup
6. Warm indicator light (KEEP WARM)
7. „On“ switch
8. Cook indicator light (COOK)
9. Serving scoop

1. Remove the lid and stir the rice before serving.
10. After the switch pops up, leave the lid on for at least 15 minutes to further steam the rice. If holding rice for longer than 30 minutes, stir occasionally to prevent browning of rice on the bottom of cooking bowl.
9. Once rice is cooked, the COOK indicator light turns off, the switch pops up and the rice cooker automatically switches to the keep warm function. The KEEP WARM indicator light comes on and stays ON, indicating serving temperature is maintained.
8. Press down the ON switch. The COOK indicator light comes on and cooking begins. As the rice expands and cooks, steam comes out through the steam vent on the lid.
7. Plug into a standard electrical outlet. The KEEP WARM indicator light comes on.
6. Place the lid on the rice cooker.
5. Insert the rice cooker into the rice cooker. You might have to turn it slightly to the left and right to ensure proper contact with the heating plate.
4. Before placing the cooking bowl into the rice cooker, be sure the heating plate and outside surface of the cooking bowl are clean and dry. Do not let loose rice or particles fall into the rice cooker.
3. Be careful not to add too much water as it may cause the unit to boil over. Use the „BROWN RICE“ markings when cooking brown rice and „OTHER RICE“ for all other varieties.
2. Place rice in the cooking bowl. Add water. Use the water-level markings inside the cooking bowl as a guide for adding the appropriate amount of water. For example, for 4 measures of uncooked rice, fill with water to water-level marking 4.
1. Measure desired amount of rice with the rice measuring cup provided. Add butter, oil and/or seasonings as desired.

1. Measure desired amount of rice with the rice measuring cup provided. Add butter, oil and/or seasonings as desired.
2. Place rice in the cooking bowl. Add water. Use the water-level markings inside the cooking bowl as a guide for adding the appropriate amount of water. For example, for 4 measures of uncooked rice, fill with water to water-level marking 4.
3. Be careful not to add too much water as it may cause the unit to boil over. Use the „BROWN RICE“ markings when cooking brown rice and „OTHER RICE“ for all other varieties.
4. Before placing the cooking bowl into the rice cooker, be sure the heating plate and outside surface of the cooking bowl are clean and dry. Do not let loose rice or particles fall into the rice cooker.
5. Insert the rice cooker into the rice cooker. You might have to turn it slightly to the left and right to ensure proper contact with the heating plate.
6. Place the lid on the rice cooker.
7. Plug into a standard electrical outlet. The KEEP WARM indicator light comes on.
8. Press down the ON switch. The COOK indicator light comes on and cooking begins. As the rice expands and cooks, steam will come out of the vent in the lid.

This appliance is for household use only.

How to Use

GETTING STARTED

• Place unit on a flat, stable surface.
• Wash removable parts as instructed in CARE AND CLEANING section.
• Please go to www.prodprotect.com/applica to register your warranty.

1. Fill the cooking bowl with about 1½ cups (12 fl. oz./350 ml) of water using a standard measuring cup.
2. Place vegetables or other food in the steaming basket, and position the basket on top of the cooking bowl.
3. Close the lid.
4. Plug unit into a standard electrical outlet. The KEEP WARM indicator light will come on.
5. Press the COOK button to begin cooking.
6. Steaming times vary according to vegetable or food type. Begin checking for doneness after initial 5 minutes. You may need to experiment to suit your taste.
7. Unplug the unit when finished.

Note: When steaming vegetables or other foods without rice in the cooking bowl, the unit will not switch to the KEEP WARM mode.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

- Always unplug the unit before cleaning.
- Never immerse the unit in water or other liquid.
- Wash the cooking bowl, serving scoop, rice measuring cup and steaming basket warm, soapy water. Do not use abrasive cleaners or metal scouring pads—they may scratch the nonstick surface or could result in poor contact with the heating plate.
- After it has thoroughly cooled, clean the unit by wiping the inside and outside surfaces with a damp soapy cloth and dry thoroughly.
- If water accidentally gets into the switch area or onto the heating plate, allow to dry thoroughly before using the rice cooker.

NEED HELP?
For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

TWO-YEAR LIMITED WARRANTY
(Applies only in the United States and Canada)
What does it cover?

- Any defect in material or workmanship provided; however, Applica’s liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

BLACK & DECKER and the BLACK & DECKER Logo are registered trademarks of The Black & Decker Corporation, or one of its affiliates, and used under license.

Made and Printed in People’s Republic of China

RV01 2011/9-12-38E/S

