

# BLACK+DECKER

TM

## GETTING STARTED WITH YOUR **ELECTRIC SPIRALIZER**

These are abbreviated instructions.

The blades are sharp.

Read the Use and Care Guide  
for warnings and safety instructions.

SFP1000





## ASSEMBLING

1. Holding the outer lip of the blade top, place the selected blade into the opening on top of the motor base. (A)
2. Lock the feed chute to the base by turning counterclockwise. (B)



## HOW TO USE

1. Cut a thin slice from one end of your produce. (C)
2. Secure pusher to produce to be spiralized. (D)
3. Place a work bowl or pan under the feed chute.
4. Turn spiralizer ON (I) and use the pusher to guide produce through the feed chute. (E)



## NOODLE BLADES AND SHAPES

THICK SLICE	THIN SLICE	THICK NOODLE	THIN NOODLE	WIDE NOODLE	WAVY CUT
<i>Perfect for:</i> potato slices, salad toppings	<i>Perfect for:</i> fruit desserts, flower garnishes	<i>Perfect for:</i> fettuccine and linguine noodles	<i>Perfect for:</i> spaghetti noodles	<i>Perfect for:</i> wide ribbon noodles	<i>Perfect for:</i> wavy fries, veggie chips