



CONVECTION COUNTERTOP OVEN

HORNO DE CONVECCIÓN PARA MOSTRADOR

Customer Care Line:

USA 1-800-231-9786
Accessories/Parts (USA)
 1-800-738-0245
 For **online customer service**
 and to **register** your product, go to
www.prodprotect.com/applica

Servicio para el cliente:

México 01-800 714-2503
Accesorios/Partes (EE.UU.)
 1-800-738-0245
 Para **servicio al cliente** y para
registrar su garantía, visite
www.prodprotect.com/applica



MODEL/MODELO

○ **T01660B**

Please Read and Save this Use and Care Book.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn both the Bake/Broil knob and the Toast/Timer knob to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.

- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of the appliance while in operation.
- Extreme caution must be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than the manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

TAMPER-RESISTANT SCREW

Warning: this appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD


a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel.

Important:
 When using the BAKE/BROIL timer, always turn the knob past 20 and then turn back or forward to desired setting.

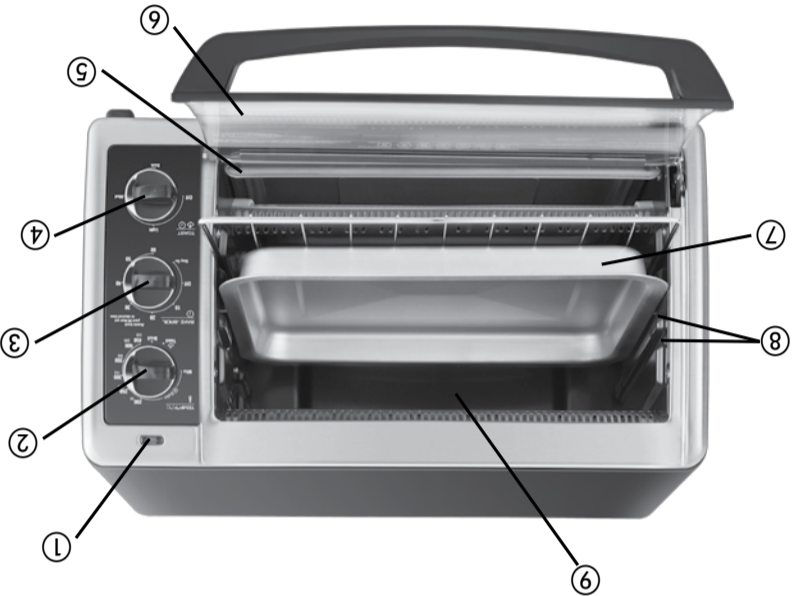

Product may vary slightly from what is illustrated.

- † 1. Power indicator light (Part # T01660B-01)
- † 2. Temperature/Cooking function knob (Part # T01660B-01)
- † 3. Bake/Broil 60-minute timer knob (Part # T01660B-02)
- † 4. Light-to-dark Toast/Timer knob (Part # T01660B-02)
- † 5. Slide-out crumb tray (Part # T01660B-03)
- † 6. Easy-view glass door (Part # T01660B-04)
- † 7. Baking pan
- † 8. 2 rack positions (Part # T01660B-04)
- † 9. Curved interior

Note: † indicates consumer replaceable/removable parts

- 9. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the bagel.
- 10. Unplug appliance when not in use.

BAKE FUNCTION

Note: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature control knob to the desired setting from 200°F to 450°F.
2. Turn temperature/cooking function knob to 20 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 60 minutes or to control cooking time yourself. Be sure to use a kitchen timer.)
3. The indicator light comes on and will remain lit during the entire baking time.
4. The heating elements will cycle on and off to maintain even heat distribution.
5. Once oven has preheated, open oven door and insert food. Close oven door.

BROIL FUNCTION

Note: When broiling, preheat oven for 10 minutes.

1. Turn the temperature/cooking function knob to 450/BROIL.
2. Open oven door and using the bake pan as a drip tray, insert it under the slide rack on the rack support rails.
3. Set the BAKE/BROIL timer to desired number of minutes including preheat time or to STAY ON if you want to control cooking time or need to cook your food longer than 60 minutes.
4. Place food on the slide rack.
Note: Be sure the top edge of the food or container is at least 1½" (3.81 cm) away from the upper heating elements.
- Important: Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.**
5. Cook food according to recipe or package instructions and check at minimum time to see if it is done.
6. When finished broiling, the signal bell sounds. Turn the BAKE/BROIL timer knob to the OFF position. The power indicator light goes off.
7. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
8. Unplug appliance when not in use.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. Do not use a spray glass cleaner.
2. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.
3. Wipe crumb tray with a dampened cloth or paper toweling and dry thoroughly before inserting back into unit.

It is not necessary to preheat the oven for toasting.

TOAST FUNCTION

1. Set temperature/cooking function knob to Toast.
2. Open oven door.
3. Insert slide rack.
4. Place desired pieces of bread or bagel to be toasted directly on slide rack and close the door.
5. Turn Light-to-dark toast timer to desired setting.

Note: You must set the toast shade selector knob as desired for the oven to begin toasting.

6. For best results, on first toasting cycle set the toast selector knob to medium which will be midway between light and dark setting, then re-adjust for next cycle to lighter or darker to suit your preference.

7. The on indicator light comes on and remains on until toasting cycle is complete.
 8. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.

- This oven gets hot. When in use, always use oven mitts or pot holders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select STAY ON for the oven to function.



IMPORTANT INFORMATION ABOUT YOUR OVEN

- Remove all packing material and any stickers.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

GETTING STARTED

Remove all packing material and any stickers. Wash all removable parts as instructed in CARE AND CLEANING. Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls. Plug unit into electrical outlet.

CAUTION: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

CAUTION: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

	<p>THIS OVEN GETS HOT. MITS OR POT HOLDERS WHEN IN USE. ALWAYS USE OVEN SURFACE OF THE OVEN.</p>
<p>CAUTION</p>	

This product is for household use only.

How to Use

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

Made and Printed in People's Republic of China



© 2011 Applica Consumer Products, Inc.

2010/8-4-12E/S

