

**Please Read and Save this Use and Care Book.**

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Consumer Support at the toll-free number listed in the warranty section.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn the both the timer and toast shade knobs to Off ○, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Overized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of the appliance while in operation.
- Extreme caution must be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than the manufacturer’s recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- To turn appliance off, turn the both the timer and toast shade knobs to Off ○.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

## SAVE THESE INSTRUCTIONS.

### This product is for household use only.

#### GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

#### TAMPER-RESISTANT SCREW

**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.


#### ELECTRICAL CORD

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
  - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
  - The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power cord is damaged, please contact the warranty department listed in these instructions.

#### HOW TO USE

This product is for household use only.

	<b>CAUTION</b>
	<b>THIS OVEN GETS HOT. WHEN IN USE, ALWAYS USE OVEN MITTS OR POT HOLDERS WHEN TOUCHING ANY OUTER OR INNER SURFACE OF THE OVEN.</b>

**Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.**

**Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.**

#### GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
  - Wash all removable parts as instructed in CARE AND CLEANING.
  - Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
  - Plug unit into electrical outlet.
- IMPORTANT INFORMATION ABOUT YOUR OVEN**
- This oven gets hot. When in use, always use oven mitts or pot holders when touching any outer or inner surface of the oven.
  - During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
  - You must set the timer or select STAY ON for the oven to function.

##### TOAST FUNCTION ↕

- For best results, place the bread to be toasted directly on the slide rack.
- Toast up to 9 slices of bread. Place items on rack and close oven door.
- Turn the Temperature control knob to the TOAST / BAGEL setting.
- Turn the Cooking Function control knob to TOAST.
- Turn the toast shade knob to medium shade then desired toast shade: Light ☐, Medium ▣, or Dark ■.
- For best results, on first toasting cycle, set the toast selector knob to Medium ▣, then re-adjust to lighter or darker to suit your preference.
- The On indicator light comes on and remains on until the toasting cycle is complete.
- When toast cycle is complete, there will be an audible signal. The oven and the On indicator light will turn off.
- Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
- Unplug appliance when not in use.

##### BAGEL FUNCTION

- For best results, place the bagels to be toasted directly on the slide rack.
- Place items on rack and close oven door.
- Turn the Temperature control knob to the TOAST / BAGEL setting.
- Turn the Cooking Function control knob to BAGEL.
- Use the oven timer knob and set to the desired level using the bagel shade indicated.
- For best results, on first bagel cycle, set the set the timer knob in the middle between the light and dark bagel icons.
- The On indicator light comes on and remains on until the bagel cycle is complete.
- When bagel cycle is complete, there will be an audible signal. The oven and the On indicator light will turn off.
- Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the bagel.
- Unplug appliance when not in use.

**IMPORTANT:** Be sure the top edge of the food or container is at least 1.5 inches (3.81cm) away from the upper heating elements.

**NOTE:** Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

##### CONVECTION BAKE FUNCTION ⊕

**NOTE:** For best results, when baking or cooking, preheat the oven for at least 10 min-utes at the desired temperature setting.

- Turn the Temperature control knob to the desired temperature
- Turn the Cooking Function control knob to BAKE ⊕
- Turn the Timer control knob to 20, and then turn back or forward to desired baking time, including preheat time. Select STAY ON to bake longer than 60 minutes or to control cooking time yourself. Be sure to use a kitchen timer.
- The indicator light comes on and will remain lit during entire baking time.
- The heating elements with cycle on and off to maintain even heat distribution.
- Once oven has preheated, open oven door and insert food. Close oven door.
- When finished cooking, turn the Time control knob to Off ○. The power indicator light goes off. Use an oven mitt or pot holder to slide out the food.
- Unplug the appliance when not in use.

**Note:** If baking 2 pizzas at one time, place pizzas directly on oven racks in the upper and lower positions of oven. Bake according to cooking directions, switching rack posi-tions half way through cooking.

##### BROIL FUNCTION

**NOTE:** For best results, when broiling, preheat oven for 10 minutes.

- Turn the Temperature control knob to BROIL/450 setting.
- Turn the Cooking Function control knob to BROIL.
- Turn the Timer control knob to 20, and then turn back or forward to desired baking time, including preheat time. Select STAY ON to broil longer than 60 minutes or to control broiling time yourself. Be sure to use a kitchen timer.
- The indicator light comes on and will remain lit during entire broiling time.
- The heating elements with cycle on and off to maintain even heat distribution.
- Once oven has preheated, open oven door and insert food. Place food on the slide rack and use the bake pan/drip tray under the slide rack to avoid drippings falling onto the heating elements.
- When finished broiling, turn the Timer control knob to Off ○. The power indicator light goes off.
- Unplug the appliance when not in use.

#### CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

##### CLEANING

**Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.**

- Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. do not use a spray glass cleaner.
- Wash the bake pan in mild sudsy water. To minimize scratching, use a polyester or nylon pad.
- Wipe crumb tray with a dampened cloth or paper toweling and dry thoroughly before inserting back into unit.

#### NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this pamphlet. Please **DO NOT** return the product to the place of pur-chase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this pamphlet.

**(Applies only in the United States and Canada)**

**What does it cover?**

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc.’s liability will not exceed the purchase price of product.

**For how long?**

- Two years from the date of original purchase with proof of such purchase.

**What will we do to help you?**

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

**How do you get service?**

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applca, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

**What does your warranty not cover?**

- Damage from commercial use.
- Damage from misuse, abuse or neglect.
- Products that have been modified in any way.
- Products used or serviced outside the country of purchase.
- Glass parts and other accessory items that are packed with the unit.
- Shipping and handling costs associated with the replacement of the unit.
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you).

**How does state law relate to this warranty?**

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

**Por favor lea este instructivo antes de usar el producto**

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD.

Cuando se usan aparatos eléctricos, siempre se deben respetar las siguientes medidas básicas de seguridad:

- Por favor lea todas las instrucciones.
- No toque las superficies calientes. Use las asas o las perillas.
- A fin de protegerse contra un choque eléctrico y lesiones a las personas, no sumerja el cable, los enchufes ni el aparato en agua ni en ningun otro líquido.
- Todo aparato eléctrico usado en la presencia de los niños o por ellos mismos requiere la supervisión de un adulto.
- Desconecte el aparato del tomacorriente cuando no esté en uso y antes de limpiarlo. Espere que el aparato se enfríe antes de instalarle o retirarle piezas y antes de limpiarlo.
- No opere ningún aparato eléctrico que tenga el cable o el enchufe dañado o después de que presente un problema de malfuncionamiento o que se haya caído o dañado de manera alguna. Si el cable de alimentación está dañado, por favor llame a nuestra línea de Servicio al Cliente que aparece en la cubierta de este manual de uso y cuidado.

- El uso de accesorios no recomendados por el fabricante del aparato puede ocasionar incendio, choque eléctrico o lesiones a las personas.
- No use este aparato a la intemperie.
- No permita que el cable cuelgue del borde de la mesa o del mostrador ni que entre en contacto con superficies calientes.
- No coloque el aparato sobre ni cerca de las hornillas de gas o eléctricas ni adentro de un horno caliente.
- Tome mucha precaución al mover de un lugar a otro un aparato que contenga aceite u otros líquidos calientes.
- Para desconectar, coloque tanto el temporizador y control de la sombra a “Off” o “○” y después, retire el enchufe del tomacorriente.
- Este aparato se debe usar únicamente con el fin previsto.
- No use almohadillas de fibras metálicas para limpiar el aparato. Las fibras metálicas podrían entrar en contacto con las piezas eléctricas del aparato, resultando en el riesgo de un choque eléctrico.
- Ni los alimentos demasiado grandes ni utensilios de metal deben ser introducidos en un horno tostador, ya que estos pueden ocasionar un incendio o riesgo de descarga eléctrica.
- Existe el riesgo de incendio si el aparato permanece cubierto mientras se encuentra en funcionamiento o si éste llegase a entrar en contacto con cualquier material inflamable, incluyendo las cortinas y las paredes. Asegúrese de no colocar nada sobre el aparato mientras se encuentre en uso.
- Se debe ejercer mucha prudencia al usar recipientes que no sean de metal ni de vidrio.
- Cuando este aparato no esté en funcionamiento, no se debe usar para guardar nada aparte de los accesorios recomendados por el fabricante.
- No introduzca los siguientes materiales en el aparato: papel, cartón, envolturas plásticas ni materiales semejantes.
- A fin de evitar que el aparato se sobrecaliente, no cubra la bandeja para los residuos como ninguna otra superficie del aparato con papel de aluminio.
- Para apagar la unidad: Gire la perilla de control del reloj automático y la perilla de control del nivel de tostado a la posición de apagado “○” (Off).
- Este aparato no está diseñado para ser usado por personas (incluido niños) con capacidad limitada física, mental o sensoriales disminuidas y falta de experiencia o conocimiento que les impida utilizar el aparato con toda seguridad sin supervisión o instrucción.
- Se debe asegurar la supervisión de los niños para evitar que usen el aparato como juguete.
- Este aparato no está diseñado para operar por medio de un temporizador externo o control remoto.

## CONSERVE ESTAS INSTRUCCIONES. Este aparato electrico es para uso domestico unicamente.

#### ENCHUFE DE TIERRA

Como medida de seguridad, este producto cuenta con un enchufe de tierra que podrá conectarse a una toma de corriente de tres clavijas. no trate de alterar esta medida de seguridad. La conexión incorrecta del conductor de tierra puede resultar en riesgo de descarga eléctrica. Consulte con un electricista calificado si tiene dudas acerca de si el tomacorriente está correctamente conectado a tierra.

#### TORNILLO DE SEGURIDAD


**Advertencia:** Este aparato cuenta con un tornillo de seguridad para evitar la remoción de la cubierta exterior del mismo. A fin de reducir el riesgo de incendio o de choque eléctrico, por favor no trate de remover la cubierta exterior. Este producto no contiene piezas reparables por el consumidor. Toda reparación se debe llevar a cabo únicamente por personal de servicio autorizado.

#### CABLE ELÉCTRICO

- Un cable eléctrico corto (o el cable de alimentación desmontable) es provisto para reducir el riesgo de enredarse o de tropezar con un cable largo.
- Existen cables eléctricos más largos y separables o cables de extensión que uno puede utilizar si toma el cuidado debido.
- Si se utiliza un cable separable o de extensión,
  - El régimen nominal del cable separable o del cable de extensión debe ser, como mínimo, igual al del régimen nominal del aparato.
  - Si el aparato es de conexión a tierra, el cable de extensión debe ser un cable de tres alambres de conexión a tierra.
  - Uno debe de acomodar el cable más largo de manera que no cuelgue del mostrador o de la mesa, para evitar que un niño tire del mismo o que alguien se tropiece.

#### COMO USAR

Este producto es para uso doméstico solamente.

	<b>PRECAUCIÓN</b>
	<b>ESTE HORNO SE CALIENTA CUANDO ESTÁ EN USO. SIEMPRE USE AGARRADERAS O GUANTES DE COCINA CUANDO TOQUE TODA SUPERFICIE INTERNA O EXTERNA DEL HORNO.</b>

