

# COPPER X CHEF™

## *BBQ Grill*



## **Owner's Manual**

**Save These Instructions - For Household Use Only**

For Sizes: 12 x 18" & 12 x 12"

Do not use the **Copper Chef™ BBQ Grill** until you have read this manual thoroughly.

*Warranty Information Inside*

# IMPORTANT SAFEGUARDS

---

- **NEVER** leave your Copper Chef BBQ Grill empty over a hot burner. This could ruin it and cause damage to your barbecue grill.
- **NEVER** put your Copper Chef BBQ Grill in the microwave or toaster oven. This is a hazard that can cause electric sparks or fire, and possibly damage the appliances and your cookware.
- **NEVER** use your Copper Chef BBQ Grill on the stove top. Oils or other liquids will through the holes in the Grill and onto the burner. **DO NOT** put a pan underneath the Grill.
- **NEVER** leave your Copper Chef BBQ Grill unattended. This helps avoid potential injury to children or the risk of fire.
- **ALWAYS** supervise children who are near cookware when in use or injury may result.
- **DO NOT** handle your Copper Chef BBQ Grill when hot. **USE** oven mitts because the Copper Chef BBQ Grill will be very hot during and after use.
- **ALWAYS** turn off the barbecue while placing or removing the Copper Chef BBQ Grill.
- **DO NOT** attempt to repair the Copper Chef BBQ Grill if it is damaged.
- This product is for home use only. It is **NOT INTENDED** for commercial use.
- **DO NOT** use aerosol cooking sprays. These sprays will build up on the Copper Chef BBQ Grill and become difficult to remove while reducing the nonstick coating.
- **ALWAYS** be cautious of potential flare-ups.

## SAVE THESE INSTRUCTIONS - FOR HOUSEHOLD USE ONLY.

---

### Before You Begin

It is very important that you read this entire manual, making certain that you are totally familiar with the unit's operation and precautions. Read all warnings and safe use instructions carefully and thoroughly before use.


### Warning

Failure to follow the warnings provided below may result in personal injury, property damage, or damage to your Copper Chef.

# Features

---

- CeramiTech Non-Stick Coating
- Even heating
- Works on most barbecue grills
- Easy cleaning
- Durable, stain-resistant coating
- Temperature-resistant coating up to 850° F
- Reduces wear and tear on your barbecue grill

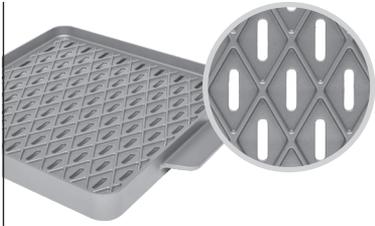

**X-Pattern  
Design**

# Models

---



**12" x 18" Pan**



**12" x 12" Pan**



**Cleaning Brush**

# Recommendations

---

## Before Using

Before using your new cookware, it is recommended that you wash it in hot water with mild soap or dish detergent. Rinse thoroughly and wipe dry immediately with a soft dish towel. Copper Chef cookware is dishwasher safe, so you can put it in the dishwasher to rinse and clean before using for the first time.

## While Cooking

- Always ensure that the flat side of the Copper Chef BBQ Grill is facing the heat source when in use. Food should be cooked only on the side with the X-Pattern Design.
- We recommend low to medium heat settings for most cooking. The CeramiTech coating will distribute heat more effectively and evenly. This causes some protein-rich foods to cook more quickly.
- The CeramiTech coating does not require the use of butter or cooking oil. If you choose to use oil or butter, we recommend oil or butter with a high smoke point: refined olive oil, peanut oil, corn oil, or (clarified) butter.
- Do not use extra virgin olive oil or oil sprays. They cannot withstand high heating and will leave a thin carbonized layer on the nonstick coating.

## Proper Cooking Utensils

To prevent scratching the coating, we recommend using nonmetal utensils with your Copper Chef cookware. Do not cut food on the Copper Chef BBQ Grill using sharp utensils such as forks, knives, mashers, or whisks that can scratch the cooking surface.

# Recommendations

---

## Tips

### Removing Stubborn Residue

When food is burned on the Copper Chef BBQ Grill, a stubborn black residue may remain. If regular cleaning does not loosen it, soak in hot water and a tablespoon of non-lemon detergent for 15 mins.

Allow the water to become lukewarm before you drain and rinse.

Clean with a plastic spatula or wipe with a nonabrasive sponge to loosen residue. Repeat if necessary.

You can also use the provided Cleaning Brush to clean the Copper Chef BBQ Grill. Do not use steel wool or other metal pads. They could leave coarse scratches. Always rinse thoroughly and dry immediately with a soft towel.

### Cooking With Gas

When cooking over a gas burner, make certain the flame does not touch the cookware. Your cookware can become discolored.

**NOTE:** Copper Chef Cookware has exceptionally high thermoconductivity. Even a low setting on some gas burners could cause overheating and possibly burn foods such as thinly sliced onions.

# Care & Cleaning

---

## Easy Maintenance

- Allow cookware to cool completely before washing. Never immerse a hot grill in cold water as this will cause irreparable warping. Cleaning your Copper Chef cookware is quick and easy.
- After each use, clean your Copper Chef BBQ Grill with hot water and liquid dish detergent. Let soak until lukewarm. Use a sponge or soft cloth to remove any remaining food particles.
- Use only the provided Cleaning Brush to clean the Copper Chef BBQ Grill. Do not use steel wool or other metal pads. They could leave coarse scratches. Always rinse thoroughly and dry immediately with a soft towel.

## Dishwasher Safe

Although the entire Copper Chef Collection is dishwasher safe, we recommend cleaning by hand. Hand-washing preserves the life of the cookware and helps maintain its appearance. If cleaning in the dishwasher, follow the suggested guidelines below.

1. Load the dishwasher carefully. Other dishes and flatware may mark the surface of your Copper Chef BBQ Grill.
2. Be sure to remove soil from other dishes and flatware. It can be abrasive to Copper Chef BBQ Grill's nonstick coating.
3. We recommend using a non-lemon detergent.
4. Regular dishwasher cleaning will eventually scratch any surface.

## Storage

When storing your Copper Chef cookware, avoid stacking and crowding it in cabinets or drawers. This could cause scratches. We recommend a cookware rack or pegboard to provide convenient, safe storage. Always nest your nonstick cookware carefully.

# Manufacturer's 60-Day Limited Warranty

The manufacturer warrants that your Copper Chef is free of defects in materials and workmanship. The Copper Chef Non-Stick Ceramic Coating is warranted not to peel, chip, or blister with normal home use for 5 years from the date of the purchaser's receipt of the product, and all other parts and components are warranted for 60 days from the date of the purchaser's receipt of the product.

This warranty is valid only in accordance with the conditions set forth below:

1. Except for the ceramic coating, normal wear and tear are not covered by this warranty. This warranty applies to consumer use only and is void when the product is used in a commercial or institutional setting.
2. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated. This warranty is void if the product has been subject to accident, misuse, abuse, improper maintenance or repair, or unauthorized modification.
3. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
4. Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price less any shipping, handling, or processing fees that you paid) is the exclusive remedy of the consumer under this warranty. Under this warranty or in any claim of breach of this warranty, the manufacturer shall not be liable for any incidental or consequential damages for breach of this warranty or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
5. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## **Procedure for Exercise of Limited 5-Year Warranty Rights (In Use After Expiration of 60-Day Money-Back Guarantee):**

If warranty service is necessary, the original purchaser must pack the affected product securely and send it postage paid with a description of the defect and date of receipt, proof of purchase, and the purchaser's name and mailing address to the following address:

Tristar Products, Inc.  
500 Returns Road  
Wallingford, CT 06495

# COPPERXCHEF™

## *BBQ Grill*

We are very proud of the design and quality  
of our **Copper Chef™ BBQ Grill**.

---

This product has been manufactured to the highest standards.  
Should you have any problem, our friendly customer service staff  
is here to help you.  
**973-287-5176**



Distributed by:  
Tristar Products, Inc.  
Fairfield, NJ 07004  
© 2018 Tristar Products, Inc.  
Made in China  
CCBG\_IB\_Q\_K47377\_K47407\_ENG\_V1\_180306