

# COPPER CHEF DIAMOND™

## Important Safeguards

- The use of kitchen utensils other than those made specifically for nonstick surface cookware will damage this product and could void your warranty. We recommend using only nonmetallic utensils made of plastic, silicone, wood, or bamboo. Remove any stickers or labels from the Unit.
- When using this cookware, handle all hot surfaces with dry pot holders or cooking mitts. Handling hot cookware with wet cooking mitts or pot holders can produce steam, causing serious burns to skin.
- To avoid damage to counter tops and other surfaces, always place hot bakeware on heat-resistant trivets or pads.
- Children should not be permitted to use this or any kitchen appliance.
- The bakeware is coated with a nonstick coating. If this coating appears to be damaged, discontinue use immediately and contact customer service.
- Allow the bakeware to cool completely before submerging in water. Exposing a hot pan to cool water may cause the pan to warp or produce hot steam and/or splattering hot water that could cause personal injury.
- Temperature-Resistant Coating up to 450° F in the oven.

---

## Before First Use

1. Wash in warm water with mild, nonabrasive soap.
2. Allow to dry completely.

---

## Care & Cleaning

- Although Copper Chef Diamond bakeware is dishwasher safe, we recommend cleaning by hand.
- Wash with warm water, nonabrasive soap, and a nonmetallic sponge or cloth.
- Do not use baking soda, detergents, or other harsh soaps or solutions.
- Do not use cooking sprays directly on Copper Chef Diamond bakeware.
- If using under the broiler, watch food closely so it does not overcook.
- We recommend using only nonmetallic utensils made of plastic, silicone, wood, or bamboo.
- Direct exposure to other cook or bakeware can result in unwanted scratches.
- Do not stack or store with any other cookware or bakeware unless a protective layer is used.

---

## Manufacturer's 60-Day Limited Warranty

The manufacturer warrants that all parts and components are free of defects in materials and workmanship for 60 days. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be provided for the 60-day warranty to be applicable.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

## Procedure for Replacement or Return within 60 Days:

Your item is covered by our 60-day money-back guarantee, which starts upon receipt of your item. To return the product, the original purchaser must package the product securely and include the following information: (1) name, (2) address, (3) the reason for return or request for refund or replacement, and (4) either proof of purchase or order number. Place the information inside an envelope, place the envelope inside the package with the unit, and mail the package to the address listed below:

Tristar Products, Inc.  
500 Returns Road  
Wallingford, CT 06495

**SAVE THESE INSTRUCTIONS**

CCDB\_INST\_TP\_ENG\_V2\_180911