



• TITAN PEELER PRO •

**PEELER PRO  
AND MANDOLINE  
ATTACHMENT**

---

**Owner's Manual**

Save These Instructions – For Household Use Only

# Important Safety Warning and Instructions

## **WARNING**

- Use extreme caution when using this product as the blades are very sharp.
- To avoid personal injury, never handle the peeler by the blade.
- When using the slicing board, make sure to leave the top on the produce you are slicing. This acts as a buffer to your fingers.

## To Use the Peeler

- Make sure produce is dry before you begin the peeling process.
- We recommend placing the item to be peeled on a cutting board. Hold the unit with one hand and peeler in the other.
- Carefully hold the item you are peeling by the top while slowly shaving in a downward and then upward motion. Excessive speed can lead to accidental injury.
- Use the built-in garnishing features on the Julienne Tool to create garnishes.
- The built-in garnishing features can also be used to remove imperfections on produce.



**CAUTION: Blades are extremely sharp!**  
**KEEP AWAY FROM CHILDREN.**  
Learn safe cooking practices before use.

## To Use the Mandoline Attachment

1. Insert Mandoline through the middle section of the serrated peeler with the point facing the same direction as the handle.

2. Move the peeler up until the blade lands in the designated opening. The teeth should be facing outward.

3. Hold the ensemble on an angle, resting the bottom of the slicing board on a cutting board. Without applying too much pressure, slowly move the item to be sliced in a back and forth motion.

## Care

- The Titan Peeler is dishwasher safe and can be placed in the top rack, flat with blades facing down, to avoid accidental contact.
- Use extra caution when hand washing the peeler blades. We recommend using a non-abrasive sponge with warm, soapy water. Rinse well and lay flat to dry.



---

**SAVE THESE INSTRUCTIONS**



## 60-Day Money-Back Guarantee

The Copper Chef Titan Peeler Pro is covered by a 60-day money-back guarantee. If you are not 100% satisfied with your product, return the product and request a replacement product or refund. Proof of purchase is required. Refunds will include the purchase price, less processing and handling. Follow the instructions in the Return Policy below to request a replacement or refund.

**Replacement Guarantee Policy:** Our products, when purchased from an authorized retailer, include a 1-year replacement guarantee if your product or component part does not perform as expected, the guarantee extends only to the original purchaser and is not transferable. If you experience an issue with one of our products within 1 year of purchase, return the product or the component part for replacement with a functionally equivalent new product or part. The original proof of purchase is required, and you are responsible to pay to return the unit to us. In the event a replacement unit is issued, the guarantee coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing guarantee, whichever is later. Tristar reserves the right to replace the unit with one of equal or greater value.

**Return Policy:** If, for any reason, you would like to replace or return the product under the money-back guarantee, your order number can be used as the return merchandise authorization number (RMA). If the product was purchased in a retail store, return the product to the store or use "RETAIL" as the RMA. Return your product to the address provided below for a replacement, which will incur no additional processing and handling fees, or for the refund of your purchase price, less processing and handling. You are responsible for the cost of returning the product. You can locate your order number at [www.customerstatus.com](http://www.customerstatus.com). You can call customer service at 973-287-51118 or email [info@tvcustomerinfo.com](mailto:info@tvcustomerinfo.com) for any additional questions. Pack the product carefully and include in the package a note with (1) your name, (2) mailing address, (3) phone number, (4) email address, (5) reason for return, and (6) proof of purchase or order number, and (7) specify on the note whether you are requesting a refund or replacement. Write the RMA on the outside of the package.

**Send the product to the following return address:**

Copper Chef Titan Peeler Pro • Tristar Products • 500 Returns Road • Wallingford, CT 06495

If the replacement or refund request has not been acknowledged after two weeks, please contact Customer Service at 973-287-5118.

**Refund:** Refunds requested within the money-back guarantee timeframe will be issued to the payment method used at purchase if the item was purchased directly from Tristar. If the item was purchased from an authorized retailer, proof of purchase is required, and a check will be issued for the item and sales tax amount. Processing and handling fees are non-refundable.



Distributed by:  
Tristar Products, Inc.  
Fairfield, NJ 07004  
© 2020 Tristar Products, Inc.  
Made in China  
CCTPP\_IB\_TP\_ENG\_V1\_200615