

  
EMERIL LAGASSE

# PRO ESPRESSO MACHINE



## OWNER'S MANUAL

MODEL: EM0112-OSL

### SAVE THESE INSTRUCTIONS – FOR HOUSEHOLD USE ONLY

When using electrical appliances, basic safety precautions should always be followed.  
Do not use this appliance until you have read this manual thoroughly.



# PRO ESPRESSO MACHINE

## Before You Begin

The **Emeril Lagasse™ Pro Espresso Machine** will provide you many years of reliable service. Before you begin, it's very important that you read this entire manual, making certain that you are totally familiar with this appliance's operation and precautions.

## Unit Specifications

Model Number	Power Supply	Rated Power
EM0112-0SL	120V~ 60Hz	1350 Watts

# Table of Contents

---

---



<b>Unit Specifications</b>	<b>2</b>
<hr/>	
<b>IMPORTANT SAFEGUARDS</b>	<b>4</b>
<hr/>	
<b>Parts &amp; Accessories</b>	<b>6</b>
<hr/>	
<b>Instructions for Use</b>	<b>7</b>
Before First Use	7
Auto Shutoff	7
Filling	7
Making Espresso	8
Steam/Hot Water Functions	10
Tips	11
<hr/>	
<b>Care &amp; Maintenance</b>	<b>12</b>
<hr/>	
<b>Troubleshooting</b>	<b>13</b>
<hr/>	
<b>Warranty</b>	<b>14</b>
<hr/>	

# IMPORTANT SAFEGUARDS

---

## Please Read and Save this Use and Care Book.

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using.
2. To protect against fire, electric shock, and injury to people, do not immerse the cord, plugs, or appliance in water or other liquids.
3. Avoid contact with moving parts.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
5. The use of attachments not recommended or sold by the manufacturer may cause fire, injury, or electric shock.
6. Do not use outdoors.
7. Do not let the power cord hang over the edge of the table or counter or touch hot surfaces, including the stove.
8. Clean the product and all other accessories after each use.
9.  Do not immerse in any liquid.
10. The coffee-maker shall not be placed in a cabinet during use.
11.  The surfaces of the appliance will get hot. Residual heat will keep the surfaces hot after use.
12. The surface of the heating element is subject to residual heat after use.
13. Do not touch hot surfaces. Use handles or knobs.
14. Use the appliance according to these instructions. Any misuse may cause potential injury, electric shock or other hazards. Do not use the appliance for anything other than its intended use.
15. This appliance is not intended for use by children or by people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge. Children should be supervised to ensure that they do not play with the appliance.
16. Close supervision is necessary when any appliance is used near children.
17. Do not place on or near a hot gas or electric burner, or in a heated oven.
18. **WARNING:** To avoid the risk of injury, do not open the brew chamber during the brew process.
19. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
20. To disconnect, turn any control to "OFF", then remove plug from wall outlet.

---

## SAVE THESE INSTRUCTIONS.

# IMPORTANT SAFEGUARDS

---

## Safety Features

### **POLARIZED PLUG (120V models only)**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### **TAMPER-RESISTANT SCREW**

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

### **ELECTRICAL CORD**


1. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Extension cords may be used if care is exercised in their use.
3. If a long detachable extension cord is used:
  - a) The marked electrical rating of the power cord or extension cord should be at least as great as the electrical rating of the appliance.
  - b) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
  - c) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** This appliance has important markings on the plug blade. The attachment plug or entire cord set (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced.

---

**SAVE THIS  
INSTRUCTION MANUAL.  
FOR HOUSEHOLD USE ONLY.**

# Parts & Accessories

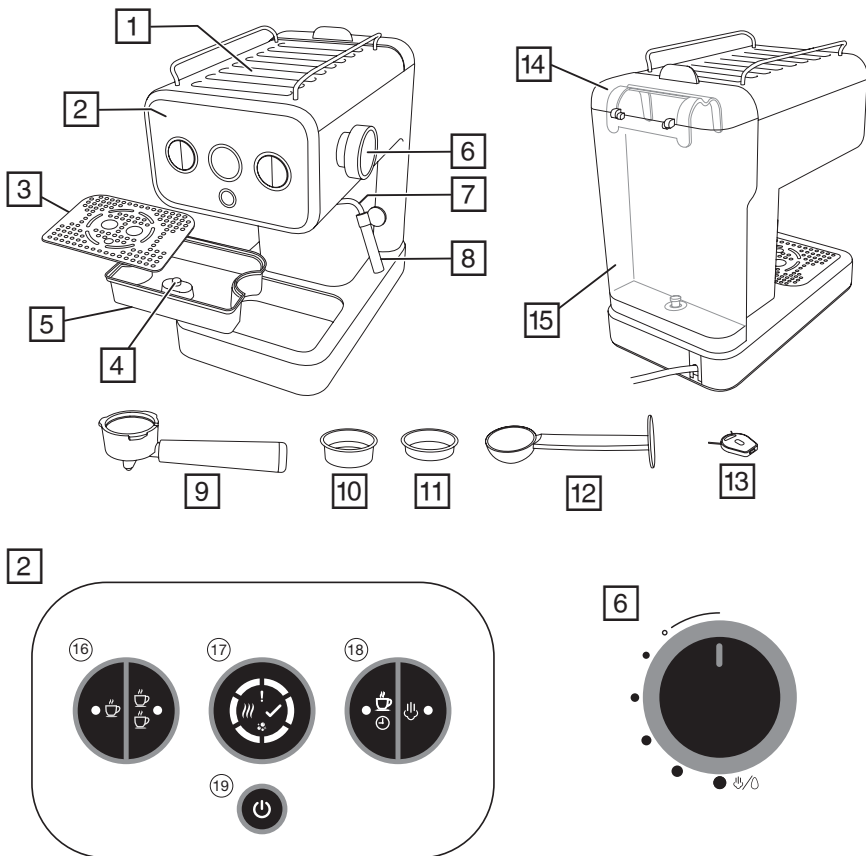

- |  |   |
|--|---|
| <b>1.</b> Cup warming plate                  | <b>11.</b> 1 shot sieve                   |
| <b>2.</b> Control panel                      | <b>12.</b> Measuring spoon/Tamper         |
| <b>3.</b> Drip tray cover                    | <b>13.</b> Cleaning tool                  |
| <b>4.</b> Drip tray full indicator           | <b>14.</b> Water tank lid                 |
| <b>5.</b> Removable drip tray                | <b>15.</b> Removable water tank           |
| <b>6.</b> Steam/hot water control knob       | <b>16.</b> Serving size selection buttons |
| <b>7.</b> Steam wand                         | <b>17.</b> Status/Mode/Warning indicator  |
| <b>8.</b> Removable panarello (steam nozzle) | <b>18.</b> Manual/Steam buttons           |
| <b>9.</b> Portafilter                        | <b>19.</b> Power button                   |
| <b>10.</b> 2 shot sieve                      |   |


# Instructions for Use

 ---

## Before First Use

1. Unpack all listed contents from the packaging.
  2. Read all material, warning stickers, and labels.
  3. Remove all packing materials, stickers, and labels from the appliance. Remove any clear or blue protective film on the components before use.
  4. Wash the portafilter, sieves and the measure/tamper in warm soapy water. Rinse and dry.
  5. Before using for the first time, or if the appliance has not been used for a long time, clean it by filling and running the appliance without coffee. Follow the instructions under FILLING and MAKING ESPRESSO but without adding any coffee.
  6. Clean the steam system by following the instructions under CARE AND MAINTENANCE.
- 


## Auto Shutoff

After 25 minutes of inactivity, your espresso maker will shut off. To turn it back on, press .

---

## Filling

1. Remove the water tank by lifting it upwards (Fig A).
2. Fill the water tank with cold, fresh water to the **max** marking (Fig. B).
3. Refit the water tank (Fig. C). Ensure it is correctly fitted and fully seated.

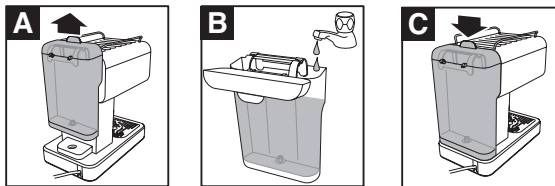

# Instructions for Use






## Making Espresso

Espresso can be enjoyed on it's own or used for many popular espresso based variations such as Latte, Cappuccino, Americano, etc. Your espresso maker can make a single shot (approx. 30ml), or a double shot (60ml) of espresso.



Your Espresso maker can make drinks automatically or under manual control.



### Filling the portafilter

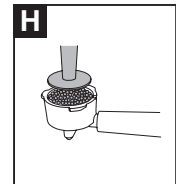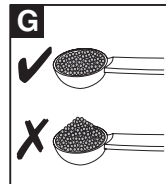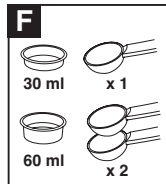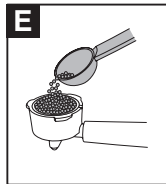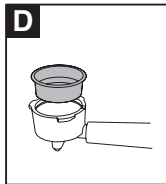1. Decide whether you are making a single shot or double shot.
2. For a single shot fit the 1 shot (smaller) sieve into the portafilter; for a double fit the 2 shot (larger) sieve (Fig. D). For ESE (easy serving espresso) pods use the 1 shot sieve.
3. Use the measure to fill the sieve (Fig. E). For a single shot use 1 measure and for a double use 2 measures (Fig. F). The coffee in the measure should be level and not heaped (Fig. G).
4. Lightly tamp (compress) the coffee into the portafilter using the flat end of the measure (Fig. H) until it is level. You need to compact the coffee just enough to create resistance to the water as it passes through the coffee. Too loose and the water passes easily through the coffee and the full flavour won't be extracted. Too tight and it will be difficult for the water to pass through the coffee and the flavour will be harsh and bitter.



### Fitting the portafilter

1. Make sure the rim of the portafilter is free from any coffee debris. Fit it into the machine with the handle facing out to the left so that is aligned with the  mark (Fig. J).
2. Push the portafilter upwards then turn it to the right until it stops (Fig. K). To remove the portafilter, turn it to the left until the handle lines up with the  mark.

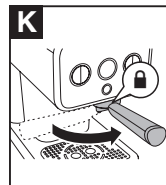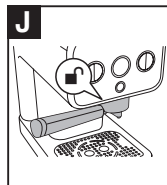










# Instructions for Use

 ---


## Automatic One and Two Cup Mode

Your Espresso maker can make one or two cups with the press of a single button. You can make a single shot into one cup, a double shot into one cup or a double shot shared between two cups by placing two cups side by side under the outlet and preparing the portafilter with the 2 shot sieve.

1. Fill the water tank, then add the required amount of coffee to the portafilter and fit it.
2. Press the  button to switch your Espresso maker on.
3. Your Espresso maker will start its pre-heat cycle. The six segments in the display and the  icon will light up. The first segment will flash. The flashing segment will go off and the next anticlockwise segment will flash. When all of the segments have gone off, and the  icon comes on, your Espresso maker is heated and ready.
4. Place one or two cups onto the drip tray.
5. For one cup, press the  button; for two cups press the  button.
6. The six segments in the display will cycle until they all go off in a similar way to the pre-heat cycle but without showing the  icon.
7. When the coffee is ready, all six segments will have gone off and the  icon will come on.  
**NOTE:** If your Espresso maker needs to pre-heat once the coffee is brewed, the pre-heat icon  will show instead of the ready icon .

## Manual Mode

This mode allows you to control the amount of coffee your Espresso maker dispenses.

1. Fill the water tank, then add the required amount of coffee to the portafilter and fit it.
2. Place one or two cups onto the drip tray.
3. Press and hold the  button. The button light will come on.
4. Hold the button until the required amount of coffee has been dispensed.

**NOTES:** The maximum run time in manual mode is 60 seconds.

The display will show a single segment at a time in a moving anticlockwise pattern while the button is held down.

---

# Instructions for Use




---

## Steam/Hot Water Functions

The steam/hot water functions can be used to heat milk, froth milk and heat drinks that have cooled. Steaming and hot water functions will always be manually controlled.



**IMPORTANT:** The appliance requires a short cooling period after the steaming or frothing function is completed and will not be able to brew immediately.

### Steaming milk

1. Press the steam button .
2. The six segments in the display and the  icon will light up. The first segment will flash. The flashing segment will go off and the next anticlockwise segment will flash. When all of the segments have gone off, and the  icon comes on, your Espresso maker is ready to make steam.
3. Fill a small jug with milk.
4. Hold the jug under the steam nozzle with the nozzle beneath the surface of the milk.
5. Turn the steam/hot water control knob counterclockwise. The further counterclockwise you turn the control knob, the more steam is produced.
6. When the milk is heated to your satisfaction, turn the steam/hot water control knob clockwise to the off (O) position.
7. Immediately clean the steam nozzle. Refer to the Care and Maintenance section for cleaning instructions.

### Frothing milk

1. Follow steps 1 and 2 under 'Steaming milk'. Use cold milk from the refrigerator for best results.
2. Hold the jug under the nozzle as above and open the steam/hot water control knob as desired.
3. To make frothy milk with large bubbles, hold the nozzle just under the surface of the milk and make circular motions with the jug as steam is released (Fig. L).
4. To make frothy milk with small bubbles (micro foam), hold the nozzle fully under the surface of the milk and make circular motions with the jug as steam is released (Fig. M).
5. Turn the steam/hot water control knob clockwise to the off (O) position when you are finished.
6. Immediately clean the steam nozzle. Refer to the Care and Maintenance section for cleaning instructions.

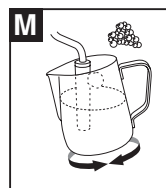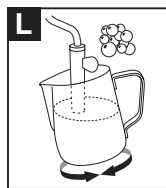

# Instructions for Use

---

## Hot water

1. Make sure machine has been pre-heated.
2. Hold a suitable container under the steam nozzle.
3. Turn the steam/hot water control knob fully counterclockwise to the ☕/☉ position.
4. Hot water will come out of the steam nozzle for up to 90 seconds.
5. Turn the steam/hot water control knob clockwise to the off (O) position when you are finished.

## Heating drinks

1. Follow the directions under 'Steaming milk' but holding the cooled drink under the steam nozzle instead of the milk.

## Cleaning the steam nozzle after each use

1. Clean the steam nozzle and the swivel arm immediately after every use.
2. Immerse the steam nozzle in a cup of clean water.
3. Turn the steam/hot water control knob counterclockwise. Let steam escape into the clear water for several seconds.
4. Repeat the process several times if necessary.
5. Finally, carefully remove the steam nozzle and wipe it and the swivel arm with a clean damp cloth before replacing it.

---

## Tips

- Place your espresso cups on top of the unit where they will be gently warmed.
- To get a hotter espresso, warm the portafilter before use. Fit the sieve into the portafilter, fit the portafilter and run the brewing process for 5-10 seconds to heat the filter up. Then, remove the portafilter and use it as normal to make espresso. Be aware when handling the portafilter and sieve that they will be hot after doing this.
- After several uses of the steam function, the temperature of the unit can become high and this will prevent further brewing until the machine has cooled a little. You can use the hot water function to cool the machine more quickly. The machine will release steam at first; when water begins to dispense, the unit will be cooled to brewing temperature again.


# Care & Maintenance

---

## Cleaning






1. Unplug the appliance and let it completely cool down.
2. Clean the exterior surfaces and the steam nozzle with a slightly damp cloth and then dry them thoroughly. Make sure that no water enters the product interior. The steam nozzle tip can be removed by pulling it downwards and it can then be washed separately.
3. Remove the portafilter and sieve and empty out the coffee grounds. Wash under running water and dry thoroughly.
4. Wipe the area on the machine where the portafilter fits.
5. Empty the drip tray when you have finished using the machine, or when the drip tray full indicator pops up.
  - Use the cleaning tool to unblock the openings in the portafilter.
  - The steam nozzle, sieves, drip tray and drip tray cover can be cleaned in a dishwasher.

## Descaling

After approximately 500 cycles, the clean icon  will appear in the display indicating that the unit should be descaled. This is a warning and will not affect coffee making but the icon will remain lit until it is reset after descaling the appliance.

Over time, calcium deposits or “scale” may build up in your brewer. Scale is non-toxic, but if left unattended, can hinder brewer performance and cause premature failure. Regularly descaling your machine helps to maintain beverage quality, as well as the lifespan of the heating element, and other internal parts that come in contact with water throughout the brew process.

A full cleaning with vinegar is recommended once a month. More frequent cleanings may be required in areas with higher water hardness. If using a proprietary descaling product, follow the manufacturer's instructions.

1. Pour fresh water and the specified amount of decalcifier into the water tank. Use a 50/50 mix when using a vinegar solution.
  2. Repeatedly start the brewing process and also use the ‘hot water’ process to clean the steam nozzle and internal components.
  3. Do this until the water tank is empty. If necessary, repeat this process.
  4. After descaling, rinse the product several times by brewing water with no coffee to remove any decalcifier residue.
  5. To reset the light, hold the / button and the manual / button at the same time for 5 seconds. The clean icon  will go off.
-

# Troubleshooting

## General:



PROBLEM	POSSIBLE CAUSE	SOLUTION
No espresso is made.	Water tank empty.	Fill the water tank.
	Portafilter or sieve is blocked.	Remove and clean.
	Machine needs descaling.	Descale the machine.
	Grind is too fine or coarse.	Grind the coffee to the correct consistency.
	Too much tamping pressure was used.	Empty sieve and re-add coffee using less tamping pressure.
Espresso leaks from around the portafilter.	The portafilter is not fitted correctly.	Remove and refit the portafilter. Make sure it is turned fully to the right until it won't turn any further.
Portafilter can't be fitted.	Too much coffee in the sieve.	Use the supplied measure/tamper as directed.
	Debris around the portafilter fitting.	Clean the area where the portafilter fits.
Coffee tastes weak.	Not enough coffee in the sieve.	Use the supplied measure/tamper as directed.
	Grind is too fine or coarse.	Grind the coffee to the correct consistency.
	Coffee too loose in sieve.	Tamp the coffee down with more pressure.




The caution ! icon will appear in the display under the following circumstances:

CAUSE	SOLUTION
The steam/hot water control knob is in the open position during brewing.	Close the control knob.
Manual brewing longer than 60 seconds.	Don't hold the ☰/⊕ button for longer than 60 seconds in manual mode.
Steaming longer than 180 seconds.	Don't use the steam/hot water function for longer than 180 seconds.
Hot water dispensed for longer than 90 seconds.	Don't try to dispense hot water for longer than 90 seconds.
The steam/hot water control knob is in the open position when the unit is switched on.	The unit will not brew. Close the control knob.

# Troubleshooting

---

 
The pre-heat  icon and the countdown display segments along with the flashing caution  icon will appear in the display under the following circumstances:

CAUSE	SOLUTION
Attempting to brew coffee before the unit has reached the correct temperature.	Allow the unit to pre-heat fully indicated by the  icon.
Attempting to create steam before the unit has reached the correct temperature.	Allow the unit to reach the correct temperature indicated by the  icon.
Attempting to dispense hot water before the unit has reached the correct temperature.	Allow the unit to reach the correct temperature indicated by the  icon.

---

# Recycling

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.



# EMERIL LAGASSE

## **TWO-YEAR LIMITED WARRANTY**

### **(Applies only in the United States and Canada)**

For service, repair or any questions regarding your appliance, call the appropriate 800 number listed within this section. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

### **What does it cover?**

Any defect in material or workmanship provided; however, Empower Brands, LLC's liability will not exceed the purchase price of product.

### **For how long?**

Two years from the date of original purchase with proof of purchase.

### **What will we do to help you?**

Provide you with a reasonably similar replacement product that is either new or factory refurbished.

### **How do you get service?**

Save your receipt as proof of date of sale.

Visit the online service website at [www.prodprotect.com/emeril](http://www.prodprotect.com/emeril), or call toll-free

**1-800-768-7806**, for general warranty service.

If you need parts or accessories, please call

**1-800-738-0245**.

### **How does state law relate to this warranty?**

This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

### **What does your warranty not cover?**

Damage from commercial use

Damage from misuse, abuse or neglect

Products that have been modified in any way

Products used or serviced outside the country of purchase

Glass parts and other accessory items that are packed with the unit

Shipping and handling costs associated with the replacement of the unit

Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

### **Are there additional warranty exclusions?**

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.



# PRO ESPRESSO MACHINE

We are very proud of the design and quality of our  
**Emeril Lagasse™ Pro Espresso Machine.**

---

This product has been manufactured to the highest standards. Should you have any questions, our friendly customer service staff is here to help you.

To contact us, call us at 1-800-768-7806.

The Emeril Lagasse trademarks are owned by Martha Stewart Living Omnimedia, Inc., used under license.  
© 2024 Martha Stewart Living Omnimedia, Inc., used under license.  
All other marks are trademarks of Empower Brands, LLC.

Dist. by: Empower Brands, LLC, Middleton, WI 53562  
® registered trademark and ™ trademark of Empower Brands, LLC.

© 2024 Empower Brands, LLC. All rights reserved. 08/24

Made in China.

T22-9003335-C  
31136 E