

# Quick Start Guide

## PowerXL™ products that excel AIR FRYER HOME PRO

See owner's manual for complete instructions and important safety information before using this product.

### STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the appliance. If you are preheating the appliance, let the appliance preheat for 3 minutes before adding food.

### STEP 2



Arrange food on Crisper Trays and place the Crisper Trays inside the appliance.

### STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

### STEP 4



After the set cooking time has expired, check the food and remove the food using oven mitts. The fan will run for 20 seconds to cool down, and the appliance will automatically shut off.

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).