

Quick Start Guide

PowerXL™ products that excel

SLIMLINE AIR FRYER

See owner's manual for complete instructions and important safety information before using this product.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

STEP 1



Remove Basket

Pull the handle straight out.

STEP 2



Load Basket

Arrange the food you are cooking in the Outer Basket. If you are using one of the cooking accessories, such as the Inner Basket, slide the legs of the Net Rack into the slots in the Outer Basket and place the Inner Basket on the Net Rack before adding your food to the Inner Basket.

STEP 3



Return Basket to Appliance

Push the handle straight in until it clicks.

STEP 4



Power Appliance On

Set the time and temperature. Follow instructions specific to your recipe.

STEP 5



Remove Basket

Set the Outer Basket on a secure, heat-resistant surface. Use tongs to remove food.