

COPPER X CHEF™
BACON CRISPER




User Guide
For All Bacon Crisper Sizes

COPPER CHEF™

BACON CRISPER

Includes:

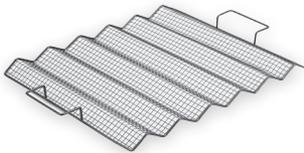

Elevated Nonstick Crisp-Wave Rack

The Crisp-Wave Rack stands on top of the Drip Pan/Baking Sheet. The rack allows heated air to pass through and circulate around all 360° of your food.



Drip Pan/Baking Sheet

The nonstick Drip Pan/Baking Sheet catches crumbs, drips, and splatters to keep your oven clean and safe.

IMPORTANT: A baking sheet needs to be placed under the Crisp-Wave Rack.



Fully Assembled Bacon Crisper

The Bacon Crisper cooks all sides of your food evenly without burning or turning. You never need to flip your food.

- Your meal cooks to crispy, crunchy perfection without frying.
- No added grease or oil means less fat and fewer calories.
- The Bacon Crisper is oven safe.

Important Safeguards

- Use nonmetal utensils only.
- The Bacon Crisper will get hot. Use oven mitts or other heatproof materials when removing from oven.
- Allow the Bacon Crisper to cool completely before submerging in water. Exposing a hot pan to cool water may cause the pan to warp. Dangerous, hot steam, and/or splattering hot water may result.
- To prevent spillage, never let grease or oil build up while cooking. It is recommended to drain the the grease or oil in a container so the Bacon Crisper does not overflow.



Using Your Bacon Crisper:

Before use, wash in warm water with mild, nonabrasive soap. Allow to dry completely. Always follow specific recipe directions for oven time and temperature. All ovens are calibrated differently. For best results, monitor the cooking process closely the first few times you use the Bacon Crisper.

1. Preheat the oven if necessary.
2. There is no need to add any extra butter, grease, or oil.
3. Stand the Crisp-Wave Rack on the Drip Pan.
4. Place food onto the Crisp-Wave Rack.
5. Place the Crisp-Wave Rack and the Drip Pan into the oven.
6. When removing the Bacon Crisper from the oven, use oven mitts or other heatproof material to protect your hands.
7. Use extreme caution if the Drip Pan is full of oil or grease. Handle carefully to avoid spills.

Cleaning & Care

- Although the Bacon Crisper is dishwasher safe, we recommend cleaning by hand.
- Wash with warm water, nonabrasive soap, and a nonmetallic sponge or cloth.
- Do not use baking soda, detergents, or other harsh soaps or solutions.
- Do not use cooking sprays directly on the Bacon Crisper.
- For added flavor, it is best to use natural oils, such as olive, canola, and peanut oil.
- If using under the broiler, watch food closely so the food does not overcook.
- Only nonmetallic utensils made of plastic, silicone, wood, or bamboo should be used.
- Remove all food from the Bacon Crisper before cutting or slicing.
- Direct exposure to other cook- or bakeware can result in unwanted scratches. Do not stack or store the Bacon Crisper with any other cook- or bakeware unless a protective layer is used.

Bacon Crisper Suggested Cooking Times & Temperatures

- Cooking times may vary depending on oven and oven size.
- When cooking frozen food, consult packaging for cooking times.
- Additional time may be needed since food does not come in direct contact with baking sheet.
- Food will not burn as easily because it does not come in contact with the baking sheet.
- Always use the Drip Pan to catch any grease or food from dripping into the oven.
- Breaded items may require a light coating of spray oil.

Food	Temperature (°F)	Cooking Time
Frozen Chicken Wings	450°	20 mins.
Frozen French Fries (Thick Cut)	425°	25 mins.
Pigs in a Blanket (Frozen)	450°	20 mins.
Bacon (Regular Cut)	450°	15-18 mins.
Bacon (Thick Cut)	450°	20-22 mins.
Fish Sticks	450°	20 mins.
Mozzarella Sticks	450°	15 mins.
Meatballs (Fresh 2 oz)	450°	20 mins.
Sausages	450°	25-30 mins.
Breakfast Sausage	450°	15-18 mins.



COPPER X CHEF™
BACON CRISPER

Manufacturer's 60-Day Limited Warranty

The manufacturer warrants that all parts and components are free of defects in materials and workmanship for 60 days. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Procedure for Replacement or Return within the 60 Days:

To return the product for replacement or refund within the 60 days, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and your order number on the package to the following address:

Tristar Products, Inc.,
500 Returns Road,
Wallingford, CT 06495.



Distributed By:

Tristar Products, Inc. • Fairfield, NJ 07004 • 973-287-5195 • www.BuyCopperCrisper.com