



Perfect Pizza & Crisper Pan™



Owner's Manual

Save These Instructions - For Household Use Only

Warranty Information Included



Do not use the *Perfect Pizza & Crisper Pan™* until you have read this manual thoroughly.



Caution

Hot surfaces when heated.
Read all instructions and safeguards before use.

IMPORTANT SAFEGUARDS



SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.


- The use of kitchen utensils other than those made specifically for nonstick surface cookware will **damage** this product and could void your warranty. We recommend using only nonmetallic utensils made of plastic, silicone, wood, or bamboo. **Do not** cut pizza while still in the pan.
- When using this cooking system, **handle** all hot surfaces, including the spring form release lever, with dry pot holders or cooking mitts. Handling hot cookware with wet cooking mitts or pot holders can produce steam **causing** serious burns to skin.
- To **avoid** damage to counter tops and other surfaces, **always** place hot cookware on heat resistant trivets or pads.
- Children **should not** be permitted to use this or any kitchen appliance.
- The **Perfect Pizza & Crisper Pan** is coated with a nonstick coating. If this coating appears to be damaged, **discontinue use** immediately and contact customer service.
- **Allow** the **Perfect Pizza & Crisper Pan** to cool completely before submerging in water. Exposing a hot pan to cool water may **cause** the pan to warp or produce hot steam and/or splattering hot water that could **cause** personal injury.

Before First Use



Before first use, wash in warm water with mild, nonabrasive soap. Allow to dry completely. Always follow specific recipe directions for oven time and temperature.

Features: Nonstick Coating · Air Crisp Technology (Pizza/Crisper Screen) · Dishwasher Safe (we recommend hand washing for longer lasting results.)

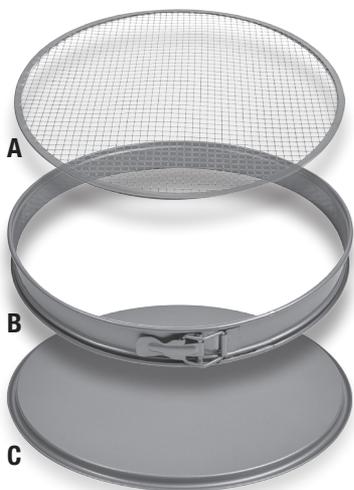

The **Perfect Pizza & Crisper Pan** has been shipped with the following components. If anything is missing, please contact manufacturer.

A. Pizza/Crisper Screen

Used for thin crust pizza, crispy pizza, or when combined with Spring Form and Pan, it is perfect for air frying.

B. Spring Form Wall

Can be used 3 ways: with the screen on the bottom; with the double sided walled pan on the bottom; or double sided walled pan on the bottom and the screen on the top as an air fryer.

C. Double Sided Pizza Pan

Used for thin crust or traditional style pizza.

Using the Perfect Pizza & Crisper Pan



1B



1A



2



3A



3B



4



1. Thin Crust: Using the Pan with raised surface facing down (1A) or the Screen (1B). Spread dough to edge at even height. Add toppings and bake to taste.

2. Traditional Crust: Use Pan with raised edge facing up. Spread dough out from center creating a slightly higher outer edge by lightly pressing against pan rim. Add toppings and bake to taste.

Tip: Keeping sauce away from the edges of the dough will create a thicker crust in that area.

3A. Deep Dish: Assemble Pan with Spring Form Wall. Spread dough, gently pushing it up against sides so that it is thicker around the edge. Add toppings and bake to taste.

3B. Extra Crispy Pizza: Assemble Screen and Spring Form Wall. Gently place pre-stretched dough on screen so that it comes close to edge. Add toppings, place in oven and bake to taste.

4. Air-Fried Snacks: Assemble Pan, Spring Form and Screen altogether. Then simply place your favorite snacks such as fries, chicken fingers or mozzarella sticks, on the Screen. Place in preheated oven and air fry to desired crispness.

Tip: Always preheat oven for best results.

Note: When using the Screen, do not press dough through the screen surface.

⚠ Warning

Remove pizza from pan or screen before cutting. Pizza cutters or knives can damage the cookware's nonstick surface.

Care & Cleaning



- Although the **Perfect Pizza & Crisper Pan** is dishwasher safe, we recommend cleaning by hand.
- Wash with warm water, nonabrasive soap, and a nonmetallic sponge or cloth.
- Do not use baking soda, detergents, or other harsh soaps or solutions.
- If using under the broiler, watch food closely so it does not overcook.
- We recommend using only nonmetallic utensils made of plastic, silicone, wood, or bamboo.
- Remove pizza from the **Perfect Pizza & Crisper Pan** before cutting or slicing.
- Direct contact to other cook or bakeware can result in unwanted scratches.
- Do not stack or store the **Perfect Pizza & Crisper Pan** with any other cook or bakeware unless a protective layer is used.

Manufacturer's Sixty Day Limited Warranty

The manufacturer warrants that all parts and components are free of defects in materials and workmanship for 60 days from the date the product is received. This warranty is valid only in accordance with the conditions set forth below:

1. Normal wear and tear are not covered by this warranty. This warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.
2. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated. This warranty is void if the product has been subject to accident, misuse, abuse, improper maintenance or repair, or unauthorized modification.
3. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
4. Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this warranty. The manufacturer shall not be liable for any incidental or consequential damages for breach of this warranty or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
5. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Procedure for Warranty Repairs or Replacement:

If warranty service is necessary, the original purchaser must pack the product securely and send it postage paid with a description of the defect, proof of purchase, and a check or money order for \$7.99 to the following address:
Tristar Products, Inc. 500 Returns Road, Wallingford, CT 06495.



Distributed by:
Tristar Products, Inc.
Fairfield, NJ 07004
© 2017 Tristar Products, Inc.
973-287-5123
CCPP_IB_TP_ENG_V2_170605