



2-Piece Set Includes:



Elevated Nonstick Mesh Crisping Tray

Elevated Nonstick Mesh Tray stands on top of the Nonstick Copper Chef Cookie Sheet. It allows heated air to pass through and circulate around all 360° of your food.

Nonstick Cookie Sheet

Nonstick Cookie Sheet catches crumbs, drips, and splatters to keep your oven clean and safe.

IMPORTANT: A baking tray is required to be placed under the Copper Crisper Mesh Crisping Tray. The Nonstick Cookie Sheet is included. Any standard baking tray, slightly larger than the Copper Crisper, can be used.



Fully Assembled Copper Crisper

Copper Crisper cooks all sides of your food evenly without burning or turning. You never need to flip your food.

- Your meals cook to crispy, crunchy, golden brown perfection without frying. No added grease or oil means less fat & calories.
- Copper Crisper is safe to use as a grill basket on outdoor grills.
- Copper Crisper is oven safe.



Important Safeguards

- Use nonmetal utensils only.
- Copper Crisper will get hot. Use oven mitts or other heatproof materials when removing from oven.
- Allow Copper Crisper to cool completely before submerging in water. Exposing a hot pan to cool water may cause the pan to warp. Dangerous, hot steam and/or splattering hot water may result.

Using Your Copper Crisper:

Before use, wash in warm water with mild, nonabrasive soap. Allow to dry completely. Always follow specific recipe directions for oven time and temperature. All ovens are calibrated differently. For best results, monitor the cooking process closely the first few times you use the Copper Crisper.

- Preheat oven if necessary.
- There's no need to add any extra butter, grease, or oil.
- Stand the Elevated Mesh Tray on the Nonstick Cookie Sheet.
- Place food in Mesh Tray.
- Place the Mesh Tray and Cookie Sheet into oven.
- When removing Copper Crisper from the oven, use oven mitts or other heatproof material to protect your hands.

Cleaning & Care

- Although the Copper Crisper is dishwasher safe we recommend cleaning by hand.
- Wash with warm water, nonabrasive soap, and a nonmetallic sponge or cloth.
- Do not use baking soda, detergents, or other harsh soaps or solutions.
- Do not use cooking sprays directly on the Copper Crisper.
- For added flavor, it's best to use natural oils such as olive, canola, and peanut oil.
- If using under the broiler, watch food closely so it does not overcook.
- Only nonmetallic utensils made of plastic, silicone, wood, or bamboo should be used.
- Remove all food from the Copper Crisper Elevated Mesh Tray before cutting or slicing.
- Direct exposure to other cook or bakeware can result in unwanted scratches. Do not stack or store Copper Crisper with any other cook or bakeware unless a protective layer is used.

Copper Crisper Suggested Cooking Times and Temperatures

- Cooking times may vary depending on oven and oven size.
- When cooking frozen food, consult packaging for cooking times.
- Additional time may be needed since food does not come in direct contact with metal pan.
- Food will not burn as easily because it doesn't come in contact with the metal pan.
- Always use a tray to catch any grease or food from dripping into the oven.
- Breaded items may require a light coating of spray oil.

Food	Temperature	Cooking Time
Frozen Chicken Wings	425°	35-40 min
Frozen French Fries	425°	30-35 min
Frozen Tater Tots	425°	20-23 min
Frozen Pizza	400°	15-18 min
Frozen Chicken Fingers	400°	25-30 min
Broccoli	425°	30-35 min
Cauliflower	425°	40 min
Bacon (Thick Cut)	400°	20-23 min
Chicken Breast (8 oz)	425°	25-30 min

MANUFACTURER'S SIXTY DAY LIMITED WARRANTY

The manufacturer warrants that all parts and components are free of defects in materials and workmanship for 60 days from the date the product is received. This warranty is valid only in accordance with the conditions set forth below:

1. Normal wear and tear are not covered by this warranty. This warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.
2. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated. This warranty is void if the product has been subject to accident, misuse, abuse, improper maintenance or repair, or unauthorized modification.
3. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
4. Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this warranty. The manufacturer shall not be liable for any incidental or consequential damages for breach of this warranty or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
5. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Procedure for Warranty Repairs or Replacement:

If warranty service is necessary, the original purchaser must pack the product securely and send it postage paid with a description of the defect, proof of purchase, and a check or money order for \$7.99 to the following address:
Tristar Products Inc., 500 Returns Road, Wallingford, CT 06495.

COPPER CRISPER

BY COPPER  CHEF.



Distributed By:

Tristar Products, Inc. • Fairfield, NJ 07004 • 973-287-5195 • www.GetCopperCrisper.com