

STAINLESS STEEL

Jack LaLanne's

POWER JUICER PRO™

Operating Manual

Do Not Operate
The POWER JUICER™
Before Reading This
Entire Manual.



FOR HOUSEHOLD USE ONLY



E-1181
E-1189

TABLE OF CONTENTS

Important Safeguards	3-4
Safety Features4
Parts List5
Disassembly.6
Assembly	7-8
Cleaning Your Juicer9
Equivalents	10
Troubleshooting.	11
Common Questions & Answers.	12-13
Warranty	14
Replacement Kit Order Form	15



Congratulations on being a proud owner of the brand new Power Juicer Pro!

You can now look forward to enjoying delicious and nutritious fresh juices made entirely from healthy fruits and vegetables, all while having lots of fun.

I've been juicing for 7 decades and after all this time, I believe that juicing can be the foundation of youth that helps you nourish your river of life.

Now that you have a Power Juicer Pro, I'd like to invite you to be part of the Juice Club, a wonderful worldwide community of juicers. Below is your Juice Club membership card. Being a member will allow you to have special access to Power Juicer Pro newsletters full of exciting incentives and information, including promotional offers; healthy living articles and advice; tasty juicing recipes and tips; nutritional information and much more.

Don't wait – put your membership to work by visiting <http://www.powerjuicer.com>. Enter passcode: pro2007.

Change your life, save your life and drink yourself healthy!

Thank you and Happy Juicing,

Jack LaLanne

IMPORTANT SAFEGUARDS

READ THESE SAFEGUARDS CAREFULLY BEFORE USING THIS PRODUCT!

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- **NOT FOR USE BY CHILDREN!** Keep out of the reach of children to avoid injury. This appliance is not a toy.
- Do not operate this or any appliance with a damaged AC cord or plug.
- Do not operate if appliance malfunctions, has been dropped or appears damaged in any manner. Never attempt home repairs. Only a qualified appliance technician should repair appliance before re-use.
- To avoid electric shock or serious personal injury, do not use any attachments or utensils that were not recommended or supplied by the manufacturer.
- To protect against risk of electrical shock or injury, never immerse power cord, plug, or main unit in water, or other liquids.
- Do not let Power Cord hang over the edge of table, counter, or come in direct contact with hot surfaces such as stoves.
- Make sure the Lid is attached properly and is securely locked before operating the Power Juicer. (See Assembly Step 5.)
- Make sure the motor stops completely and the unit is unplugged from the electrical outlet before disassembling, assembling or cleaning.
- Should juicer suddenly stop or develop excessive vibration or unusually loud noise, shut off and unplug unit immediately, wait for Blade to stop running, then disassemble, clean thoroughly and reassemble.
- To avoid risk of personal injury keep hands and utensils out of the juicer and away from its sharp Blade during operation. Use the Pusher, not fingers or utensils, to feed the produce into the juicer.
- Never disengage the Locking Bar during operation.
- The juicer Blade is extremely sharp. Use extreme caution when handling.
- Should food become lodged in the Chute, and moderate Pusher pressure will not dislodge it, turn the Power Switch off, allow the motor to stop completely, then unplug the AC cord, disassemble the juicer and remove the blocked food.
- Avoid personal injury. Never assemble the unit without using all components in their proper sequence, making certain the Blade is properly seated and secured in the Filter and Receptacle.

- The juicer will not run if the unit is not properly assembled. The motor has a built-in safety feature that will not allow the power to turn on unless the Locking Bar is locked in place.
- Do not use outdoors.
- Be sure to turn switch to OFF position after each use of your juicer. Make sure the motor stops completely before disassembling.
- Do not use the appliance if the rotating Filter is damaged.
 - * This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify or force the plug in any way.
- Do not operate without the pulp container in place.

SAFETY FEATURES

The Power Juicer was designed with safety in mind. We have added two important safety features: the Automatic Shut Off and the Locking Bar.

Built-In Thermal Cut Off Switch/Automatic Shut Off

Unlike other juicers, the Power Juicer is equipped with a special feature that automatically shuts off the motor should the unit become jammed or overheated during the juicing process. Prior to shut down, you will most likely hear the juicer get louder. This will indicate that something has caused the motor to strain. Should this happen, simply turn the Power Switch off and unplug the unit... follow the Disassembly, Cleaning and Assembly process, then allow the unit to cool for 10 minutes. The unit will restart and you may resume the juicing process. There are some additional reasons that could cause a "shut down". You can find them in the trouble shooting section of your operating manual on page 15.

The Locking Bar

The Locking Bar holds the juicer Lid/Pulp Guard in place and is connected to an auto shut-off switch. If the Locking Bar is not in its full upright and locked position, the juicer will not start. This is to prevent accidental contact with the spinning Blade. If the machine is not locked, the motor will not engage and the Blade will not spin.

SAVE THESE INSTRUCTIONS

PARTS LIST



MAIN UNIT
(Fully Assembled)




Pulp Collector



Pusher



Filter

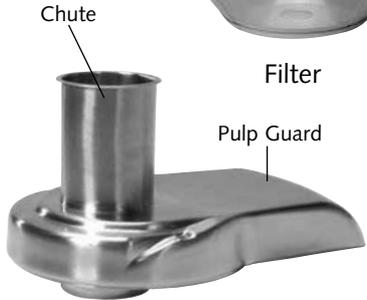


Lid with Pulp Guard

Crescent Tool
(for tightening and removing blade)



(Pegs fit into blade.)

(Crescent tool pegs fit here to tighten. **WARNING: DO NOT OVER TIGHTEN**)

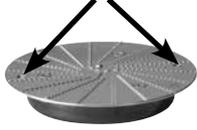

Blade



Brush

Removable Non-Drip Spout



Receptacle

Locking Bar




Base


Screw Peg

DISASSEMBLY


IMPORTANT: Before disassembling the unit make sure you turn the power OFF and unplug the machine from the electrical outlet.

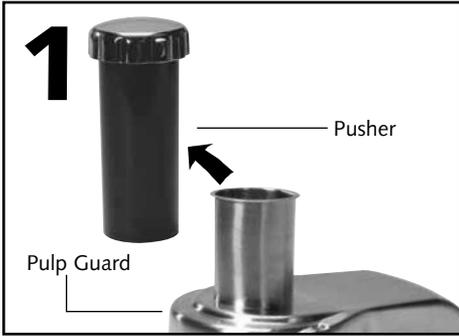


STEP 1:
Remove pusher from the chute.

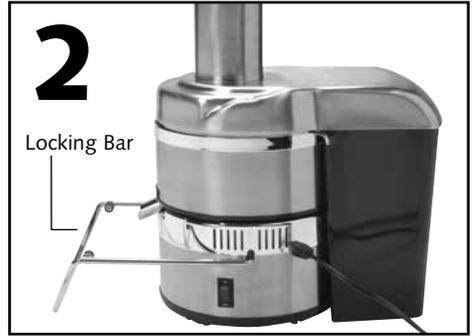

STEP 2:
Lower the locking bar (silver) into position as shown.

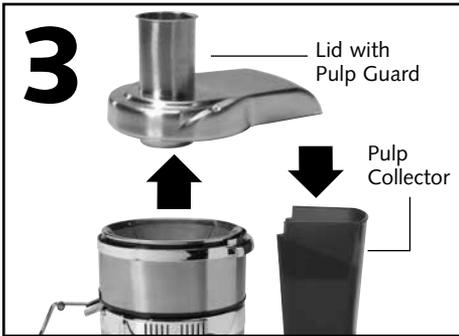


STEP 3:
Remove lid with pulp guard, and pulp collector.

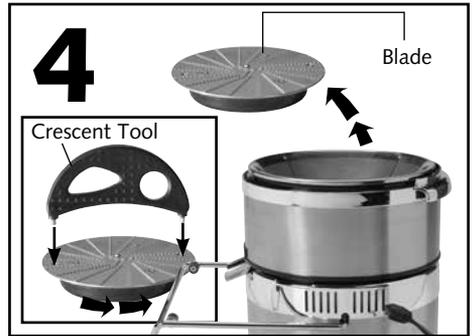

STEP 4:
Use the black crescent tool to remove the blade. Place the two pegs at either end of the crescent tool into the two holes on the blade, press down and turn counter-clockwise to unlock the blade. Remove blade carefully.




STEP 5:
Remove filter.

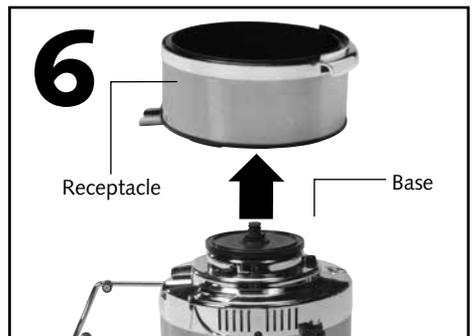


STEP 6:
Make sure spout is in the upright position to avoid leakage. Remove receptacle from base.

ASSEMBLY Assemble as shown

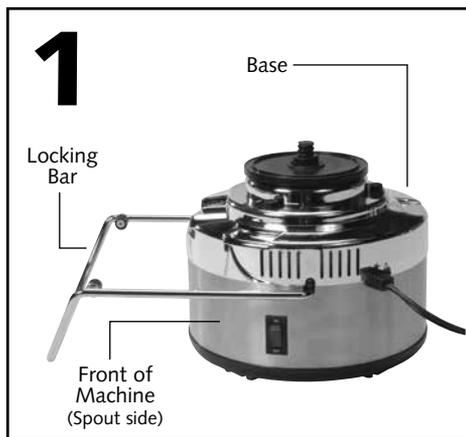


STEP 1:

Place base on a dry flat surface with locking bar in down position as shown. In front of the machine (spout side).

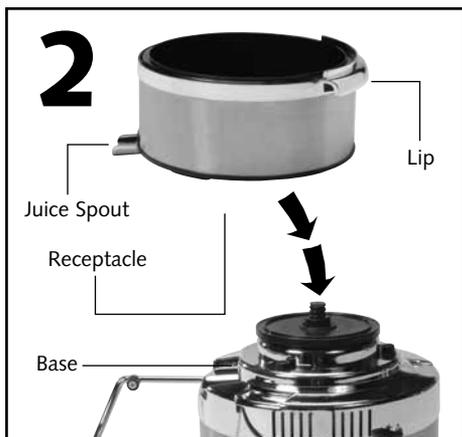

STEP 2:

Place receptacle on the base, with juicer spout facing direction of locking bar. Settle receptacle into alignment.

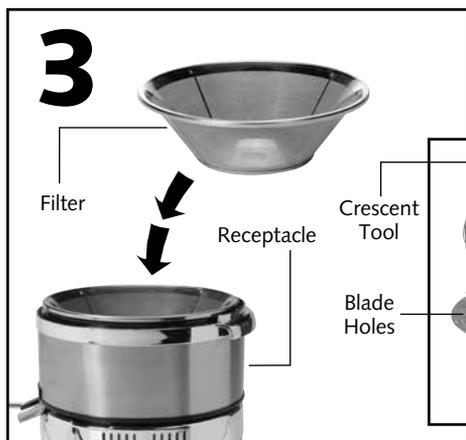

STEP 3:

Place filter inside receptacle, matching the opening on its bottom to the screw peg connected to the base.



STEP 4:

Place blade inside filter, centered over screw peg. Using black crescent tool, place its pegs into the holes in the blade and turn clockwise until tightened.

IMPORTANT: Do not over tighten as the screw peg will break. Remove crescent tool and set aside.

CAUTION:


Do not leave tool inside juicer.

ASSEMBLY (CONT.)

STEP 5:


Place lid with pulp guard attached on top of receptacle, making certain it is snugly aligned with the pulp guard facing in the opposite direction of the juice spout. Lock lid into place by lifting locking bar up until it clicks into grooves located on both sides of the lid. Make sure locking bar is in the full upright, locked position.

IMPORTANT: The unit will not start until this bar is properly locked in place.

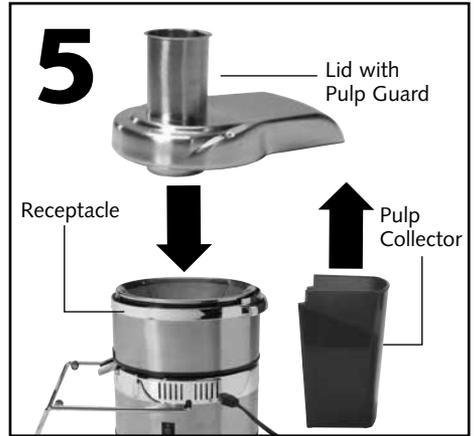


STEP 6:

Insert pusher into chute. Always use pusher to feed fruits and vegetables into unit. Push gently, never force. The blade will do the work.

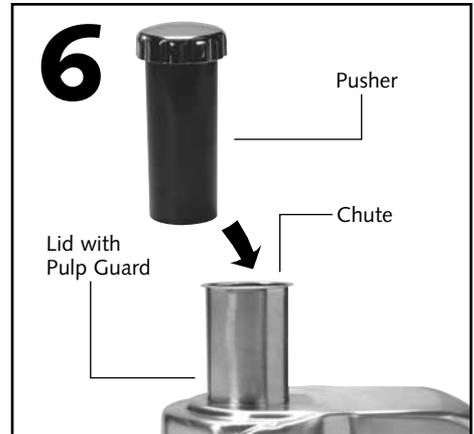

STEP 7:

Make sure juice spout is in the downward position. If the juice spout is left in the upright position the juice will not flow. It will stay in the receptacle and may overflow from the sides.

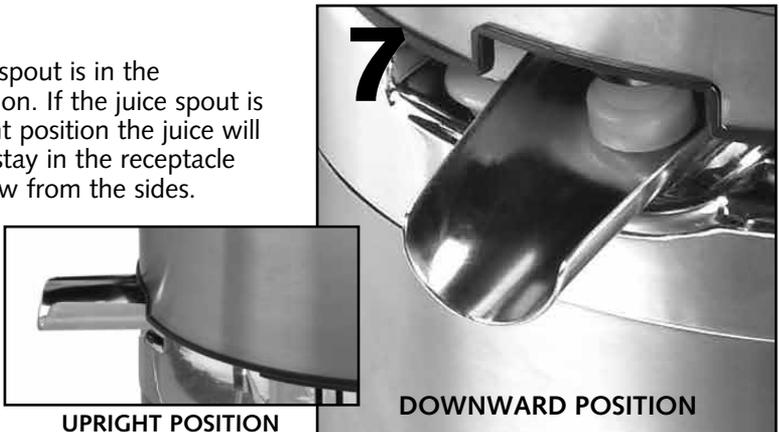


CLEANING YOUR JUICER

We have made juicer clean up as easy as possible. All of the components, with exception of the motor base, can be put in your home dishwasher. We recommend top rack placement as temperatures near the bottom drying element may vary with manufacturer.

Caution: Some commercial and foreign made dishwashers may reach internal temperatures that are higher than machines made for home use by U.S. standards. Do not use these dishwashers with your Power Juicer. The higher temperatures may cause damage to your juicer. Check with your dishwasher manufacturer before using.

For easiest clean up, we recommend you rinse/clean your Power Juicer immediately after juicing. This will help prevent fruit/vegetable fibers from hardening on the components, making it more difficult to clean.

- Turn off the Power Switch and wait until the motor completely stops.
- With dry hands, unplug the AC cord from electrical outlet.
- Disassemble the machine. (See disassembly instructions pages 6-7.)
- Wipe Base with a soft damp cloth or sponge. Do not submerge Base in water. Do not spray the Base with water or any other liquid. Base is not dishwasher safe. **IMPORTANT:** Do not use abrasive sponges, cloths, or cleansers as these can damage the finish.
- Clean all other parts in warm, soapy water. A mild detergent is recommended. Rinse well and dry thoroughly.
- To clean the Filter and Blade, hold them under warm running water. Use a bristled dish washing brush to gently clean pulp from Filter. Rinse the Filter from the outside under running water. If your sink has a spray hose attachment, this is especially effective for loosening fiber from the Filter and the Blade before placing them in the dishwasher.
- Dry components thoroughly then assemble the machine and turn the power on to spin out any excess water.
- Make sure unit and parts are completely dry, then store in a cool, dry place.

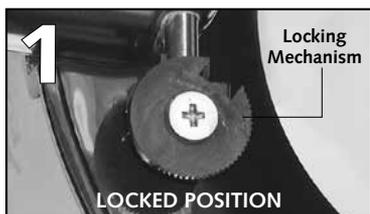

TO CLEAN THE JUICE SPOUT

STEP 1:

Locate removable juice spout locking mechanism on the bottom side of the receptacle. **Note:** Juice spout will be in the locked position.

STEP 2:

To unlock, turn locking mechanism counter-clockwise, lining up notch with juicer spout hinge pivot arm.

STEP 3:

Lift up juice spout carefully from receptacle and remove to clean.

TO REATTACH: Insert juice spout back into original position and turn the locking mechanism clockwise to lock into place.

IMPORTANT: When reattaching juice spout back into original position make sure juice spout is in the locked position and tightly secured before use.

EQUIVALENTS

Tomatoes 4 medium firm tomatoes = 2 cups of juice
4 medium firm tomatoes = 1 cup of pulp

Carrots 5 large carrots = 1 cup juice
5 large carrots = 1 cup pulp

Cucumber 1 large cucumber = 1 cup juice

Zucchini & Squash 5 small zucchini = approx. 1 cup juice
5 small zucchini = approx. 1/2 cup juice

Celery 4 celery stalks = 3/4 cups juice

Pineapple 2 medium pineapples = approx. 2 cups juice
2 medium pineapples = 2 1/2 cups pulp

Potatoes 8 potatoes = approx. 2 cups pulp

Apples 6 medium apples = 2 cups juice
6 medium apples = 1 1/2 cups pulp

Oranges 5 medium oranges = 2 cups juice
5 medium oranges = 1 1/2 cups pulp

Mangoes 6 mangos = 2 1/2 cups juice
6 mangos = 2 cups pulp

Strawberries 1 qt. approx. 30 strawberries = 2 cups juice
1 qt. approx. 30 strawberries = 1/3 cups pulp

Papaya 1 medium papaya = approx 1/2 cup juice
1 medium papaya = 1/3 cup pulp

Raspberry 1/2 pint raspberries = approx. 1/2 cup juice
1/2 pint raspberries = approx. 1/4 cup pulp

Pears 6 medium pears = 2 cups juice
6 medium pears = 1 1/2 cups pulp

Passion Fruit 4 passion fruits = 1/4 juice

TROUBLESHOOTING

Problem	Possible Reasons and Solution
<p>The motor does not run after being switched on.</p>	<ul style="list-style-type: none"> • Check to see if unit is plugged in. • Locking Bar is not locked in place properly. • Check if all parts are assembled properly. • Check if there is any residue left between Blade and Receptacle. • Make sure you wait 5-10 minutes to restart if machine automatically shuts down.
<p>The motor is running with a loud noise and excessive vibration.</p>	<ul style="list-style-type: none"> • Check that all parts are assembled properly and in the correct position. • Juicing overripe fruit may result in too much pulp and will clog the Filter. Turn machine off and clean the Filter.
<p>The motor is running. The spout is in the downward position, but no juice is coming out.</p>	<ul style="list-style-type: none"> • Turn the power off and unplug the machine. Wait for blade to stop spinning. Use a toothpick to loosen any obstruction in the non-drip spout.
<p>The motor overheats causing the power to automatically shut off.</p>	<ul style="list-style-type: none"> • You may have applied too much pressure with the Pusher while processing causing the motor to accidentally over heat. This activates the built-in Thermal Cut Off Switch. The motor will temporarily stop working for approximately 10 minutes to cool down. See additional information on page 5. • The motor needs to warm up for 5–10 seconds before first use. • The fruits and vegetables may be soft or overripe. • There may be too much pulp in the Filter. Turn machine off and clean the Filter.
<p>Juice splashes from the rim of the receptacle.</p>	<ul style="list-style-type: none"> • This is normal.

Common Questions

about the Jack LaLanne Power Juicer

This summary briefly answers common questions. Read operating manual before use.

Q. Why won't the power turn on?

A. First, make certain the Juicer's AC cord is plugged into a working 110V electrical outlet, then check that the switch is in the on position. Then, check that all parts are assembled properly. The unit has a built-in safety device that will not let the motor turn on if not assembled properly. The Power Juicer also has a built-in Thermal Cut Off Safety Switch. If the machine was running, then shut down due to accidental overheating, then there is a 10 minute cooling time before the machine will restart. This helps to protect the motor from seizing.

Q. Can I order spare parts?

A. Yes, you can visit us on the web at www.powerjuicer.com under the parts heading. Replacement parts kits are also available on back inside cover of the operating manual or call 973-287-5150.

Q. Why is my Power Juicer clogged?

A. This may happen for a number of reasons:

1. If the fruit you are using is over ripe.
2. If there is too much pulp in the Filter. Turn the machine off, unplug the AC power cord, and clean the Filter.
3. Fruits such as avocados or bananas cannot be juiced in the Power Juicer.
4. The Spout may be blocked by a piece of pulp that may have passed through the Filter causing the juice to collect in the Receptacle and overflow. Turn the machine off, unplug the AC power cord, wait for the Blade to stop spinning and inspect the Spout. Clear the blockage so the juice can flow freely.

Q. Can I put the whole fruit in the Power Juicer?

A. Yes, as long as it fits in the Chute and does not have pits, tough skin or stems. We recommend that you maintain your personal produce preferences in their "fresh state" as juice, rather than a less nutrient rich "cooked" form. Before juicing any produce, it is important to wash it thoroughly to remove all contaminants including soil and pesticides.

Q. Can I put whole fruits with large pits in the Power Juicer?

A. No, remove pits, as they will damage the Blade and possibly the unit.

Q. Can I put all components in the dishwasher?

A. All components are dishwasher safe (with the exception of the motor housing) in a household dishwasher manufactured to US standards. Avoid European made or commercial dishwashers. Some commercial and foreign made dishwashers may reach internal temperatures that are higher than machines made for home use by US standards. Do not use these dishwashers with your Power Juicer. The higher temperatures may cause damage to your juicer voiding your warranty. Check with your dishwasher manufacturer before using.

Q. How can I make smoothies if you can not add milk, yogurt, ice or bananas to the Power Juicer?

A. The Power Juicer will not make smoothies, only fresh juice for smoothies. Add all smoothie ingredients separately in a blender.

Q. What is the diameter of the feed Chute?

A. The inside diameter of the Chute is approximately 3".

Q. How can I juice carrots?

A. Carrots can be a bit challenging to juice due to their dense nature. Never over stuff the Chute, always leave some "wiggle room" to avoid jamming the Chute. Once carrots have been inserted, quick follow up with the Pusher using firm even pressure will prevent carrots from bouncing back off the Blade.

Q. Can I add ice or liquid to the Power Juicer?

A. No, adding ice or any other substance that is liquid at room temperature will cause an “overflow” in the Receptacle. If needed, add these liquid ingredients after the juicing process.

Q. How can I get berry juice to come out of the Receptacle?

A. Follow the berries with a fruit or vegetable that contains a larger volume of juice. These fruits will produce more juice and push the berry juice through the Receptacle. If you choose to juice only berries then take the machine apart and empty juice from Receptacle into a glass or bowl.

Q. How can I get more pulp for cooking recipes?

A. Unfortunately you may have to juice quite a bit to get a lot of pulp. The Jack LaLanne Power Juicer gives up to 30% more juice than other juicers so there is usually not a lot of pulp left. The good news is you can freeze the pulp in airtight bags or containers. So every time you make fresh juice, just freeze the pulp until you are ready to use it.

Q. How long does the fresh juice last?

A. To get the full benefits of fresh juice it is best if you drink it right away. As fresh juice sits it loses significant amounts of vitamins and nutrients. Some juices last longer than others and refrigerate well as long as they are in a sealed container. They can only be kept for a few hours.

Preferably in a glass covered container so the flavor is not altered. You can add a few drops of lemon juice to help maintain the flavor.

Here is a list of juices that refrigerate well: carrot, apple, orange, pear, grape, grapefruit, pineapple, kiwi, prune, peach, celery, and beet juice. You can also freeze fresh juice the same way. Juice can be frozen in an airtight container for up to one month.

Q. How long does the pulp last?

A. Fruit and vegetable pulp can be frozen. It is best if it is in an airtight container or freezer bag. Discard after one month. We recommend that you use a separate container or bag for each pulp.

Q. Is there a customer service number I can call?

A. Yes, should you have any problems our friendly customer service staff is here to help you if you have a question? We are available at 973-287-5150.

Q. Can I use wheatgrass in my Power Juicer?

A. Yes, it works best if you roll it up in something leafy such as spinach and follow with something juicy such as pineapple. If you choose to juice wheatgrass alone just roll it up and insert it in the Power Juicer.

Q. Can I use cherries whole in my Power Juicer?

A. Yes, but only if the pits have been removed prior to juicing. A quick, easy way to do this is by using a cherry pitter.

Q. Can I use grapes with seeds and stems?

A. Yes, we recommend you wash them thoroughly prior to juicing.

Q. Can I put a rind of the melon in the Power Juicer?

A. Yes, we recommend you wash them thoroughly prior to juicing. We do not recommend leaving the rind on the cantaloupe due to recent cases of salmonella contamination. This is a personal preference.

Q. Can my Power Juicer be used as a food processor? Is there a special attachment I need?

A. No, there is no attachment that turns the Power Juicer into a food processor. However, the Power Juicer leaves behind pulp from the fruits and vegetables that is used to cook with or freeze to make delicious frozen treats. Use the pulp to make healthy sauces, salsas, dips, muffins and more.

Jack LaLanne Power Juicer Limited Lifetime Warranty

The manufacturer warrants that your Jack LaLanne Power Juicer is free of defects in materials and workmanship and will, at its option, repair or replace any defective juicer that is returned. The Jack LaLanne Power Juicer motor is warranted for the lifetime of the original purchaser, and all other parts and components are warranted for 60 days from the original date of purchase. This warranty is valid only in accordance with the conditions set forth below:

1. This warranty applies to consumer use only, and is void if the product is used in a commercial or institutional setting.
2. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated. This warranty is void if the product has been subject to accident, misuse, abuse, improper maintenance or repair, or unauthorized modification.
3. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
4. Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this warranty. The manufacturer shall not be liable for any incidental or consequential damages for breach of this warranty or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
5. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Procedure for Warranty Repairs or Replacement

If warranty service is necessary, the original purchaser must pack the product securely and send it postage paid with a description of the defect, proof of purchase, and a check or money order for \$14.99 to cover return postage and handling to the following address: Jack LaLanne Power Juicer, P.O. Box 3007, Wallingford, CT 06492. This warranty is non-transferable.

STAINLESS STEEL


Jack LaLanne's
POWER JUICER PRO™

**Accessory Kit
includes:**



- Stainless Steel Pitcher
- Power Juicer Platform
- Filter Brush

Replacement Parts Kit #1

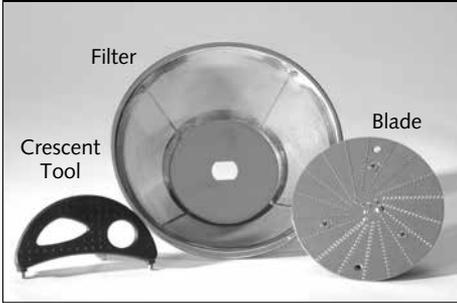

Replacement Parts Kit #2



To order or for more information on juicing visit:
www.powerjuicer.com

or call 973-287-5150

Please allow 4-6 weeks for shipping.

YES! Please Send Me the following Items:

- One Accessory Kit for only \$19.99 plus \$6.99 s&h. Total \$26.98.
- Replacement Parts Kit #1 for only \$34.99 plus FREE s&h. Total \$34.99.
- Replacement Parts Kit #2 for only \$19.99 plus FREE s&h. Total \$19.99.
- VISA MasterCard Discover Exp. Date _____
- Credit Card # _____
- Check Money Order (NJ residents add 7% sales tax. PA & CT residents add 6% sales tax. NY & NV add applicable sales tax.) U.S. CURRENCY ONLY PRICES SUBJECT TO CHANGE E-mail _____

Print Name _____

Address _____

Apt. _____ City _____

State _____ Zip _____

Phone# _____

Please make checks payable to: POWER JUICER

Mail Payment Today To: POWER JUICER
26 Barnes Industrial Rd. North, P.O. Box 3125, Dept. PJP999, Wallingford, CT 06494

STAINLESS STEEL

Jack LaLanne's
POWER JUICER PRO™



We are very proud of the design and quality of our Power Juicer. This product has been manufactured to the highest standards. Should you have any problem our friendly customer service staff is here to help you.

www.powerjuicer.com

1-973-287-5150

© 2011 Tristar Products, Inc.
All rights reserved.



Distributed by:
Tristar Products, Inc.
Fairfield, NJ 07004