

PowerXL™

products that excel

AIR FRYER STEAMER



Owner's Manual

Save These Instructions - For Household Use Only

MODEL: ST-006

When using electrical appliances, basic safety precautions should always be followed. Do not use the **PowerXL Air Fryer Steamer™** until you have read this manual thoroughly.

Visit [TristarCares.com](https://www.TristarCares.com) for tutorial videos, product details, and more.
Guarantee Information Inside



PowerXL Air Fryer Steamer

BEFORE YOU BEGIN

The **PowerXL Air Fryer Steamer** will provide you many years of delicious family meals and memories around the dinner table. But before you begin, it's very important that you read this entire manual, making certain that you are totally familiar with this appliance's operation and precautions.

Appliance Specifications

Model Number	Supply Power	Rated Power	Full Basket Capacity	Water Tank Capacity	Temperature
ST-006	120V ~60Hz	1700W	7 qt.	1100 ml	180° F-400° F

Table of Contents

<i>IMPORTANT SAFEGUARDS</i>	4
<i>Parts & Accessories</i>	6
<i>Using the Control Panel</i>	8
<i>Instructions for Use</i>	10
<i>Using the Accessories</i>	12
<i>General Cooking Guidelines</i>	14
<i>Troubleshooting</i>	15
<i>Frequently Asked Questions</i>	16
<i>Cleaning & Storage</i>	17
<i>Money-Back Guarantee</i>	19

IMPORTANT SAFEGUARDS

WARNING

PREVENT INJURIES! - CAREFULLY READ ALL INSTRUCTIONS BEFORE USE!

When using electrical appliances, always follow these basic safety precautions.

- 1. READ AND FOLLOW** all instructions carefully.
- 2. NEVER** immerse the Main Unit Housing, which contains electrical components and heating elements, in water. Do not rinse under the tap.
- 3. THIS APPLIANCE IS NOT INTENDED FOR** use by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they are under the supervision of a responsible person or have been given proper instruction in using the appliance. This appliance is not intended for use by children.
- 4. TO AVOID ELECTRICAL SHOCK**, do not put liquid of any kind into the Main Unit Housing containing the electrical components.
- 5. THIS APPLIANCE HAS A POLARIZED PLUG** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- 6. MAKE SURE** the appliance is plugged into a wall socket. Always make sure that the plug is inserted into the wall socket properly.
- 7. DO NOT** use outdoors.
- 8. DO NOT** place the appliance on the stove top. Place on a flat, horizontal surface with adequate space for air flow. Do not place other appliances within 5 in. of the appliance.
- 9. TO PREVENT** food contact with the heating elements, do not overfill.
- 10. DO NOT** cover the Air Intake Vent or Hot Air Outlet Vent while the appliance is operating. Doing so will prevent even cooking and may damage the appliance or cause it to overheat.
- 11. NEVER** pour oil into the Basket. Fire and personal injury could result.
- 12. WHILE COOKING**, the internal temperature of the appliance reaches several hundred degrees F.

To avoid personal injury, never place hands inside the appliance unless it is thoroughly cooled down.
- 13. DO NOT** use this appliance if the plug, the power cord, or the appliance itself is damaged in any way.
- 14. IF THE POWER CORD IS DAMAGED**, contact customer service using the information on the back of this manual.
- 15. KEEP** the appliance and its power cord out of the reach of children when it is in operation or in the cooling down process.
- 16. KEEP** the power cord away from hot surfaces. Do not plug in the power cord or operate the appliance controls with wet hands.
- 17. NEVER** connect this appliance to an external timer switch or separate remote-control system.
- 18. NEVER** use this appliance with an extension cord of any kind. A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
- 19. DO NOT** let cord hang over the edge of table or counter surfaces.
- 20. DO NOT** operate the appliance on or near combustible materials, such as tablecloths, paper towels, or curtains.
- 21. WHEN COOKING**, do not place the appliance against a wall or against other appliances. Leave at least 5 in. free space on the back and sides and above the appliance. Do not place anything on top of the appliance.
- 22. DO NOT USE** the appliance for any purpose other than described in this manual.
- 23. THE USE OF ACCESSORY ATTACHMENTS** not recommended by the appliance manufacturer may cause injuries.
- 24. NEVER** operate the appliance unattended.
- 25. WHEN IN OPERATION**, hot air and steam is released through the Hot Air Outlet Vent. Keep your hands and face at a safe distance from the Hot Air Outlet Vent. Also avoid the hot steam and air while removing the Basket and Fry Tray from the appliance.
- 26. THE APPLIANCE'S OUTER SURFACES** may become hot during use. The Basket and Fry Tray will be hot. Wear oven mitts when handling hot components or touching hot surfaces.
- 27.** Before using your new appliance on any countertop surface, **CHECK** with your countertop manufacturer or installer for recommendations about using appliances on your surfaces. Some manufacturers and installers may

IMPORTANT SAFEGUARDS

recommend protecting your surface by placing a hot pad or trivet under the appliance for heat protection. Your manufacturer or installer may recommend that hot pans, pots, or electrical appliances should not be used directly on top of the countertop. If you are unsure, place a trivet or hot pad under the appliance before using it.

28. DO NOT place your appliance on a hot cooktop because it could cause a fire or damage the appliance, your cooktop, and your home.

29. SHOULD THE APPLIANCE EMIT BLACK SMOKE, unplug immediately and wait for smoking to stop. Allow the appliance to cool and wipe out excess oil and grease from the appliance.

30. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

31. USE EXTREME CAUTION when removing tray or disposing of hot grease.

32. DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating risks of electric shock.



WARNING:

For California Residents

This product can expose you to Bisphenol A, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

SAVE THESE INSTRUCTIONS – FOR HOUSEHOLD USE ONLY

CAUTION

- Always operate the appliance on a horizontal surface that is level, stable, and noncombustible.
- This appliance is intended for normal household use only. It is not intended for use in commercial or retail environments.
- If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and the manufacturer will not be held liable for damages.
- Always unplug the appliance after use.
- When the cooking time has completed, cooking will stop and the fan will continue running for 20 secs. to cool down the appliance.
- Let the appliance cool down for approximately 30 mins. before handling, cleaning, or storing.
- The appliance is equipped with an internal microswitch that automatically shuts down the fan and heating element when the Basket is removed.

Overheating Protection

Should the inner temperature control system fail, the overheating protection system will be activated and the appliance will not function. Should this happen, unplug the appliance. Allow time for the appliance to cool completely before restarting or storing.

Automatic Shut-Off

The appliance has a built-in shut-off device that will automatically shut off the appliance when the cooking time has completed. You can manually switch off the appliance by pressing the Power Button. The fan will continue running for 10 secs. to cool down the appliance.

Electric Power

The appliance should be operated on a dedicated electrical outlet. If the electrical outlet is being used by other appliances, your new Appliance may not operate properly.

Electromagnetic Fields

This appliance complies with all standards regarding electromagnetic fields. If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Parts & Accessories



*may be sold separately

Parts & Accessories


1. **Main Unit Housing**
2. **Water Tank**
3. **Control Panel**
4. **Air Inlet Vent**
5. **Hot Air Outlet Vent**
6. **Condensation Collector**
7. **Power Cable**
8. **Condensation Tray**
9. **Basket**
10. **Fry Tray**
11. **Muffin Tray** (may be sold separately)
12. **Grill Plate** (may be sold separately)

IMPORTANT: Please make sure that your appliance has been shipped with the components that you ordered (some accessories may be sold separately). Check everything carefully before use. If any part is missing or damaged, do not use this product. Contact Customer Service using the number located in the back of the owner's manual.

CAUTION: The appliance may get hot. Be careful not to touch the appliance while in use. Keep the appliance away from other objects.

NOTE: Unpack all listed contents from the packaging. Please remove any clear or blue protective film on the components before use.

Using The Control Panel

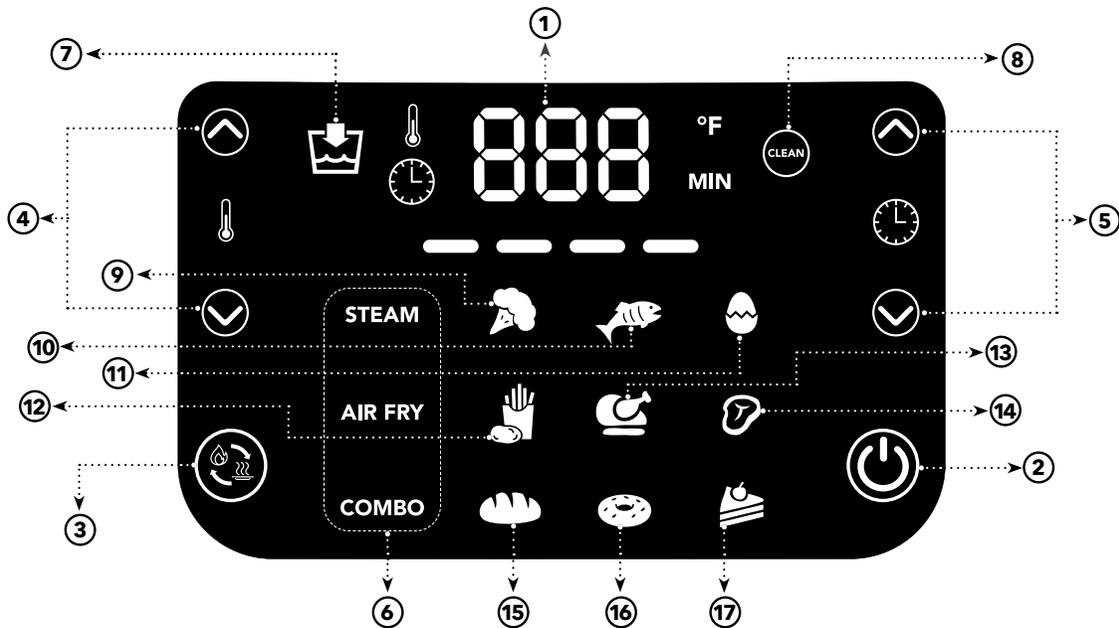

- 1. Time and Temperature Display:** This display will keep track of the temperature and remaining cook time.
- 2. Power Button:** Before pressing the Power Button, ensure that the Basket and Water Tray are inserted completely into the appliance. Once the appliance is plugged in, pressing the Power Button once will illuminate the Control Panel. Pressing the Power Button again will start the cooking process with a default cooking temperature of 370° F/188° C and a default cooking time of 18 minutes. During the cooking process, pressing the Power Button will turn the appliance off. The Control Panel's lights will turn off and the fan will continue running for 20 seconds to cool down the appliance.
- 3. Mode Switch Button:** When the appliance is in combo mode (see "Function Buttons"), press the Mode Switch Button to switch between the air fry and steam presets to see and adjust the cooking time and temperature.
NOTE: The running lights on the Control Panel will illuminate when the cooking cycle begins and will stay illuminated for up to 20 seconds after the cooking cycle is complete.
- 4. Temperature Control Buttons:** The + and – symbols enable you to increase or decrease cooking temperature 5° F at a time. Keeping a button held down will rapidly change the temperature. Temperature control range: 180° F-400° F.

- 5. Timer Control Buttons:** The + and – symbols enable you to increase or decrease cooking time 1 min. at a time. Keeping the Button held down will rapidly change the time. Time control range: 1- 60 mins.
- 6. Function Buttons:** Press one of the Function Buttons before selecting one of the cooking presets in order to set the appliance to steam, air fry, or combo mode when cooking food.
Steam: Cooks with hot steam.
Air Fry: Cooks with hot air.
Combo: Cooks with steam and air frying interchangeably (see "Combo Cooking" in the "Instructions for Use" section).
After selecting a cooking mode, press one of the cooking preset buttons.
- 7. Steam Level Indicator:** Illuminates when the water level in the Water Tank is low.
- 8. Clean Button:** Illuminates when the water level in the Water Tank is low. Press to clean limescale buildup.
- 9-17. Cooking Presets:** Press the cooking preset buttons to choose from up to nine cooking presets. See the Preset Chart for the cooking times and temperatures associated with each preset.

Using The Control Panel

Preset Chart

Once you are familiar with the appliance, you may want to experiment with your own recipes. Simply choose the time and temperature that suits your personal taste.

STEAM			
Function	Preset	Temperature	Time
Default	N/A	212° F/100° C	18 mins.
Steam	 9. Vegetable	212° F/100° C	10 mins.
Steam	 10. Fish	212° F/100° C	10 mins.
Steam	 11. Eggs	212° F/100° C	16 mins.
Steam	 12. Fries	212° F/100° C	20 mins.
Steam	 13. Chicken	212° F/100° C	30 mins.
Steam	 14. Steak	212° F/100° C	15 mins.
Steam	 15. Bread	212° F/100° C	4 mins.
Steam	 16. Bagel	212° F/100° C	4 mins.
Steam	 17. Bake	212° F/100° C	40 mins.

AIR FRY			
Function	Preset	Temperature	Time
Default	N/A	370° F/188° C	18 mins.
Air Fry	 9. Vegetable	320° F/160° C	12 mins.
Air Fry	 10. Fish	350° F/177° C	10 mins.
Air Fry	 11. Eggs	250° F/121° C	16 mins.
Air Fry	 12. Fries	400° F/204° C	18 mins.
Air Fry	 13. Chicken	370° F/188° C	35 mins.
Air Fry	 14. Steak	400° F/204° C	15 mins.
Air Fry	 15. Bread	320° F/160° C	25 mins.
Air Fry	 16. Bagel	380° F/193° C	14 mins.
Air Fry	 17. Bake	310° F/154° C	30 mins.

Using The Control Panel

COMBO					
Steam			Air Fry		
Function	Preset	Temperature	Time	Temperature	Time
Default	N/A	212° F/100° C	10 mins.	370° F/188° C	10 mins.
Combo	 9. Vegetable	212° F/100° C	4 mins.	400° F/204° C	6 mins.
Combo	 10. Fish	212° F/100° C	8 mins.	400° F/100° C	5 mins.
Combo	 11. Eggs	212° F/100° C	30 mins.	375° F/191° C	5 mins.
Combo	 12. Fries	212° F/100° C	15 mins.	400° F/204° C	18 mins.
Combo	 13. Chicken	212° F/100° C	15 mins.	360° F/182° C	20 mins.
Combo	 14. Steak	212° F/100° C	15 mins.	400° F/204° C	15 mins.
Combo	 15. Bread	212° F/100° C	4 mins.	350° F/177° C	15 mins.
Combo	 16. Bagel	212° F/100° C	4 mins.	380° F/193° C	14 mins.
Combo	 17. Bake	212° F/100° C	20 mins.	330° F/166° C	15 mins.

⚠ WARNING Never use a cooking vessel filled with cooking oil or any other liquid with this appliance! Fire hazard or personal injury could result.

Internal Temperature Meat Chart

Use this chart and a food thermometer to ensure that meat, poultry, seafood, and other cooked foods reach a safe minimum internal temperature.

*For maximum food safety, the U.S. Department of Agriculture recommends 165° F for all poultry; 160° F for ground beef, lamb, and pork; and 145° F, with a 3-minute resting period, for all other types of beef, lamb, and pork. Also review the USDA Food Safety Standards.

Food	Type	Internal Temperature*
Beef & Veal	Ground	160° F (71° C)
	Steaks, roasts: medium	145° F (63° C)
	Steaks, roasts: rare	125° F (52° C)
Chicken & Turkey	Breasts	165° F (75° C)
	Ground, stuffed	165° F (75° C)
	Whole bird, legs, thighs, wings	165° F (75° C)
Fish & Shellfish	Any type	145° F (63° C)
Lamb	Ground	160° F (71° C)
	Steaks, roasts: medium	140° F (60° C)
	Steaks, roasts: rare	130° F (55° C)
Pork	Chops, ground, ribs, roasts	160° F (71° C)
	Fully cooked ham	140° F (60° C)

Instructions for Use

Before First Use

1. Remove all the packaging material.
2. Remove any stickers or labels from the appliance.
3. Before initial use, wipe the inside and outside of the appliance with a warm, moist cloth and mild detergent. Handwash all cooking accessories.
4. Before cooking food, preheat the **PowerXL Air Fryer Steamer** for a few minutes to allow the appliance to burn off the manufacturer's protective coating of oil. Wipe the appliance with warm, soapy water and a washcloth after this burn-in cycle.
5. Place the appliance on a stable, horizontal, and level surface. Do not place the appliance on a surface that is not heat resistant. Ensure that the appliance is used in an area with good air circulation and away from hot surfaces and any combustible materials. Do not place on the stove top.
6. Place the Fry Tray in the Basket. Slide the Basket into the appliance. If the Basket is placed properly, it will click into place.

NOTE: The **PowerXL Air Fryer Steamer** cooks using hot air. Do not fill the Basket with oil or frying fat. Do not put anything on top of the appliance. This disrupts the airflow and affects the cooking results.

Using the PowerXL Air Fryer Steamer

1. Plug the appliance into a grounded wall socket.
2. To preheat, push the Power Button.
3. Press the Temperature Increase or Decrease Buttons to set the cooking temperature.
4. Press the Time Decrease Button to set the preheat time to 3 mins. When the preheat cycle finishes, carefully pull the Basket out of the appliance and place the ingredients inside.
NOTE: For better performance, always use the Fry Tray with the Basket.
5. Do not touch the Basket directly because the Basket becomes very hot during operation. Only hold the Basket by its handle.
6. Press the Power Button. Set the appropriate time and temperature for the ingredients you are cooking.
7. When the timer beeps five times, the set cooking time has elapsed. Pull the Basket out of the appliance and place it on a heat-resistant surface.
8. If the food is fully cooked, use tongs to remove food.
CAUTION: Do not turn the Basket upside down because any excess oil that has collected on the bottom of the basket will leak onto the ingredients.
9. If the food is not fully cooked, simply slide the Basket back into the appliance and add a few minutes to the cooking time.
10. The appliance is instantly ready for preparing another batch.

Instructions for Use

Combo Cooking

When using the appliance in combo mode, when the Steam cycle is finished, the appliance should beep five times to indicate that the water should be

dumped out before the appliance automatically starts the air frying cooking cycle.

Shaking

To ensure even cooking, some foods require shaking during the cooking process. Remove the Basket from the appliance. Gently shake the contents as needed and place the Basket back in the appliance to continue cooking.

CAUTION: The Basket will be hot. Wear an oven mitt during this procedure.

1. Place the Basket on a heat-resistant surface.
2. Shake the ingredients in the Basket.
3. Return the Basket to the appliance to finish cooking.

Tips

- Foods that are smaller in size usually require a slightly shorter cooking time than larger foods.
- Large quantities of food only require a longer cooking time than smaller quantities.
- Shaking smaller-sized foods halfway through the cooking process ensures that all the pieces are fried evenly.
- Adding a bit of vegetable oil to fresh potatoes is suggested for a crispier result. When adding oil, do so just before cooking and add only a small amount onto the potato.
- Snacks normally cooked in an oven can also be cooked in the appliance.
- Use premade dough to prepare filled snacks quickly and easily. Premade dough also requires a shorter cooking time than homemade dough.
- You can use the appliance to reheat foods. Simply set the temperature and time to however warm you want your food.

Using the Accessories

Using the Basket and Fry Tray

1. Place the Fry Tray in the Outer Basket (**Fig. A**).
2. Slide the Outer Basket into the appliance.
If the Basket is placed properly, it will click into place (**Fig. B**).



Fig. A



Fig. B

Using the Accessories

Using The Water Tank for Steaming

1. Remove the Water Tank from the top of the appliance (Fig. C).
2. Turn the Water Tank over. Remove the cap on the Water Tank. Fill the Water Tank with water (Fig. D).
NOTE: The Water Tank holds 2 ½ cups (600 ml) of water.
3. Close and tighten the cap on the Water Tank. Return the Water Tank to the top of the appliance (Fig. E).



Fig. C



Fig. D



Fig. E

Inserting and Draining the Water Tray

The Water Tray is used to collect the excess water from steam cooking. To drain and insert the Water Tray:

1. Check the Water Tray halfway through the cooking cycle to ensure it does not overflow.
2. Empty the Water Tray and place it firmly back into the bottom of the appliance.

General Cooking Guidelines

NOTE: Keep in mind that these settings are guidelines. Since ingredients differ in origin, size, shape, and brand, we cannot guarantee the best settings for your ingredients.

FOOD ITEM	QUANTITY	SHAKE	TEMP	COOK TIME	COMMENTS
				Adjustable Range (Increments)	
Thin Frozen Fries	1¼ cups	YES	400° F	15-16 mins. (1 min.)	-
Thick Frozen Fries	1¼ cups	YES	400° F	15-20 mins. (1 min.)	-
Homemade Fries	1¼ cups	YES	400° F	10-16 mins. (1 min.)	Add ½ tbsp. oil
Homemade Potato Wedges	1¼ cups	YES	360° F	18-22 mins. (1 min.)	Add ½ tbsp. oil
Hash Browns	1 cup	YES	360° F	15-18 mins. (1 min.)	-
Steak	¼-1.1 lb		360° F	8-12 mins. (1 min.)	-
Pork Chops	¼-1.1 lb		360° F	10-14 mins. (1 min.)	-
Hamburger	¼-1.1 lb		360° F	7-14 mins. (1 min.)	-
Sausage Roll	¼-1.1 lb		400° F	13-15 mins. (1 min.)	-
Chicken Drumstick	¼-1.1 lb		360° F	18-22 mins. (1 min.)	-
Chicken Breast	¼-1.1 lb		360° F	10-15 mins. (1 min.)	-
Spring Rolls	¼-¾ lb	YES	400° F	15-20 mins. (1 min.)	Use oven-ready
Frozen Chicken Nuggets	¼-1.1 lb	YES	400° F	10-15 mins. (1 min.)	Use oven-ready
Frozen Fish Sticks	¼-1.1 lb		400° F	6-10 mins. (1 min.)	Use oven-ready
Mozzarella Sticks	¼-1.1 lb		360° F	8-10 mins. (1 min.)	Use oven-ready
Cake	1 ¼ cups		320° F	20-25 mins. (1 min.)	Use baking pan
Quiche	1 ½ cups		360° F	20-22 mins. (1 min.)	Use baking pan/oven dish
Muffins	1 ¼ cups		400° F	15-18 mins. (1 min.)	Use baking pan
Baked Goods	1 ½ cups		320° F	20 mins. (1 min.)	Use baking pan/oven dish

Troubleshooting

Symptom	Possible Cause	Solution
The PowerXL Air Fryer Steamer does not work	The appliance is not plugged in.	Plug the Power Cable into a wall socket.
	You have not turned the appliance On by setting the preparation time and temperature.	Press the Power Button. Select a time and temperature. Press the Power Button again and cooking will begin.
	You have probably turned Off the appliance. If you press the Power Button while the appliance is cooking, you will trigger the Auto Shut-Off mode.	Press the Power Button. Select a time and temperature. Press the Power Button again and cooking will begin.
Food is not cooked	The Basket is overloaded.	Use smaller batches for more even frying.
	The temperature is set too low.	Raise temperature and continue cooking.
Food is not fried evenly	Some foods need to be shaken during the cooking process.	See "Shaking" in the "Instructions for Use" section.
Basket will not slide into appliance properly	The Basket is overloaded.	Do not fill the Basket above the Maximum line.
	The Fry Tray is not placed in the Basket correctly.	Gently push the Fry Tray into the Basket until it clicks.
White smoke coming from appliance	Too much oil is being used.	Wipe down to remove excess oil.
	The Basket has grease residue from the previous operation.	Clean the Basket after each use.
French fries are not fried evenly	Potatoes are not prepped properly.	Consult a recipe for potato type and prep.
	Fries are not cut evenly.	Cut fries thinner or reshape fries.
	Fries are too crowded.	Spread fries out or cook a smaller batch.
	Potatoes are not rinsed properly during preparation.	Pat dry to remove excess starch.
Fries are not crispy	Raw fries have too much water.	Dry potato sticks properly before misting oil.
		Cut sticks smaller.
		Add a bit more oil.
Error	E1 - Broken circuit of the thermal sensor	Call Customer Service at 1-973-287-5135
	E2 - Short circuit of the thermal sensor	

Frequently Asked Questions

1. Can I prepare foods other than fried dishes with my PowerXL Air Fryer Steamer?

You can prepare a variety of dishes, including steaks, chops, burgers, and baked goods. See the PowerXL Air Fryer Steamer Recipe Guide.

2. Is the appliance good for making or reheating soups and sauces?

Never cook or reheat liquids in the appliance.

3. Is it possible to shut off the appliance at any time?

Press the Power Button once or remove the Basket.

4. What do I do if the appliance shuts off while cooking?

As a safety feature, the appliance has an Auto Shut-Off device that prevents damage from overheating. Remove the Basket and set it on a heat-resistant surface. Allow the appliance to cool down. Remove the Power Cable from the outlet. Once cool, plug the Power Cable back into the socket. Restart by pressing the Power Button.

5. Does the appliance need time to heat up?

If you are cooking from a cold start, add 3 mins. to the cooking time to compensate.

6. Can I check the food during the cooking process?

You can remove the Basket at any time while cooking is in progress. During this time, you can shake the contents in the Basket if needed to ensure even cooking.

7. Is the appliance dishwasher safe?

Only the Fry Tray is dishwasher safe. The appliance itself, which contains the heating coil and electronics, should never be submerged in liquid of any kind or cleaned with anything more than a warm, moist cloth or nonabrasive sponge with a small amount of mild detergent.

8. What happens if the appliance still does not work after I have tried all the troubleshooting suggestions?

Never attempt a home repair. Contact customer service and follow the procedures set forth by the guarantee. Failure to do so could render your guarantee null and void.

Cleaning & Storage

Clean the appliance after each use. The Basket and the Fry Tray are coated with a special nonstick surface. Never use abrasive cleaning materials or utensils on these surfaces.

1. Remove the Power Cable from the wall socket and be certain the appliance is thoroughly cooled before cleaning.
2. Wipe the outside of the appliance with a warm, moist cloth and mild detergent.
3. Clean the Basket and the Fry Tray with hot water, a mild detergent, and a nonabrasive sponge.
NOTE: The Fry Tray is dishwasher safe.
TIP: Should the Fry Tray contain difficult-to-remove food particles, soak in hot, soapy water for 10 mins.
NOTE: The rubber bumpers on the Fry Tray are part of the Fry Tray and should generally not be removed. However, if the rubber bumpers

need to be cleaned, they can be removed and reattached: To remove the rubber bumpers, locate the capped end of the bumpers and push the capped end off of the Fry Tray. There will be some resistance, but keep pushing until the rubber bumpers come off of the Fry Tray. Take note of the slot on which the bumpers were sitting. To reattach the rubber bumpers, align the hole in the rubber bumpers with the slots from which the rubber bumpers were removed. Slide the rubber bumpers all the way back onto the slot on the Fry Tray.

4. Clean the inside of the appliance with hot water, a mild detergent, and a nonabrasive sponge.
5. If necessary, remove unwanted food residue from the heating element with a soft cleaning brush.

Self-Cleaning

Use the self-cleaning function to clean limescale out of the Water Tank after about 20 hours of use (**NOTE:** If the appliance is not used often, the self-cleaning function should be used after each cooking process). To use the self-cleaning function:

1. Add about ½ ounce (14.5 ml) of vinegar to 2 cups (500 ml) of water and stir until the citric acid is dissolved.
2. Add the mixture to the Water Tank. Place the Water Tank on the appliance.
3. Press the Clean Button on the Control Panel. The machine will automatically enter self-cleaning mode.
4. The appliance will automatically shut down when the self-cleaning function is complete.
5. Rinse the system out to remove any odd taste by filling the Water Tank with water. Then, press the Clean Button on the Control Panel. Repeat if necessary.

Storage

1. Unplug the appliance and let it cool down thoroughly.
2. Make sure all components are clean and dry.
3. Place the appliance in a clean, dry place.



AIR FRYER STEAMER

90-Day Money-Back Guarantee

The *PowerXL Air Fryer Steamer* is covered by a 90-day money-back guarantee. If you are not 100% satisfied with your product, return the product and request a replacement product or refund. Proof of purchase is required. Refunds will include the purchase price, less processing and handling. Follow the instructions in the Return Policy below to request a replacement or refund.

Replacement Guarantee Policy

Our products, when purchased from an authorized retailer, include a 1-year replacement guarantee if your product or component part does not perform as expected, the guarantee extends only to the original purchaser and is not transferable. If you experience an issue with one of our products within 1 year of purchase, return the product or the component part for replacement with a functionally equivalent new product or part. The original proof of purchase is required, and you are responsible to pay to return the appliance to us. In the event a replacement appliance is issued, the guarantee coverage ends six (6) months following the receipt date of the replacement appliance or the remainder of the existing guarantee, whichever is later. Tristar reserves the right to replace the appliance with one of equal or greater value.

Return Policy

If, for any reason, you would like to replace or return the product under the money-back guarantee, your order number can be used as the return merchandise authorization number (RMA). If the product was purchased in a retail store, return the product to the store or use "RETAIL" as the RMA. Return your product to the address provided below for a replacement, which will incur no additional processing and handling fees, or for the refund of your purchase price, less processing and handling. You are responsible for the cost of returning the product. You can locate your order number at www.customerstatus.com. You can call customer service at 973-287-5135 or email info@tvcustomerinfo.com for any additional questions. Pack the product carefully and include in the package a note with (1) your name, (2) mailing address, (3) phone number, (4) email address, (5) reason for return, and (6) proof of purchase or order number, and (7) specify on the note whether you are requesting a refund or replacement. Write the RMA on the outside of the package. Send the product to the following return address:

PowerXL Air Fryer Steamer
Tristar Products
500 Returns Road
Wallingford, CT 06495

If the replacement or refund request has not been acknowledged after two weeks, please contact Customer Service at 973-287-5135.

Refund

Refunds requested within the money-back guarantee timeframe will be issued to the payment method used at purchase if the item was purchased directly from Tristar. If the item was purchased from an authorized retailer, proof of purchase is required, and a check will be issued for the item and sales tax amount. Processing and handling fees are non-refundable.

PowerXL™ *products that excel*

AIR FRYER STEAMER

This product has been manufactured to the highest standards. Should you have any questions, our friendly customer service staff is here to help you.

For parts, recipes, accessories, and everything PowerXL, go to tristarcares.com or scan this QR code with your smartphone or tablet:



To contact us, email us at customerservice@tristarproductsinc.com or call us at **973-287-5135**.



Distributed by:
Tristar Products, Inc.
Fairfield, NJ 07004
© 2020 Tristar Products, Inc.
Made in China
PXL-AFS_IB_TP_ENG_V2_201202

