

Evolve™ Grill

CUPCAKE & MUFFIN PAN INSERT

Cook what you love, only healthier

Compatible with the Evolve Grill series, Kitchen Bistro, and Next Grilleration G3, G4 and G5 grills (model numbers GRP4EMB, GRP4EP, GRP4EWS, GRP90WGR, GRP93G, GRP94WR).


GETTING STARTED

- Remove all packing material and, if applicable, any stickers from the product; remove and save literature.
- For additional information go to www.georgeforemancooking.com.
- Wash cupcake & muffin pan insert in hot soapy water, rinse and dry thoroughly.


Note: Although the pan is dishwasher-safe, we recommend hand washing to preserve its appearance. In the dishwasher, the metal may get a cloudy film; this film will not affect the performance.

ATTACHING THE PLATES


Important: Your grill should always be used with 2 plates securely attached. When using the cupcake & muffin pan insert, attach the cross-hatch grill or Panini top plate, plus the deep-dish bake pan.

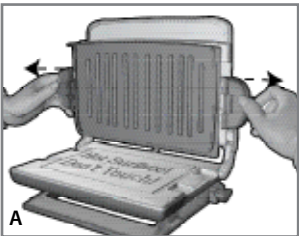

1. To attach the top grill plate, pull out on both release handles, set the plate flat against the inside frame and release the handles (A).

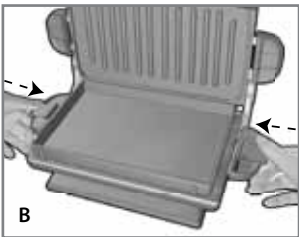

2. Repeat with the deep-dish bake pan for the bottom plate (B). Once you have preheated the grill and filled the insert, you will set the insert into the deep-dish bake pan (see instructions below).

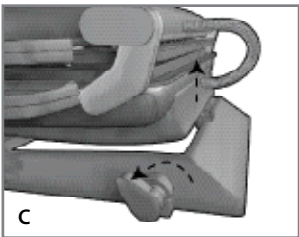

3. Move the adjustable slope switch on the back right side of the grill back, so the grill is in the flat position (C).


Important: When using the cupcake & muffin pan insert, always make sure grill is completely flat.

Note: When cooking in the flat position, it is not necessary to set the drip tray in front of the grill.

USING YOUR CUPCAKE & MUFFIN PAN INSERT

1. Plug in the grill and press the power button to turn on.
2. Set your desired cooking temperature according to the package directions for your cupcakes or muffins and allow grill to preheat for at least 5 minutes.
3. While the grill preheats, fill muffin cups about half-full with batter.

Note: Do not overload the cooking plate.

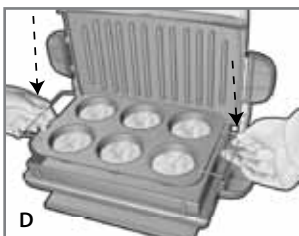

4. Using a pot holder, carefully open the preheated grill.
5. Using the insert handles, place the cupcake & muffin pan insert into the deep-dish bake pan (D).
6. Close the grill cover.

Important: Do not leave the appliance unattended during use.

7. Set the countdown timer to cook for your desired time according to the package instructions. A signal will sound once cooking is complete.

Tip: Your cupcake & muffin pan insert may cook your favorite cupcakes and muffins faster than conventional methods. Always set for the minimum suggested time and check a few minutes prior to avoid overcooking.

8. Using a pot holder, carefully open the grill cover.
9. When finished baking, use pot holders to remove cupcake & muffin pan insert to a wire rack to cool about 20 minutes.

CUSTOMER CARE LINE:

USA/Canada 1-800-231-9786
Accessories/Parts (USA/Canada)
Accesorios/Partes (EE.UU./Canadá)
1-800-738-0245

For online customer service and to register your product, go to www.prodprotect.com/applica

3-YEAR LIMITED WARRANTY

Find healthy recipes at www.georgeforemancooking.com

10. Turn pan insert upside down once cooled to remove cupcakes or muffins.

11. Press the power button and unplug to turn the grill off.

Care and Cleaning

CLEANING THE CUPCAKE & MUFFIN PAN INSERT

1. Before cleaning, unplug grill from wall outlet and allow to cool.

Caution: Do not remove the plates while the appliance is hot. Always allow them to cool to room temperature before removing or cleaning.

2. To remove the deep-dish bake pan and the top plate, pull out on the release handles on both sides and remove from the grill.
3. The cupcake & muffin pan insert, deep-dish bake pan and top plate can be washed in the dishwasher or by hand with hot, soapy water.

Note: Dishwasher detergent may cause oxidation on uncoated side of cooking plates. This is not harmful but may change the appearance of your plates.

4. Always dry thoroughly before reattaching.
5. To remove stubborn buildup, use a nylon or nonmetallic scrubbing pad to clean.

Important: Do not use metallic scrubbing pads, steel wool or any abrasive cleaners to clean any part of your grill; use only nylon or nonmetallic scrubbing pads.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Three-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

For how long?

- Three years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Check our on-line service site at www.prodprotect.com/applica, or call our toll-free number, 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.


PARA COMENZAR

- Retire todo el material de empaque y cualquier etiqueta que tenga el producto; retire y guarde el material de lectura.
- Para información adicional, ir a www.georgeforemancooking.com.
- Lave el molde para dulces y panecillos con agua caliente jabonada y séquelo bien.


Nota: Aunque el molde es lavable en la máquina lavaplatos, le recomendamos fregarlo a mano para que conserven su apariencia. Al lavarlos en la máquina lavaplatos se le forma una capa turbia al metal que no afecta el rendimiento del electrodoméstico.

COLOCACIÓN DE LAS PLACAS


Importante: Este aparato debe utilizarse siempre con 2 placas firmemente aseguradas. Al usar el molde para panecillos y dulces, adjunte la placa superior rayada o la placa para Panini de la parrilla, más la bandeja para hornear.

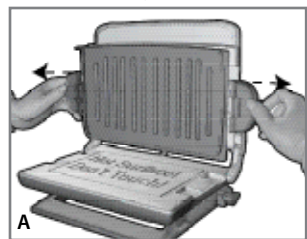

1. Para colocar la placa superior de la parrilla, hale ambas asas hacia afuera, coloque la placa plana contra el marco interior y suelte las asas. (A).

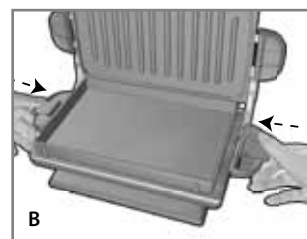

2. Repita lo mismo con la placa para hornear para la placa inferior de la parrilla (B). Una vez que precaliente la parrilla y llene el molde, colóquelo dentro de la placa para hornear (ver las instrucciones debajo).

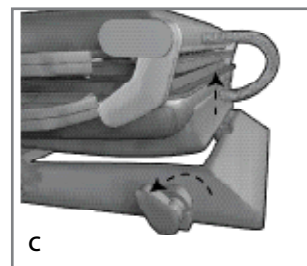

3. Mueva la inclinación ajustable en la parte de atrás de la parrilla de forma que ésta descansa en posición plana (C).


Importante: Cuando use la placa para hornear, asegúrese siempre de que la parrilla esté completamente plana.

Nota: Cuando cocine en la posición plana, no es necesario colocar la bandeja de goteo al frente de la parrilla.

USO DEL MOLDE PARA DULCES Y PANECILLOS

1. Enchufe la parrilla y presione el botón de funcionamiento para encenderla.
2. Configure la temperatura de cocción según desee, de acuerdo a las direcciones del paquete de dulces o panecillos y permita que la parrilla se precaliente al menos 5 minutos.
3. Mientras la parrilla se precalienta, llene los moldes con masa hasta la mitad.

Nota: No sobrecargue la placa de cocción.

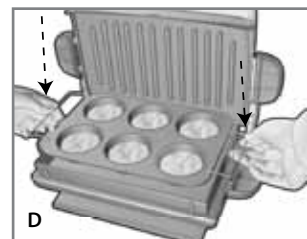

4. Usando un agarrador, abra con cuidado la parrilla precalentada.
5. Usando las asas del molde para dulces y panecillos, colóquelo dentro de la placa para hornear (D).
6. Cierre la tapa.

Importante: No deje el electrodoméstico sin supervisión durante su uso.

7. Ajuste el reloj automático para el tiempo que desee cocinar de acuerdo a las instrucciones en el paquete. Una señal auditiva se escuchará una vez que la cocción termine.

Consejo: Su molde para dulces y panecillos logra terminarlos más rápido que los métodos convencionales. Siempre use el mínimo tiempo de cocción sugerido y revíselos unos minutos antes para evitar cocinarlos de más.

8. Usando un agarrador, abra con cuidado la tapa.
9. Cuando termine de hornear, use agarraderas para retirar el molde para dulces y panecillos a una rejilla donde se enfríen por alrededor de 20 minutos.
10. Vire el molde al revés una vez que se enfríe para retirar los dulces o panecillos.
11. Presione el botón de funcionamiento y desenchufe la parrilla para apagar.

Cuidado y limpieza

LIMPIEZA DEL MOLDE PARA DULCES Y PANECILLOS

1. Antes de limpiar, desenchufe la parrilla del tomacorriente de la pared y deje que se enfríe.

Precaución: No retire las placas mientras el electrodoméstico esté caliente. Siempre permita que se enfríen hasta alcanzar la temperatura ambiente antes de retirarlas o limpiarlas.

2. Para retirar la placa para hornear y la placa superior de la parrilla, hale las asas a cada lado hacia afuera y retírelas de la parrilla.
3. El molde y las placas se pueden lavar en la máquina lavaplatos o a mano con agua caliente jabonada.

Nota: El detergente de fregar platos puede oxidar la parte de las placas sin capa protectora. Esto no es dañino.

4. Siempre séquelas completamente antes de colocarlas en la parrilla nuevamente.
5. Para eliminar las acumulaciones difíciles, use una esponjilla de nailon o no metálica para limpiar las placas de la parrilla.

Importante: No use esponjillas metálicas, lana de acero ni limpiadores abrasivos para limpiar ninguna parte de su plancha; use únicamente esponjillas de nailon o no metálicas.

¿NECESITA AYUDA?

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame gratis al número "800" que aparece en la cubierta de este manual. No devuelva el producto al establecimiento de compra. No envíe el producto por correo al fabricante ni lo lleve a un centro de servicio. También puede consultar el sitio web que aparece en la cubierta de este manual.

Tres años de garantía limitada

(Aplica solamente en Estados Unidos o Canadá)

¿Qué cubre la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra. Applica no se responsabiliza por ningún costo que exceda el valor de compra del producto.

¿Por cuánto tiempo es válida la garantía?

- Por tres años a partir de la fecha original de compra mientras que tenga una prueba de la compra.

¿Qué clase de asistencia recibe el consumidor?

- El consumidor recibe un producto de reemplazo nuevo o restaurado de fábrica, parecido al original.

¿Cómo se obtiene el servicio necesario?

- Conserve el recibo original como comprobante de la fecha de compra.
- Se puede visitar el sitio web de asistencia al consumidor www.prodprotect.com/applica, o se puede llamar gratis al número 1-800-231-9786, para obtener información relacionada al servicio de garantía.
- Si necesita piezas o accesorios, por favor llame gratis al 1-800-738-0245.

¿Qué aspectos no cubre esta garantía?

- Los daños al producto ocasionados por el uso comercial
- Los daños ocasionados por el mal uso, abuso o negligencia
- Los productos que han sido alterados de cualquier manera
- Los productos utilizados o reparados fuera del país original de compra
- Las piezas de vidrio y demás accesorios empacados con el aparato
- Los gastos de tramitación y embarque relacionados con el reemplazo del producto
- Los daños y perjuicios indirectos o incidentales (sin embargo, por favor observe que algunos estados no permiten la exclusión ni la limitación de los daños y perjuicios indirectos ni incidentales, de manera que esta restricción podría no aplicar a usted).

¿Qué relación tiene la ley estatal con esta garantía?

- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.



© 2010 Applica Consumer Products, Inc.

Made in People's Republic of China
Printed in People's Republic of China

Fabricado en la República Popular de China
Impreso en la República Popular de China