

Size: 19.685" x 17.5"

Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down, and coming back on unless unplugged.

Important: Do not try to hold the switch in the ON position once the water has boiled.

5. Unplug the kettle when not in use.

6. Pick up the kettle by the cool-touch handle.

Warning: The kettle when filled with boiling water is hot on the outside. Use only the cool-touch handle to pick it up.

Note: When taking the kettle to the table, carry it with caution to avoid spillage. Place it on a trivet or hot pad to protect the table surface or tablecloth.

1. Fill with desired amount of cold tap water (from 3 to 7½ cups) through the pour spout.

Important: Do not overfill the kettle. The kettle should have at least 3 cups of cold tap water in it before using it. Make sure the boiling water from spilling onto the counter.

4. ON/OFF switch with power indicator light

5. Slip-resistant base

Note: † indicates consumer replaceable/removable parts


1. Pour spout

†2. Removable scale filter (Part # KE2020-01)

3. Cool-touch handle

4. ON/OFF switch with power indicator light

5. Slip-resistant base

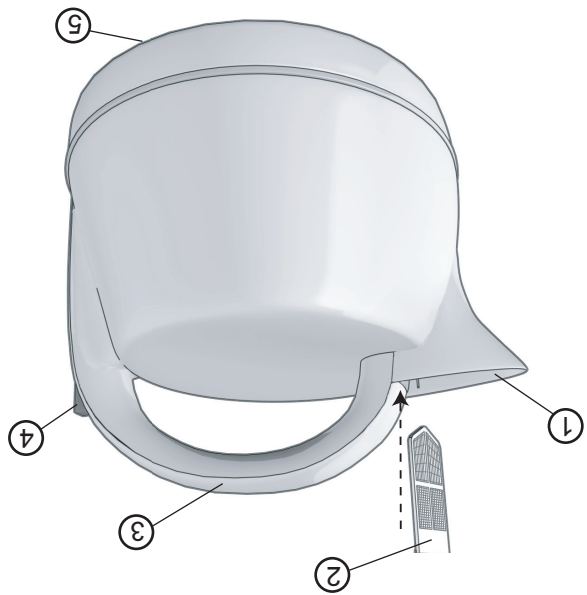

Product may vary slightly from what is illustrated.

1. Remove all packing material and any stickers from the product.
2. Please go to www.prodprotect.com/applica to register your warranty.
3. Before first use, wash the interior of the kettle with hot soapy water.
4. Rinse well until water comes out clear.
5. Wash the removable filter with warm soapy water and rinse well.
6. Place the kettle on a level surface: allow enough space for the steam to escape without damaging the counters, cabinets or walls.
7. Fill the kettle with 2 cups of cold tap water and 1 cup of vinegar. Bring to boil and discard.
8. Fill the kettle with at least 6 cups of cold tap water. Bring to boil and discard.

Repeat. Kettle is now ready for use.

- Note: The kettle only operates when the ON switch is in the ON position. The kettle will automatically shut off once the water has boiled and when there is no more water in the kettle.
- Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down and coming back on, unless unplugged.
- Tip: For best results, before using the kettle again unplug it and wait 5 to 10 minutes for the heating elements to cool down. Then refill the kettle with cold tap water and plug it back in for normal use.
- BOILING WATER
1. Fill with desired amount of cold tap water (from 3 to 7½ cups) through the pour spout.
 2. Removable scale filter (Part # KE2020-01)
 3. Cool-touch handle
 4. ON/OFF switch with power indicator light
 5. Slip-resistant base

Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down and coming back on, unless unplugged.

Tip: For best results, before using the kettle again unplug it and wait 5 to 10 minutes for the heating elements to cool down. Then refill the kettle with cold tap water and plug it back in for normal use.

BOILING WATER

1. Fill with desired amount of cold tap water (from 3 to 7½ cups) through the pour spout.
2. Removable scale filter (Part # KE2020-01)
3. Cool-touch handle
4. ON/OFF switch with power indicator light
5. Slip-resistant base

1. Remove all packing material and any stickers from the product.

2. Please go to www.prodprotect.com/applica to register your warranty.

3. Before first use, wash the interior of the kettle with hot soapy water.

4. Rinse well until water comes out clear.

5. Wash the removable filter with warm soapy water and rinse well.

6. Place the kettle on a level surface: allow enough space for the steam to escape without damaging the counters, cabinets or walls.

7. Fill the kettle with 2 cups of cold tap water and 1 cup of vinegar. Bring to boil and discard.

8. Fill the kettle with at least 6 cups of cold tap water. Bring to boil and discard.

Repeat. Kettle is now ready for use.

Note: The kettle only operates when the ON switch is in the ON position. The kettle will automatically shut off once the water has boiled and when there is no more water in the kettle.

Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down and coming back on, unless unplugged.

Tip: For best results, before using the kettle again unplug it and wait 5 to 10 minutes for the heating elements to cool down. Then refill the kettle with cold tap water and plug it back in for normal use.

BOILING WATER

1. Fill with desired amount of cold tap water (from 3 to 7½ cups) through the pour spout.
2. Removable scale filter (Part # KE2020-01)
3. Cool-touch handle
4. ON/OFF switch with power indicator light
5. Slip-resistant base

1. Remove all packing material and any stickers from the product.

2. Please go to www.prodprotect.com/applica to register your warranty.

3. Before first use, wash the interior of the kettle with hot soapy water.

4. Rinse well until water comes out clear.

5. Wash the removable filter with warm soapy water and rinse well.

6. Place the kettle on a level surface: allow enough space for the steam to escape without damaging the counters, cabinets or walls.

7. Fill the kettle with 2 cups of cold tap water and 1 cup of vinegar. Bring to boil and discard.

8. Fill the kettle with at least 6 cups of cold tap water. Bring to boil and discard.

Repeat. Kettle is now ready for use.

Note: The kettle only operates when the ON switch is in the ON position. The kettle will automatically shut off once the water has boiled and when there is no more water in the kettle.

Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down and coming back on, unless unplugged.

Tip: For best results, before using the kettle again unplug it and wait 5 to 10 minutes for the heating elements to cool down. Then refill the kettle with cold tap water and plug it back in for normal use.

BOILING WATER

1. Fill with desired amount of cold tap water (from 3 to 7½ cups) through the pour spout.
2. Removable scale filter (Part # KE2020-01)
3. Cool-touch handle
4. ON/OFF switch with power indicator light
5. Slip-resistant base

1. Remove all packing material and any stickers from the product.

2. Please go to www.prodprotect.com/applica to register your warranty.

3. Before first use, wash the interior of the kettle with hot soapy water.

4. Rinse well until water comes out clear.

5. Wash the removable filter with warm soapy water and rinse well.

6. Place the kettle on a level surface: allow enough space for the steam to escape without damaging the counters, cabinets or walls.

7. Fill the kettle with 2 cups of cold tap water and 1 cup of vinegar. Bring to boil and discard.

8. Fill the kettle with at least 6 cups of cold tap water. Bring to boil and discard.

Repeat. Kettle is now ready for use.

Note: The kettle only operates when the ON switch is in the ON position. The kettle will automatically shut off once the water has boiled and when there is no more water in the kettle.

Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down and coming back on, unless unplugged.

Tip: For best results, before using the kettle again unplug it and wait 5 to 10 minutes for the heating elements to cool down. Then refill the kettle with cold tap water and plug it back in for normal use.

BOILING WATER

1. Fill with desired amount of cold tap water (from 3 to 7½ cups) through the pour spout.
2. Removable scale filter (Part # KE2020-01)
3. Cool-touch handle
4. ON/OFF switch with power indicator light
5. Slip-resistant base

BLACK & DECKER is a trademark of The Black & Decker Corporation, Towson, Maryland, USA

NEED HELP?
For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to the manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of the product.

For how long?

- Two years after the date of original purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Check our on-line service site at www.prodprotect.com/applica, or call our toll-free number, 1-800-231-9786, for general warranty service.

• If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

Made in People's Republic of China
Printed in People's Republic of China

Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down, and coming back on unless unplugged.

Important: Do not try to hold the switch in the ON position once the water has boiled.

5. Unplug the kettle when not in use.

6. Pick up the kettle by the cool-touch handle.

Warning: The kettle when filled with boiling water is hot on the outside. Use only the cool-touch handle to pick it up.

Note: When taking the kettle to the table, carry it with caution to avoid spillage. Place it on a trivet or hot pad to protect the table surface or tablecloth.

1. Remove all packing material and any stickers from the product.

2. Please go to www.prodprotect.com/applica to register your warranty.

3. Before first use, wash the interior of the kettle with hot soapy water.

4. Rinse well until water comes out clear.

5. Wash the removable filter with warm soapy water and rinse well.

6. Place the kettle on a level surface: allow enough space for the steam to escape without damaging the counters, cabinets or walls.

7. Fill the kettle with 2 cups of cold tap water and 1 cup of vinegar. Bring to boil and discard.

8. Fill the kettle with at least 6 cups of cold tap water. Bring to boil and discard.

Repeat. Kettle is now ready for use.

Note: The kettle only operates when the ON switch is in the ON position. The kettle will automatically shut off once the water has boiled and when there is no more water in the kettle.

Warning: This product features boil/dry protection. If the kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level, it will automatically repeat a cycle of turning off, cooling down and coming back on, unless unplugged.

Tip: For best results, before using the kettle again unplug it and wait 5 to 10 minutes for the heating elements to cool down. Then refill the kettle with cold tap water and plug it back in for normal use.

BOILING WATER

1. Fill with desired amount of cold tap water (from 3 to 7½ cups) through the pour spout.
2. Removable scale filter (Part # KE2020-01)
3. Cool-touch handle
4. ON/OFF switch with power indicator light
5. Slip-resistant base

Warning: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

c) If a long detachable power-supply cord or extension cord is used, 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

Do not place on or near a hot gas or electric burner, or in a heated oven.

To disconnect, turn any control to OFF (0), then remove plug from wall outlet.

Do not use appliance for other than intended use.

Keep lid on kettle when in use.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

Warning: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

c) If a long detachable power-supply cord or extension cord is used, 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

Do not place on or near a hot gas or electric burner, or in a heated oven.

To disconnect, turn any control to OFF (0), then remove plug from wall outlet.

Do not use appliance for other than intended use.

Keep lid on kettle when in use.

SAVE THESE INSTRUCTIONS.

This product is for household use only.



AUTO-OFF 2-LITER KETTLE BOUILLLOIRE DE 2 LITRES À ARRÊT AUTOMATIQUE

Customer Care Line:
USA/Canada
1-800-231-9786

Accessories/Parts (USA / Canada)
Accessoires/Pièces (É.U. / Canada)
1-800-738-0245

Service à la clientèle:
Canada 1-800-231-9786

Accessoires/Pièces (Canada)
1-800-738-0245

Pour accéder au service à la clientèle en ligne ou pour inscrire votre produit en ligne, rendez-vous à www.prodprotect.com/applica

For online customer service and to register your product, go to www.prodprotect.com/applica



MODEL/MODÈLE
○ KE2020C

Size: 19.685" x 17.5"

Veillez lire et conserver ce guide d’entretien et d’utilisation

IMPORTANTES CONSIGNES DE SÉCURITÉ

Lorsqu’on utilise des appareils électriques, il faut toujours respecter certaines règles de sécurité fondamentales, notamment les suivantes :

Lire toutes les directives.

Ne pas toucher aux surfaces chaudes; utiliser les poignées et les boutons.

Afin d’éviter les risques d’incendie, de choc électrique ou de blessures, **ne pas immerger le cordon, la fiche ou la base de l’appareil dans l’eau ou tout autre liquide**.

Exercer une étroite surveillance lorsque l’appareil est utilisé par un enfant ou près d’un enfant.

Débrancher l’appareil lorsqu’il ne sert pas ou avant de le nettoyer. Laisser l’appareil refroidir avant d’y placer ou d’en retirer des composantes, et de le nettoyer.

Ne pas utiliser un appareil dont la fiche ou le cordon est abîmé, qui fonctionne mal ou qui a été endommagé de quelque façon que ce soit. Pour un examen, une réparation ou un réglage, rapporter l’appareil à un centre de service autorisé. Ou composer le numéro sans frais inscrit sur la page couverture du présent guide.

L’utilisation d’accessoires non recommandés par le fabricant de l’appareil présente des risques d’incendie, de choc électrique ou de blessures.

Ne pas utiliser l’appareil à l’extérieur.

Ne pas laisser pendre le cordon sur le bord d’une table ou d’un comptoir ni le laisser entrer en contact avec une surface chaude.

Ne pas placer l’appareil sur le dessus ou près d’un élément chauffant électrique ou à gaz ni dans un four chaud.

Pour débrancher l’appareil, placer toutes les commandes à la position « O » (arrêt) et retirer la fiche de la prise.

Garder le couvercle sur la bouilloire lorsque l’appareil est utilisé.

Utiliser l’appareil uniquement aux fins pour lesquelles il a été conçu.

CONSERVER CES INSTRUCTIONS.

L'appareil est conçu pour une utilisation domestique seulement.

FICHE MISE À LA TERRE

Par mesure de sécurité, le produit comporte une fiche mise à la terre qui n’entre que dans une prise à trois trous. Il ne faut pas neutraliser ce dispositif de sécurité. La mauvaise connexion du conducteur de terre présente des risques de secousses électriques. Communiquer avec un électricien certifié lorsqu’on se demande si la prise est bien mise à la terre.

CORDON ÉLECTRIQUE

a) Le cordon d’alimentation de l’appareil est court afin de minimiser les risques d’enchevêtrement ou de trébuchement.


b) Il existe des cordons d’alimentation ou de rallonge plus longs et il faut s’en servir avec prudence.

c) Lorsqu’on utilise un cordon de rallonge, il faut s’assurer que :

- la tension nominale du cordon d’alimentation ou de rallonge soit au moins égale à celle de l’appareil, et que;
- le cordon soit placé de sorte qu’il ne soit pas étalé sur le comptoir ou la table d’où des enfants pourraient le tirer, ni placé de manière à provoquer un trébuchement par inadvertance.
- lorsque l’appareil est de type mis à la terre, il faut utiliser un cordon de rallonge mis à la terre à trois broches.

Note: Lorsque le cordon d’alimentation est endommagé, il faut le faire remplacer par du personnel qualifié ou, en Amérique latine, par le personnel d’un centre de sevice autorisé.

Le produit peut différer légèrement de celui qui est illustré.

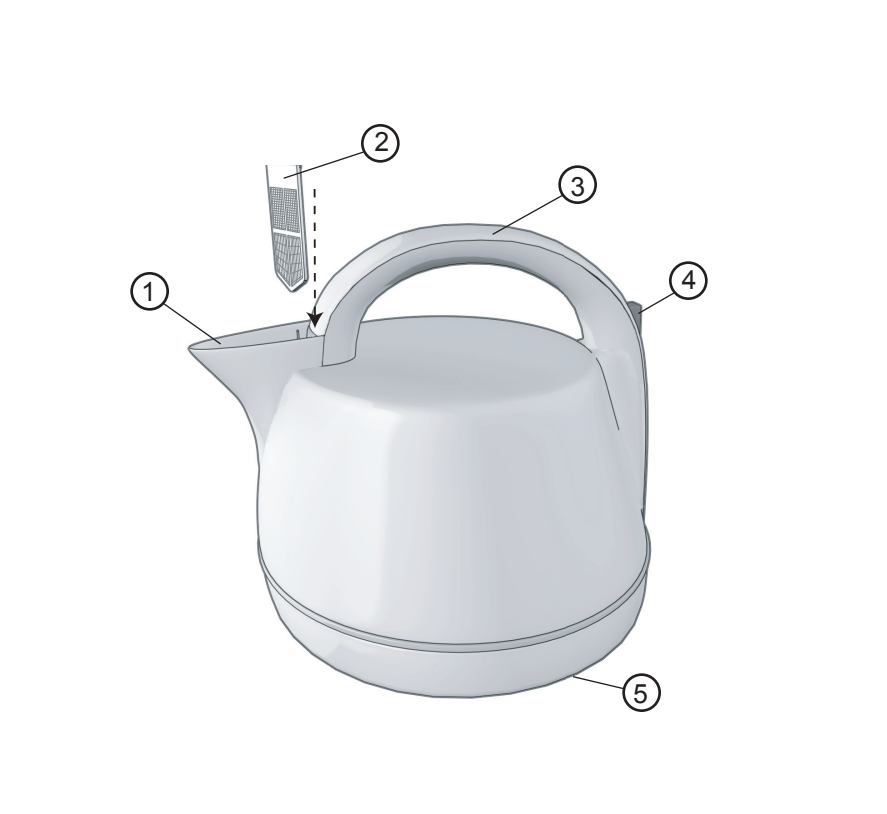

- Bec verseur
- † Filtre anti-tartre amovible (pièce no KE2020-01)
- Poignée fraîche au toucher
- Interrupteur MARCHE/ARRÊt (I/O) avec témoin de fonctionnement
- Base anti-dérapante

Remarque : † indique que la pièce est remplaçable par l'utilisateur/amovible



BLACK&DECKER Marque de commerce déposée de la société The Black & Decker Corporation, Towson, Maryland, É.-U.

BESOIN D'AIDE?
Pour communiquer avec les services d'entretien ou de réparation, ou pour adresser toute question relative au produit, composer le numéro sans frais approprié indiqué sur la page couverture. Ne pas retourner le produit où il a été acheté. Ne pas poster le produit au fabricant ni le porter dans un centre de service. On peut également consulter le site web indiqué sur la page couverture.

Garantie limitée de deux ans
(Valable seulement aux États-Unis et au Canada)

Quelle est la couverture?

• Tout défaut de main-d'oeuvre ou de matériau; toutefois, la responsabilité de la société Applca se limite au prix d'achat du produit.

Quelle est la durée?

• Deux ans après l'achat original.

Quelle aide offrons nous?

• Remplacement par un produit raisonnablement semblable nouveau ou réusiné.

Comment se prévaut-on du service?

• Conserver son reçu de caisse comme preuve de la date d'achat.
• Visiter notre site web au www.prodprotect.com/applica, ou composer sans frais le 1 800 231-9786, pour obtenir des renseignements généraux relatifs à la garantie.

• On peut également communiquer avec le service des pièces et des accessoires au 1 800 738-0245.

Qu'est-ce que la garantie ne couvre pas?

• Des dommages dus à une utilisation commerciale.
• Des dommages causés par une mauvaise utilisation ou de la négligence.
• Des produits qui ont été modifiés.
• Des produits utilisés ou entretenus hors du pays où ils ont été achetés.
• Des pièces en verre et tout autre accessoire emballés avec le produit.
• Les frais de transport et de manutention reliés au remplacement du produit.
• Des dommages indirects (il faut toutefois prendre note que certains états ne permettent pas l'exclusion ni la limitation des dommages indirects).
Quelles lois régissent la garantie?
• Les modalités de la présente garantie donnent des droits légaux spécifiques. L'utilisateur peut également se prévaloir d'autres droits selon l'état ou la province qu'il habite.

NOTES

5. Débrancher la bouilloire lorsqu'elle n'est pas utilisée.

6. Prendre la bouilloire par la poignée fraîche au toucher.

Avertissement : La bouilloire est chaude à l'extérieur quand elle est pleine d'eau bouillante. Toujours la prendre par la poignée fraîche au toucher.

Remarque : Pour transporter la bouilloire jusqu'à la table, procéder avec soin pour éviter de renverser de l'eau. Placer l'appareil sur un dessous-de-plat pour protéger la surface de la table ou la nappe.

7. Tenir la bouilloire de niveau pour verser de l'eau, surtout lorsqu'elle est remplie au maximum. **Ne pas verser trop rapidement.**

8. Pour faire bouillir l'eau de nouveau, attendre plusieurs minutes pour laisser la bouilloire refroidir. Jeter l'eau inutilisée et suivre les étapes 1 à 7.

Important : Laisser la bouilloire refroidir avant de la réutiliser.

Entretien et nettoyage

L'utilisateur ne peut effectuer lui même l'entretien d'aucune pièce de cet appareil. Confier l'entretien à un technicien qualifié.

1. Avant de nettoyer la bouilloire, s'assurer qu'elle est débranchée et complètement refroidie. Vider l'eau qui reste dans la bouilloire.

2. Laver l'intérieur de la bouilloire à l'eau chaude savonneuse.

3. Bien rincer jusqu'à ce que l'eau de rinçage soit claire.

Important : Ne jamais plonger la bouilloire dans l'eau ou dans un autre liquide, ni la mettre au lave-vaisselle.

4. Laver le filtre anti-tartre amovible à l'eau tiède savonneuse et le rincer à fond.
5. Essuyer l'extérieur de la bouilloire et la base à l'aide d'un linge ou d'une éponge humide et sécher. L'élément chauffant dissimulé au fond de la bouilloire peut se décolorer, ce qui ne diminuera pas son rendement. Ne pas utiliser de savons ou de produits abrasifs ni de tampons à récurer.

6. Au fil du temps, la bouilloire peut chauffer l'eau mais ne pas la faire bouillir, selon l'utilisation et la dureté de l'eau dans la région. Le cas échéant, il est temps de détartre la bouilloire. Utiliser un détartrant et suivre les instructions du fabricant.

PROTECTION ANTI-TARTRE

Du tartre se forme lorsque l'eau est chauffée. Bien que ce tartre soit sans danger, il peut être désagréable. L'élément chauffant dissimulé dans la bouilloire est conçu pour aider à réduire l'accumulation de tartre.

La bouilloire est dotée d'un filtre anti-tartre au fond du bec verseur pour éviter que des particules ne soient versées dans les boissons.

Utilisation

Cet appareil est conçu pour un usage domestique seulement.

POUR COMMENCER

- Retirer tous les matériaux d'emballage et les étiquettes.
- Aller à l'adresse www.prodprotect.com/applica pour enregistrer votre garantie.
- Avant la première utilisation, laver l'intérieur de la bouilloire avec de l'eau chaude savonneuse.
- Bien rincer jusqu'à ce que l'eau de rinçage soit claire.
- Important : Ne jamais plonger la bouilloire dans l'eau ou dans un autre liquide, ni la mettre au lave-vaisselle.**
- Laver le filtre amovible avec de l'eau tiède savonneuse. Bien rincer.
- Placer la bouilloire sur une surface de niveau; laisser suffisamment d'espace pour permettre à la vapeur de s'échapper sans endommager les comptoirs, les armoires et les murs.
- Remplir la bouilloire avec 500 ml (2 tasses) d'eau froide du robinet et 250 ml (1 tasse) de vinaigre. Amener à ébullition, puis vider la bouilloire.
- Remplir la bouilloire avec au moins 1,42 l (6 tasses) d'eau froide du robinet. Amener l'eau à ébullition, puis vider la bouilloire. La bouilloire est maintenant prête à utiliser.

Remarque : La bouilloire ne fonctionne que si l'interrupteur MARCHE/ARRÊT (I/O) est en position de marche (I). La bouilloire s'éteint automatiquement une fois que l'eau a bouilli ou si elle ne contient plus d'eau.

Avertissement : Cet appareil est doté d'une fonction de protection contre le fonctionnement à vide. Si la bouilloire est branchée accidentellement lorsqu'elle est vide ou que l'évaporation a fait descendre le niveau d'eau très bas, elle recommencera automatiquement un cycle arrêt-refroidissement-marche jusqu'à ce qu'elle soit débranchée.

Conseil : Pour obtenir des résultats optimaux, avant de réutiliser la bouilloire, la débrancher et attendre de cinq à dix minutes pour permettre aux éléments chauffants de refroidir. Ensuite, remplir la bouilloire d'eau froide du robinet et la rebrancher pour l'utiliser normalement.

AMENER L'EAU À ÉBULLITION

1. Remplir la bouilloire avec la quantité désirée d'eau froide du robinet (de 750 ml à 1,77 l (de 3 à 7 ½ tasses)) au moyen du bec verseur.

Important : Ne pas trop remplir la bouilloire. Verser au moins 750 ml (3 tasses) d'eau froide du robinet dans la bouilloire avant de l'utiliser. S'assurer que le niveau d'eau est inférieur au bec verseur. Cela évitera que de l'eau bouillante se renverse sur le comptoir.

Important : Ne pas faire fonctionner la bouilloire si elle ne contient pas d'eau.

- Brancher la bouilloire dans une prise de courant standard. Le témoin de fonctionnement s'allume.
- Appuyer sur l'interrupteur MARCHE/ARRÊT (I/O) pour mettre la bouilloire en position de marche (I). L'eau commencera à chauffer.
- Lorsque l'eau bout, la bouilloire et le témoin de fonctionnement s'éteignent automatiquement.

Avertissement : Cet appareil est doté d'une fonction de protection contre le fonctionnement à vide. Si la bouilloire est branchée accidentellement lorsqu'elle est vide ou que l'évaporation a fait descendre le niveau d'eau très bas, elle recommencera automatiquement un cycle arrêt-refroidissement-marche jusqu'à ce qu'elle soit débranchée.

Important : Ne pas essayer de maintenir l'interrupteur en position de marche une fois que l'eau bout.